

FAQ - User agent

Valid for:	N610	N670	N870	N870E	Embedded Integrator	Virtual Integrator
------------	------	------	------	-------	---------------------	--------------------

Introduction

See below for a user-agent example.

This is seen in:

1. SIP messages
2. HTTP(s) messages

Device	User-Agent:
Virtual Integrator	Gigaset N870 VI PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX
N870	Gigaset N870 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX
N870E	Gigaset N870E IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX
N670	Gigaset N670 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX
N610	Gigaset N610 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX

From software 2.26 we have added capacity information to the HTTP(s) user agent only.

Platforms that do auto-provisioning can use this information to block the administrator to add more handsets than supported by the system.

Device			User-Agent:
N870	Single Cell / Small		User-Agent: Gigaset N870 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=50
	Medium		User-Agent: Gigaset N870 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=250
	Embedded Integrator	0 DM	User-Agent: Gigaset N870 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=0
		1 DM	User-Agent: Gigaset N870 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=250
		2 DM	User-Agent: Gigaset N870 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=500
	
N870 E	Same as N870 (Above) but with "E"		User-Agent: Gigaset N870E IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=250
N670	Single Cell		User-Agent: Gigaset N670 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=20
N610	Single Cell		User-Agent: Gigaset N610 IP PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=8
N870	Virtual Integrator	0 DM	User-Agent: Gigaset N870 VI PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=0
		1 DM	User-Agent: Gigaset N870 VI PRO/83.V2.43.0+build.5f0a106;7C2F80XXXXXX;Handset=250
	

Remove Handset capacity information

Via auto-provisioning, it is possible to disable the capacity information in the HTTP(s) user-agent.

Auto-provisioning example	User agent
<div>Disable Handset capacity information</div> <pre><?xml version="1.0" encoding="UTF-8"?> <provisioning version="1.1" productID="e2"> <nvm> <!-- 0 = Do not add capacity information, 1 = Add capacity information --> <param name="Provisioning.global.CapacityInformation" value="0" /> </nvm> </provisioning></pre>	User-Agent: Gigaset N610 IP PRO/83.V2.43.0+build.5f0a106; 7C2F80XXXXXX
<div>Enable Handset capacity information</div> <pre><?xml version="1.0" encoding="UTF-8"?> <provisioning version="1.1" productID="e2"> <nvm> <!-- 0 = Do not add capacity information, 1 = Add capacity information --> <param name="Provisioning.global.CapacityInformation" value="1" /> </nvm> </provisioning></pre>	User-Agent: Gigaset N610 IP PRO/83.V2.43.0+build.5f0a106; 7C2F80XXXXXX;Handset=8

Remove MAC address and Handset capacity information

Via auto-provisioning, it is possible to remove the MAC address and the Handset capacity information in the SIP / HTTP(s) user-agent.

Auto-provisioning example	User agent
<div>Disable capacity information</div> <pre><?xml version="1.0" encoding="UTF-8"?> <provisioning version="1.1" productID="e2"> <nvm> <param name="SystemSettings.global.UseCommonUA" value="1" /> <param name="Provisioning.global.MACAddressInformation" value=" 0" /> <param name="Provisioning.global.CapacityInformation" value=" 0" /> </nvm> </provisioning></pre>	User-Agent: Gigaset N610 IP PRO/83.V2.43.0+build. 5f0a106