

Gigaset pro

SL800 H PRO

N870 IP PRO DECT Multicell System

Up-to-date information on your product: → wiki.gigasetpro.com

Contents

Overview	3
Handset	3
Base	4
Illustration in the user guide	5
Safety precautions	6
Getting started	8
Contents of the package	8
Handset	8
Using the telephone	12
Getting to know your telephone	12
Making calls	16
Call lists	24
Message lists	25
Directories	26
Answering machine	32
Additional functions	33
Sound profiles	33
Calendar	34
Timer	36
Alarm clock	37
Protection against unwanted calls	38
Resource Directory	40
Bluetooth	41
Additional functions using the PC interface	43
Adjusting the telephone settings	45
Appendix	53
Customer Service & Help	53
Manufacturer's advice	53
Technical data	55
Display icons	57
Menu overview	59
Open Source Software	61
Index	62



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

Handset



- 1 **Display**
- 2 **Status bar** (→ p. 57)
Icons display current settings and operating status of the telephone
- 3 **Display keys** (→ p. 13)
Various functions, depending on the operating situation
- 4 **Message key** (→ p. 25)
Access to the call and message lists;
Flashes: new message or new call

- 5 **End call key / On/off key**
End call; cancel function;
Go back one menu level
Return to idle status
▶ Press **briefly**
▶ Press and **hold**
▶ Press and **hold**
- Switch the handset on/off
(in idle status)
- 6 **Hash key / Lock key**
Lock/unlock the keypad
(in idle status)
Toggle between upper/
lower case and digits
(when inputting text)
Insert a dialling pause
▶ Press and **hold**
▶ Press **briefly**
▶ Press and **hold**
- 7 **Microphone**
- 8 **Recall key**
Consultation call (flash)
▶ Press and **hold**
- 9 **USB connection socket**
For data exchange between the handset and PC
- 10 **Star key**
Open special characters table
(when inputting text) ▶ Press **briefly**
Switch from pulse dialling to
tone dialling (for an existing
connection) ▶ Press **briefly**
- 11 **Headset connection**
(3.5 mm jack)
- 12 **Key 1**
Select network mailbox
▶ Press and **hold**
- 13 **Talk key / Handsfree key**
Accept call; dial number displayed; switch
between receiver and handsfree mode
Open the redial list ▶ Press **briefly**
Start dialling ▶ Press and **hold**
- 14 **Profile key**
Switch between acoustic
profiles (when phone is idle) ▶ Press **briefly**
Turn on/off the microphone
(during a call) ▶ Press **briefly**
Set the microphone sensitivity
(during a call) ▶ Press and **hold**
- 15 **Control key / Menu key** (→ p. 12)
Open a menu; navigate in menus and entry fields;
access functions (depending on the situation)

Base

Your handset is registered with a N870 IP PRO Multicell System, that can comprise many base stations. When you move around with your handset within range of the multi-cell system, the handset automatically connects to the base station having the best connection (roaming). You can also move around freely during a call without the connection being interrupted (handover).

Information on starting and administration of base stations, and on registering a handset with a multi-cell system:

➔ User guide "N870 IP PRO - Installation, configuration and operation"

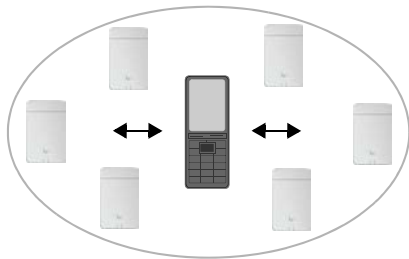


Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

Keys

	or	Talk key		or	Handsfree key
		End call key		to	Number / letter keys
	/	Control key rim / centre			Message key
		Recall key			Star key
		Hash key			Profile key
OK, Back, Select, Change, Save, ...			Display keys		

Procedures

Example: Switching Auto answer on/off

▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** = activated)

Symbols	Meaning
▶	When in idle status press the centre of the control key. The main menu opens.
▶	Navigate to the icon using the control key .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶ Telephony	Select the Telephony entry using the control key .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated /deactivated .

Safety precautions



Read the safety precautions and the user guide before use.

Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at gigasetpro.com in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").



If a USB adapter cable is included, only use a USB power supply (5Volt) with USB-A connection. The use of other voltage sources e.g. PC's with USB connection can cause damage.

If a plug-in power supply is included, please use this power supply.

Getting started

Contents of the package

- One handset
- One battery cover (rear cover for the handset)
- One battery
- One charging cradle incl. power adapter
- One belt clip
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

This device is only suitable for a maximum installation height of 2 m.


Handset

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the mains unit into your power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

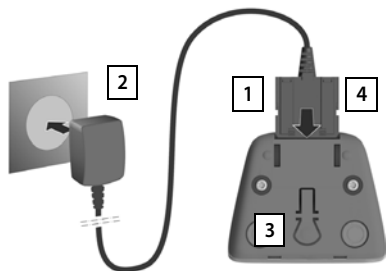


Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**


Inserting the battery



Only use a rechargeable battery, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

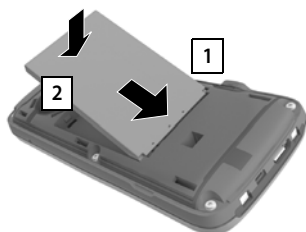


- ▶ Insert battery with the contact side pointing down **1**.
- ▶ Press the battery down until it clicks into place **2**.

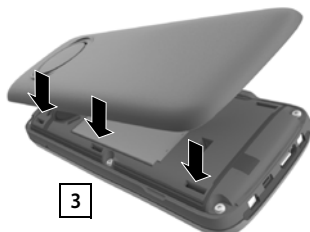


- ▶ Orientate the battery cover with the side tabs fitting into the slots on the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.

Re-opening the battery cover

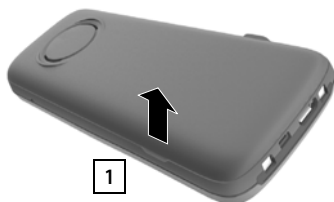


- ▶ Remove the belt clip (if attached).
- ▶ Place your fingernail in the notch underneath the battery cover and pull the battery cover up **1**.

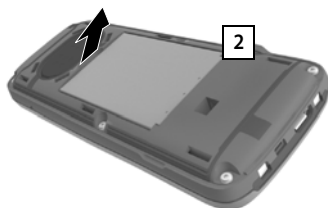


- ▶ To change the battery, place your fingernail in the recess in the housing and pull the battery up **2**.

Charge the battery

 - ▶ Charge the battery fully prior to first use in the charging cradle or using a standard USB mains adapter.



The battery is fully charged when the power icon  disappears from the display.




The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

As soon as power is applied to the handset, a Setup wizard starts.

Setting the display language

- ▶ Press the control key  until the language required is selected on the display, e.g. **English** ▶ press the display key **OK**

You can also change the display language later on in the **Settings** menu.

Deutsch

English

Français

Registering a handset

Register the handset with the Gigaset N870 IP PRO.



Registration must be initiated **both** on the Gigaset N870 IP PRO **and** on the handset. For this, the handset must be within range of the Gigaset N870 IP PRO.

On the Gigaset N870 IP PRO

- ▶ Start the registration process

Information for this:


→ User guide "N870 IP PRO - Installation, configuration and operation"

or: Contact the administrator of the DECT network.







On the handset

You require the 4-digit system PIN (registration code) generated on the Gigaset N870 IP PRO.

If the handset is not yet registered with a base:

- ▶ **Register** ... A search is performed for a base ready for registration ▶  Enter the system PIN ▶ **OK**

If the handset is already registered with a base:

- ▶  ▶ ... Use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **Register Handset** ▶ **OK** ... A search is performed for a base ready for registration ▶  Enter the system PIN ▶ **OK**

Once registration is complete, the handset returns to idle mode. Shown on the idle display is the name set on the Gigaset N870 IP PRO for the handset (user name or display name). If it is not, repeat the procedure.

Your phone is now ready for use.



The handset can be registered with up to four base stations. Changing the base:


- ▶ ▶ ... Use to select **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Select Base** ▶ **OK** ▶ **Select the base** ▶ **OK**

Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, use menu option **Basic Registration**. This guarantees correct displays on the handset, but can entail restrictions for some functions.

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.

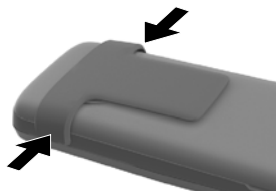


Connecting the headset

- ▶ Connect the headset with 3.5 mm jack to the left side of the handset **1**.

or

- ▶ Connect headset via Bluetooth (→ p. 41)

Setting the headset volume: → p. 47

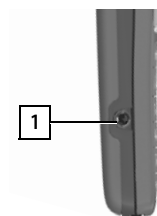

Connecting the USB data cable

For data exchange between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.





Connect the handset **directly** to the PC, **not** via a USB hub.



Using the telephone

 
Getting to know your telephone


Switch the handset on/off

- Switch on: ▶ When the handset is switched off, press and **hold** the End call key 
- Switch off: ▶ When the handset is in idle status, press and **hold** the End call key 

Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the following symbol appears 

PIN-protected keypad lock

Once you have assigned a PIN (not 0000) to the handset, you must enter this PIN to cancel the keypad lock.

Setting up a handset PIN: ➔ p. 51

Define emergency numbers that can be dialled even when the keypad lock is PIN-protected:
➔ p. 50





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

Control key

 


The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

When the phone is idle


Open the main menu



 Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)



Open the local directory:

 

Open the company directory



This function must be enabled on the Gigaset N870 IP PRO.

Set the voice volume for receiver / handsfree function
 Set the microphone sensitivity



Press and **hold**

In submenus, selection and entry fields

Confirm a function
 Navigate a line up/down
 Select an option, move the cursor to the left/right



During a call

Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)



Press **briefly**

Open the local directory:



Press and **hold**

Open company directory (if enabled)



Press **briefly**

Mute the microphone




Press and **hold**

Set the microphone sensitivity



Change the voice volume for receiver / handsfree function



The assignment of directories to the key  (press **briefly** or **for longer**) can be changed on the Gigaset N870 IP PRO.

Display keys

The display keys perform a range of functions depending on the operating situation.



Display key icons → p. 57




The display keys have a function preset by default in idle status.
 Change the assignment: → p. 51

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.

Menu overview → p. 59

Selecting/confirming functions

Confirm selection using **OK** or press the centre of the control key 



One menu level back using **Back**

Change to idle status  Press and **hold**


Switch function on/off using **Change** on  / off 

Activate/deactivate option using **Select** activated  / not activated 

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ **OK**


Example

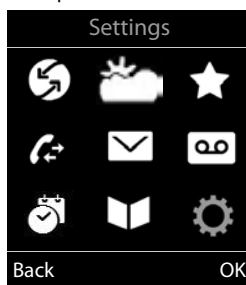

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ Press the End call key  **briefly**

Example

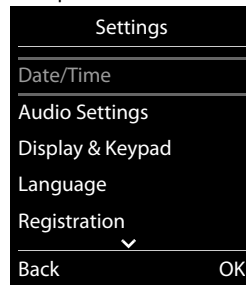

Returning to idle status



▶ Press and **hold** the End call key 



If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Entering text



Input position

- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

 
 
 
Example






Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  **C** Press **briefly**
- Delete **words** to the left of the cursor: ▶  **C** Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 

When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the language setting.

Making calls

The base stations of the Gigaset N870 IP PRO together form the DECT wireless network of the phone system. You can initiate or answer calls on a handset across the whole wireless network and change base station during a call (handover).



The handset is located in the wireless cell of at least one of the base stations registered with the phone system.

The handset is assigned a send and receive connection.

If the Gigaset N870 IP PRO is connected to a phone system that permits groups to be formed, phone connections can also be assigned to groups. In such cases, you also receive calls on your handset that are sent to your group number.


 
The Gigaset N870 IP PRO uses for telephony a VoIP phone system or the services of a VoIP provider. The availability of some phone functions depends on whether they are supported by the phone system / provider and whether they have been enabled. Contact the operator of your phone system for a description of the features.



Depending on the specifications of your phone system, you may need to dial an area code for calls outside the region covered by your VoIP phone system.

When you use the fixed line network for calls, you might need (depending on provider / phone system) to dial the area code even for local calls. This is not necessary when the area code is entered in the phone configuration.

Making calls

▶ ... Use  to enter the number ▶  Press **briefly** the Talk key

or

▶  Press and **hold** the Talk key ▶ ... Use  to enter the number

The connection is established over the SIP link assigned to the handset.



 
Cancel dialling: ▶  Press the End call key





If the display backlight is deactivated, you can reactivate it by pressing any key. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

Dialling from the redial list

 



 





The redial list contains the 20 numbers last dialled with the handset.

▶  **Briefly** press the Talk key ... The redial list is opened ▶  Select the entry ▶ Press the Talk key 

 If a name is displayed:






 
▶ **View** ... The number is displayed ▶ Use as required  to scroll through the numbers ▶ At the phone number required, press the Talk key 

Managing entries in the redial list

- ▶  Briefly press the Talk key ... The redial list is opened ▶  Select an entry ▶ **Options**
... Possible options:
 - Copy entry to directory:
 - ▶  **Copy to Directory** ▶ **OK**
 - Copy the number to the display:
 - ▶  **Display number** ▶ **OK** ▶ ... Use as required  to change or add ... Use  to save in the directory as a new entry
 - Delete the selected entry:
 - ▶  **Delete entry** ▶ **OK**
 - Delete all entries:
 - ▶  **Delete List** ▶ **OK**
 - Set automatic redial:
 - ▶  **Automatic Redial** ▶ **OK** ... The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes, "open listening" is activated.
The participant answers: ▶  Press the Talk key ... The function is ended
The subscriber does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.


Dialling from a call list

The call lists (→ p. 24) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶ ... Use  to select  **Call Lists** ▶ **OK** ▶ ... Use  to select the list ▶ **OK** ▶ ...
Use  to select an entry ▶  Press the Talk key









The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .


One touch call

A predefined number is dialled by pressing **any** key. This allows children, who are unable to enter a number, to call a certain number for example.

Enabling one touch call mode:


- ▶  ▶ ... Use  to select **Additional Features** ▶ OK ▶  **One-Touch Call** ▶ OK ▶ ... Use  to enable **Activation** ▶  **Call to** ▶ ... Use  to enter a number ▶ **Save** ... When the phone is in idle, the enabled one touch calling is displayed

Make a one touch call: ▶ Press any key ... the saved number is dialled

Cancel dialling: ▶ Press the End call  key.

End one touch call: ▶ Press and **hold** the  key

Example

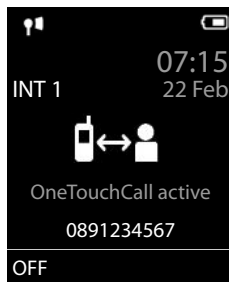




Dialling in extension systems (Delayed Extension Dialling)


When dialling into a large corporate network (PBX systems), it might be possible to dial an extension number directly after dialling the dial-up number.




The phone number can be saved in the directory as follows: Dial-in number, 2 stars, extension number (e.g. 1234567**128).


- ▶  Open the directory ▶ ... Use  to select an entry ▶ Press the Talk key  ... The phone dials the number in front of ** ... Possible options:

Dial a saved extension: ▶ **Dial Ext.** ... The phone dials the number after **

Dial a different extension: ▶ ... Use  to enter the extension number ... The phone dials the number entered

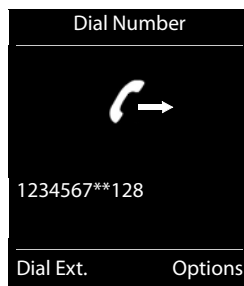

Enter a dial pause when dialling

 - ▶ Press and hold the hash key  ... A P is shown on the display

Initiating ringback

If the line of a called subscriber is busy, you can arrange for a ringback (if the phone system or provider supports the CCBS and CCNR services).

CCBS (Completion of Call to busy subscriber)

Ringback when busy

CCNR (Completion of Calls on No Reply)

Ringback when call is not answered

The service code for enabling/disabling CCBS and CCNR must be configured in the provider settings.

 
Enabling ringback:

- ▶ Enter the service code specified for the phone system / provider, e.g.

If you do not want a ringback, you can disable the function.

- ▶ Enter the service code specified for the phone system / provider, e.g.

Incoming calls

An incoming call for the connection assigned to your handset is indicated by ringing, by a display on the screen and by the flashing Talk / Handsfree key .

Accept the call: ▶ Press the Talk key  or ▶ **Accept**

If **Auto Answer** is enabled:

- ▶ Remove the handset from the charging cradle

Disable ringtone: ▶ **Silence** . . . You can accept the call as long as it is displayed on the screen

Reject the call: ▶ Press the End call key 

Information about the caller

If it is sent, the number of the caller is displayed. If the caller's number is saved in a directory, the name is displayed.

Using the Call Manager of the phone system

If a Call Manager is used on the phone system, it is possible to define that incoming calls are accepted directly by headset or handsfree function. This must be configured for the handset on the Gigaset N870 IP PRO.

Group accept

Accept incoming calls for a group of subscribers.

Group accept must be enabled, and the phone number or SIP URI of the group must be entered. This must be configured for the handset on the Gigaset N870 IP PRO.


Accepting/rejecting a waiting call during a call

During an external call, the call waiting tone signals that another party is trying to call you. The number or name of the caller is displayed if the phone number is sent.

Reject the call: ▶ **Options** ▶  **Reject waiting call** ▶ **OK**

Accept the call: ▶ **Accept** ▶ Speak to the new caller. The first call is placed on hold.


End the call, resume the call on hold:

- ▶ Press the End call key .

Calls with three parties


Consultation calls

During an external phone call, hold another external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶ ... Use  to enter the number of the second party ... The active call is put on hold and the second party is called.

If the second party does not answer: ▶ **End**

Ending a consultation call


- ▶ **Options** ▶  **End active call** ▶ **OK** ... The connection to the first caller is reactivated.

or


- ▶ Press the End call key  ... The first party is called again.

Call swapping

Switching between two calls (call swapping). The other call is placed on hold.

- ▶ During an external call, dial the number of a second party (consultation call) or accept a waiting caller ... The display shows the numbers/names of both parties.
- ▶ The control key  enables you to switch between the parties.

Ending a currently active call

- ▶ **Options** ▶  **End active call** ▶ **OK** ... The connection to the other caller is reactivated.

or

- ▶ Press the End call key  ... The first party is called again.

Conference call

You can speak to two people simultaneously.

- ▶ During an external call, dial the number of a second party (consultation call) or accept a waiting caller ... Then:

Start the conference call:


- ▶ **Conf.** ... All the callers can hear each other and hold a call with each other.

Switching back to call swapping:

- ▶ **End Conf.** ... You are reconnected to the party with whom the conference call was initiated.



End call with both participants:

- ▶ Press the End call key 

Each party can end their participation in the conference call by pressing the End call key  or hanging up.

Transferring a call to another party

Transfer a call to another party (connect).

- ▶ Use the Display key **Ext. Call** to start an external consultation call ▶ ... Use  to enter the number of the second party ... The active call is put on hold ... The second party is called ▶ Press the End call key  (during the call or before the second party has answered) ... The call is forwarded to the second party.



The options for transferring calls must be set up correctly for the phone system.

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ ... Place the handset in the charging cradle ▶ ... hold  for a further 2 seconds
-

Call volume

Applies for the mode currently being used (handsfree, receiver or headset):


- ▶ Press  ▶ ... use  to set the volume ▶ **Save**




The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press .

or: ▶ **Briefly** press the Profile key 

Adjust the microphone sensitivity

Adjust the microphone sensitivity for the receiver or wired headset during a call.

- ▶ Press and **hold** ▶ Use to set the required sensitivity ▶ **Save**



Changing without saving means the change only applies for the current call.

Permanent setting of the microphone sensitivity when the phone is idle:

- ▶ Press and **hold** ▶ Use to select **Earpiece / Corded headset** ▶ Use to set the sensitivity ▶ **Save**

or

- ▶ ... Use to select **Settings** ▶ **OK** ▶ **Audio Settings** ▶ **OK** ▶ **Mic Sensitivity** ▶ **OK** ▶ Use to select **Earpiece / Corded headset** ▶ Use to set the sensitivity ▶ **Save**

Set the acoustic profile to loud surroundings:

- ▶ Press and **hold** the button ▶ Use to set the sensitivity ▶ **Save**

Network services

Network services are dependent on the phone system and network provider.



To activate/deactivate the features, a code is sent to the telephone network.






Deactivating Calling Line Identification for the next call




By default for an outgoing call, the phone number is sent and can be shown with the caller on the display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously.

- ▶ ... Use to select **Select Services** ▶ **OK** ▶ **Next Call Anonym.** ▶ **OK** ▶ ... Use to enter the number ▶ **Dial** ... The connection is established without CLI

Call divert

When call divert is enabled, incoming calls are forwarded to another connection.

- ▶  ▶ ... Use  to select  **Select Services** ▶ OK ▶  **Call Divert** ▶ OK ▶  **Select** when call divert is to apply ▶ OK

- All Calls:** Calls are forwarded immediately.
- No Answer:** Calls are diverted if no one accepts the call within several rings.
- When Busy:** Calls are diverted if the line is busy.
- Enable/disable: ▶ **Status:** ... Use  to select **On** or **Off**
- Enter the number for call divert:
 - ▶  **To Phone Number** ▶ ... Use  to enter the number
 - ▶ **Send**
- Enable:
 - ▶ **Send**






Call waiting

During a call, a call waiting tone indicates another caller. If the number is being transferred, you see the number or the name of the caller on the display.

- Reject waiting caller: ▶ **Reject** ... The waiting caller hears the busy tone
- Accepting a call: ▶ **Accept**





Once you have accepted the waiting call, you can switch between the two parties (**Call Swap**) or speak to them both at the same time (**Conference**).

Prevent/permit call waiting

- ▶  ▶ ... Use  to select  **Select Services** ▶ OK ▶  **Call Waiting** ▶ OK
- Enable/disable: ▶ **Status:** ... Use  to select **On** or **Off**
- Enable: ▶ **Send**

Do not put through call

When you do not want to be disturbed, you can arrange for no more calls to be put through.

- ▶  ▶ ... Use  to select  **Select Services** ▶ OK ▶  **Do Not Disturb** ▶ OK
- Enable/disable: ▶ **Status:** ... Use  to select **On** or **Off**
- Enable: ▶ **Send**


Cancelling ringback

After you have initiated a ringback, you can cancel it before the other party calls back.

- ▶  ▶ ... Use  to select  **Select Services** ▶ OK ▶  **Ringback Off** ▶ OK ... You receive a confirmation from the phone network ▶ Press the End call key 



You can only activate one ringback at a time. Activating a ringback will automatically cancel any ringback that is already active.

If the ringback is indicated before you are able to cancel it: ▶ Press the End call key 

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



To display the numbers of missed and received calls in the call lists, the relevant option must be enabled on the Gigaset N870 IP PRO.

List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
 - Missed calls,
 - Accepted calls,
 - Outgoing calls (redial list)
- Caller's number. If the number is stored in the directory, the name and number type (Phone (Home), Phone (Office), Phone (Mobile)) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls	
Frank	Today, 15:40 [3]
089563795	13.05.21, 18:32
Susan Black	12.05.21, 13:12
View	Options

Opening the call list

Via the display key: Calls select the list OK

Via the menu: ... use to select Call Lists OK select the list OK

Via the Message key (missed calls):

Press the Message key Missed Calls: OK

Calling back a caller from the call list

... use to select Call Lists OK select list OK select entry Press the Talk key

Additional options

... use to select Call Lists OK select list OK ... possible options:

View an entry: select entry View

Number into directory:

select entry Options Copy to Directory OK

Delete an entry: select entry Options Delete entry OK


Delete list: Options Delete List OK Yes

Message lists

Notifications about missed calls, messages on the network mailbox and missed alarms are saved in the messages list and can be shown on the handset display.

Which messages are shown on the handset are defined in the configuration of the handset on the Gigaset N870 IP PRO.

Counter for missed calls: When the option is enabled, the number of missed calls in idle mode is shown on the handset display.


Message Waiting Indicator (MWI): For every message type (missed call, missed alarm, new message on the network mailbox), the MWI can be disabled/enabled on the Gigaset N870 IP PRO. If the option is enabled, the LED on the Message key  flashes when a new notification arrives for a message type enabled.

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

 on the network mailbox

 in the missed calls list

 in the missed alarms list




The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed

An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.

An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.


- ▶  Select a list ▶ **OK** ... the calls or messages are listed

Network mailbox: The network mailbox number is dialled.



The message list contains an entry for every answer machine assigned to the handset, e.g. for a network mailbox.

Example

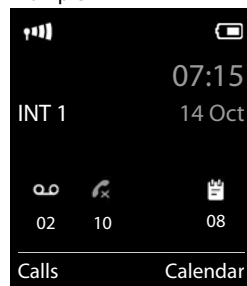

Example

Messages & Calls	
Missed Appts:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Back	OK

Directories

The following directories are available:


- The (local) directory on the handset
- Company directories provided over a server
- Online directories made available by public providers

The local directory is always available. Which other directories are available is defined by Gigaset N870 IP PRO.

Open directories

Open directories with the Directory key

- ▶ Press the Directory key  (bottom of control key)




The  key is normally assigned as follows:

- Press **briefly** to open the selection of available online directories.
- Press and **hold** to open the local directory,

This assignment can be changed for every handset from the Gigaset N870 IP PRO. Direct access (press briefly) can be assigned to a specific online directory. In this case, open the local directory by pressing and holding the Directory key .

Opening directories via the menu

Local directory:

- ▶  ▶ ... Use  to select  **Directory** ▶ **OK**

List of all online directories set up on the phone system

- ▶  ▶ ... Use  to select  **Online Directory** ▶ **OK**

The directories are shown with the names specified on the Gigaset N870 IP PRO.

Opening the company directory using the INT key

A company directory is available if it has been set up on the Gigaset N870 IP PRO and when the phone system has access to this directory. The directory to open with the INT key can be set separately for every handset.

- ▶ Press the INT key  (left of control key)



It is not possible to transfer entries from the local directory to another handset.

Local handset directory

The local directory is unique to the handset.

Directory entries

- Number of entries: Maximum 500
- Information: First and last names, up to three phone numbers, email address, anniversary with signalling, VIP ringtone with VIP icon, CLIP image
- Length of the entries: Numbers: max. 32 digits
First and last names: max. 16 characters
Email address: max. 64 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ ... use to switch between the entry fields

Name:

- ▶ ... use to enter the first and/or last name

Numbers:

- ▶ Tel.1 - Type ▶ ... use to select a number type (Home, Office or Mobile) ▶ ▶ ... use to enter a number

Enter more numbers: ▶ use to toggle between the entry fields Tel.1 - Type/Tel.2 - Type/Tel.3 - Type ▶ ... use to enter a number

Anniversary:

- ▶ ... use to activate/deactivate **Anniversary** ▶ ... use to enter date and time ▶ ... use to select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP):

- ▶ ... use to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Caller Picture:

- ▶ ... use to select a picture that is to be displayed during a call from the participant (→ Resource Directory).

Save entry: ▶ **Save**



The entry is only valid if it contains at least one number.

Example

New Entry	
First Name :	Robert
Surname :	
Tel.1 - Type:	Abc
	▼
< C	Save



For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

Searching for/selecting a directory entry

▶ ▶ ... use to browse searched names

or

▶ ▶ ... use to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use to continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and hold

Displaying/changing an entry

▶ ▶ ... use to select entry ▶ **View** ▶ ... use to select the field to be changed ▶ **Edit**

or

▶ ▶ ... use to select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**

Deleting entries

Delete the **selected** entry:

▶ ▶ ... use to select an entry ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete **all** entries: ▶ ▶ **Options** ▶ **Delete all** ▶ **OK** ▶ **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶ ▶ **Options** ▶ **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶ ▶ **Options** ▶ **Available Memory** ▶ **OK**

Copying number to the directory

Copy numbers to the directory:

- From a list e.g. the call list or the redial list When dialling a number



The number is displayed or highlighted.

▶ Press the display key or **Options** ▶ **Copy to Directory** ▶ **OK** ... possible options:

Create a new entry:


▶ **<New Entry>** ▶ **OK** ▶ ... use to select number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:






- ▶ ... use  to select an entry ▶ OK ▶ ... use  to select number type ▶ OK ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with Yes/No ▶ Save

Copying a vCard using Bluetooth

Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.




Bluetooth mode is activated
The other handset/mobile phone supports Bluetooth.


- ▶  ▶ ... use  to select an entry if needed ▶ Options ▶  Copy entry / Copy all ▶  vCard via Bluetooth ... the Known Devices list is displayed ▶ ... use  to select device ▶ OK

Receiving a vCard using Bluetooth

If a device in the **Known Devices** list sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ▶ ... use  to enter the PIN of the **sending** Bluetooth device ▶ OK ... the copied vCard is available as a directory entry

Synchronising the phonebook with the PC address book (Gigaset QuickSync)



The Gigaset QuickSync programme has been installed on the computer.
The handset is connected via Bluetooth or via a USB data cable to the computer.

Free download and further information at → gigaset.com/quicksync


Company directory

If company directories (LDAP) are set up on the Gigaset N870 IP PRO, they are available on the handset with the following functions:


- Scroll through directory or search directory entries
- Show directory entries with details (no editing or deleting)
- Select phone numbers directly from the directory
- Transfer directory entries to the local directory

When a phone number is entered or there is an incoming call, a search of the directory is automatically performed for an entry matching the phone number. When an entry is found, the name is displayed instead of the phone number.

Show the company directory on the phone display

The company directory is assigned to the INT key: ▶ Press 




Depending on the setting on the Gigaset N870 IP PRO, you can also access a company directory from the directory key .

Directory entries

The following description is an example company directory display on a handset.

The menu shows all the directories that have been set up on the Gigaset N870 IP PRO and activated with the name assigned in each case. In the example on the right, the directory is displayed as **Our directory**.

▶  Select the directory ▶ **OK**

The phone performs a query on the LDAP server.


Directories	
Our directory	
Directory 3	
Directory 4	
Directory 5	
Directory 6	
Back	OK

Our directory	
Albert	
Bond	
Bond, Agnes	
Bond, Paul	
Brown, Susan	
View	Options


The directory is shown in accordance with the following rules:

- The search starts in the (sub)directory defined as the search basis on the LDAP server.
- The entries are listed in alphabetical order.
- Entries are displayed with **Surname** and **First name** when both attributes are available in the LDAP database. Otherwise only the last name or first name is displayed.


Search directory

▶ Use  to scroll through the directory

or

▶  Enter a name (or its starting letters)

As soon as you press a key on the keypad, the phone switches to search mode. You can enter up to 15 characters. All directory entries matching your entry are displayed.


Delete recent characters ▶ 

The current search term is shown in the topmost line.

b	
Bond	
Bond, Agnes	
Bond, Paul	
Brown, Susan	
< C	Options

br	
Brown, Susan	
< C	Options

Displaying a directory entry


- ▶  Select the required entry


- ▶ Press **View** or 

or

- ▶ **Options** ▶ **View**


The directory entry is shown with detailed information.

 
- ▶  Scroll through entry

Close entry: ▶ **Back** or press the End call key 


Brown, Susan
Surname: Brown
First name: Susan
Phone (home): 1234567890
Back


Select a number from the directory

- ▶  Select the required entry

- ▶ Press the Talk key  ... If only one phone number is stored, it is dialed. If there are two or more numbers, they are shown in a selection list.

or

- ▶  Select the required phone number from the detailed view of the entry: **Phone (home)**, **Phone (office)** or **Phone (home)**

- ▶ Press the Talk key  ... The number is dialed

Brown, Susan
Phone (office): 0987654321
Phone (mobile): 0908987876
Street: Avenue 12
Back

Answering machine

The answering machine takes incoming calls for the handset.

Requirements

The following settings are required so that you can receive and listen to voice messages:

On the phone system

- ▶ A network mailbox is set up for the connection assigned to the handset.

On the Gigaset N870 IP PRO






- ▶ In the phone system configuration, the system for receiving notifications is registered for new messages on the network mailbox.

On the handset

 
- ▶ In the handset configuration, the phone number is entered and the network mailbox is enabled.

If necessary, contact the administrator of the DECT network.


Enter/change numbers from the handset

- ▶  ▶ ... Use  to select  Answer Machine ▶ OK ▶  Network Mailbox ▶ OK ▶  Enter or change the number of the network mailbox ▶ Save

Play messages on the handset

- ▶ Press and hold the  button

or

- ▶ Press the Messages  key ▶ OK

or



- ▶  ▶ ... Use  to select  Answer Machine ▶ OK ▶ Play Messages ▶ OK

Listen to announcement over speaker: ▶ Press the Speaker  button

Additional functions

Sound profiles


The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**. You can use the **Do not disturb** profile to prevent the handset signalling an incoming call.

- ▶ Press the Profile key  ... The profile currently set is shown
- ▶ Switch between profiles using key 


or

- ▶ Use  to select a profile ▶ **OK**

Set the microphone sensitivity to loud surroundings:


- ▶ Press and **hold** the profile key 


Profile "Do not disturb"

- ▶ Set with the profile key 

or

- ▶  ▶ ... Use  to select  **Audio Settings** ▶ **OK** ▶  **Do Not Disturb** ▶ **Change**  = On)


- The idle display shows "**Do not disturb**" **active**. The status bar shows 
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.

 An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Sound profiles

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert		On	Same as Profile Personal	Off
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ► after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Loud** and **Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2021						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ use to select desired day ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** use to select **On** or **Off**
- Enter date: ▶ **Date** ... the selected day has been pre-set ▶ use to enter new date
- Enter time: ▶ **Time** ▶ use to enter hours and minutes of the appointment
- Set name: ▶ **Text** ▶ use to enter a description of the appointment (e.g. evening meal, meeting)
- Set alarm tone: ▶ **Signal** ▶ use to select the melody of the reminder alarm or deactivate the acoustic signal
- Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ **OK** ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **OFF**



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Appts** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the Message key  ▶  Missed Appts: ▶ OK ▶ ... use  to browse through the list of any appointments







or

- ▶  ▶ ... use  to select  Organizer ▶ OK ▶  Missed Appts ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ Delete

Displaying/changing/deleting stored appointments

- ▶  ▶ ... use  to select  Organizer ▶ OK ▶  Calendar ▶ OK ▶ use  to select day ▶ OK ... the appointment list is displayed ▶ use  to select date ... possible options:

Display appointment details:

- ▶ View ... the appointment settings are displayed

Change appointment:


- ▶ View ▶ Edit
or ▶ Options ▶  Edit entry ▶ OK

Activate/deactivate appointment:

- ▶ Options ▶  Activate/Deactivate ▶ OK








Delete appointment: ▶ Options ▶  Delete entry ▶ OK


Delete all appointments for a day:

- ▶ Options ▶  Delete all Appoints. ▶ OK ▶ Yes

Timer

Setting the timer (countdown)

- ▶  ▶ ... use  to select  Organizer ▶ OK ▶  Timer ▶ OK ▶ ... then
 - ▶ Enable/disable: ▶ Activation: ... use  to select On or Off
 - ▶ Set the duration: ▶  Duration ... use  to enter the hours and minutes for the timer
Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)
 - ▶ Save the timer: ▶ Save

The timer starts the countdown. In the idle display, icon  and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.

Disabling/repeating the alarm

- Switch off the alarm: ▶ **OFF**
- Repeat the alarm: ▶ **Restart** ... the timer display is displayed again ▶ set another duration as required ▶ **Save** ... the countdown is restarted

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
- Setting the wake-up time:
- ▶ **Time** ▶ ... use to enter hours and minutes
- Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
- Set the volume: ▶ **Volume** ▶ ... use to set volume in 5 levels s or select **crescendo** (increasing volume)
- Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
- Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.


- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Time Control** ▶ OK ▶ ... then

Switch on/off: ▶ use to select **On** or **Off**

Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format

Save: ▶ **Save**

Example

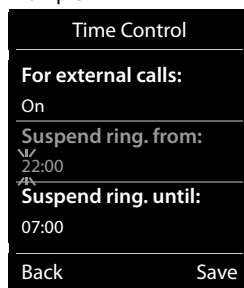

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ **Edit** (= on) ... the call is only signalled on the display

Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Silent Charging** ▶ **Change** (= ringtone is switched off when in charging cradle)

Disable the ringtone (do not disturb)

You can use the **Do Not Disturb** function to prevent the handset signalling an incoming call.

▶  ▶ ... Use  to select  **Audio Settings** ▶ **OK** ▶  **Do Not Disturb** ▶ **Edit**
( = enabled)

- The idle display shows "**Do not disturb**" active.
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.



An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Resource Directory
















Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ Gigaset QuickSync).

Media types:

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 240 x 172 pixels 240 x 320 pixels

 If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Managing images (for screensaver and CLIP) and sounds






- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK**
... possible options:
 - View image: ▶  **Select Screensavers / Caller Pictures** ▶ **OK** ▶ use  to select picture ▶ **View** ... the selected picture is displayed
 - Play sound: ▶  **Select Sounds** ▶ **OK** ▶ use  to select sound ... the selected sound is played
Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ use  to select volume ▶ **Save**
 - Rename picture/sound: ▶  **Select Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ ... use  to select sound/image ▶ **Options** ▶ **Rename** ▶ use  to delete name, use  to enter new name ▶ **Save** ... the entry is saved with the new name
 - Delete picture/sound: ▶  **Select Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ use  to select sound/picture ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

- ▶  ▶ ... use  to select  **Additional Features** ▶ OK ▶  **Resource Directory** ▶ OK ▶  **Capacity** ▶ OK ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. to connect a Bluetooth headset or hearing aid.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset or hearing aid



The headset / hearing aid has the **Headset** or **Handsfree profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection to the headset, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 5 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.


In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

- ▶  ▶ ... use  to select  **Bluetooth** ▶ OK ▶  **Activation** ▶ **Change** = activated)

If the local area code is still not saved: ▶ ... use  to enter local area code ▶ OK

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Search for Headset / Search Devices** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:
 - Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices
 - Showing information:
 - ▶ ... use to select a device, if applicable ▶ **View** ... the device name and device address are displayed
 - Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**
 - Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Open the list

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device



Bluetooth headset



Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry



- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ▶ ... use to select entry ... possible options:
 - View an entry: ▶ **View** ... the device name and device address are displayed ▶ Press **OK** to go back
 - De-registering a device:
 - ▶ **Options** ▶ **Delete entry** ▶ **OK**
 - Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use to edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, a prompt will appear asking you to enter the PIN of the Bluetooth device (Bonding).






- Reject: ▶ **Briefly** press the End call key 
- Accept: ▶ ... use  to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... Wait for PIN confirmation ... then

Add the device to the list of known devices: ▶ **Yes**

use the device temporarily: ▶ **No** ... the Bluetooth connection can be used, as long as the device is located within transmission range or until it is switched off

Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

- ▶  ▶ ... use  to select  **Bluetooth** ▶ **OK** ▶  **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use  to change the name ▶ **Save**

Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.

Free to download at → www.gigaset.com/quicksync

QuickSync functions:

- Sync the handset's directory with Microsoft® Outlook®
 - Upload CLIP-pictures (.bmp) from the computer to the handset
 - Upload pictures (.bmp) as screensavers from the computer to the handset
 - Upload sounds (ringtone melodies) from the computer to the handset
 - Update firmware
 - Cloud synchronisation with Google™
- ▶ Connecting the handset to the computer via Bluetooth or via a USB data cable.



Connect the handset **directly** to the PC and **not** via a USB hub.

Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Launch the **Gigaset QuickSync** program on the computer.

The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Carrying out a firmware update



- ▶ Connect the telephone and the PC using a **USB data cable** ▶ Launch **Gigaset QuickSync** ▶ Establish connection to the handset
- ▶ Start firmware update in **Gigaset QuickSync** . . . Information about this can be found in **Gigaset QuickSync** help feature

The update process may take up to 10 minutes (not including download time).



Do not interrupt the process and do not remove the USB data cable.

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.


 
The display on your telephone is switched off, the Message key  and the Talk key  flash. Once the update is complete, your telephone will automatically restart.

Procedure in the event of an error

If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery ▶ Re-insert the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery
- ▶ Press and hold keys **4** and **6** at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys **4** and **6** . . . the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above



Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.

Adjusting the telephone settings

Changing the language

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Language** ▶ OK ▶ ... use to select language ▶ **Select** (= selected)

If the handset has been set to an incomprehensible language:

- ▶ ▶ Press the keys **9** **5** **slowly** one after the other ▶ ... use to select the correct language ▶ press the right display key

Select country (if available)

Select the country where you are using the phone. Your selection is used for country-specific defaults, such as the international country code.

- ▶ ▶ ... Use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Country** ▶ OK ▶ ... Use to select the country ▶ **Select** (= selected)

Display and keypad

Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Screensaver** ▶ **Edit** (= on) ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Select screensaver: ▶ **Selection** ▶ ... use to select a screensaver (**Digital Clock** / **Analog Clock** / **Info Services** / <Pictures> / **Slideshow**)
 - View screensaver: ▶ **View**
 - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.



All pictures from the **Screensaver** folder of the **Resource Directory** are available for selection.

End screensaver

- ▶ Press the End call key briefly ... the display changes to idle status

Notes on displaying Info Services



Info Services are activated via the web configurator.

The telephone is connected to the Internet.



If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Info Ticker** ▶ **Edit** (= on)

The text appears as soon as the telephone changes to idle status. If a message is shown in the display, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Large Font** ▶ **Change** (= on)

Colour scheme

You can choose from a range of colour combinations for the display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Colour Schemes** ▶ OK ▶ ... use to select the desired colour scheme ▶ **Select** (= selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶ ▶ ... Use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Display Backlight** ▶ OK ▶ Use to select when the setting is applied (**In Charger / Out of Charger / In Talk State**) ▶ Select in each case with **On** or **Off** ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.







Keypad illumination

The keypad has 5 levels of brightness to choose from.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Key Illumination** ▶ OK ▶ ... use to select **Brightness (1 - 5)** ▶ **Save**

Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Auto Keypadlock** ▶ Change  = on

Tones and signals



Call volume

You can set the volume of the earpiece, handsfree function and headset on 5 levels independently of each other.



 


Changes are only saved permanently in **Profile Personal**.







During a conversation

- ▶  **Handset Volume** ▶ ... use  to select volume ▶ **Save** ... the setting is saved

In idle status

- ▶  **Handset Volume** ▶ Use  to select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ Use  to select the volume ▶ **Save** ... The setting is saved

or










- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ▶ Use  to select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ Use  to set the volume ▶ **Save**

Automatic volume control









Crescendo is **not** set for the ringtone volume (→ p. 48).

The phone is able to automatically adjust the volume of the receiver and ringtone to the ambient volume. Here you can set the sensitivity with which the phone reacts to changes in noise level (**Very High, High, Medium, Low, Very Low**).

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Smart Volume** ▶ OK ▶  **Earpiece Volume / Ringtone Volume** ▶ **Edit**
- Enable/disable: ▶ **Activation:** Use  to select **On** or **Off**
- Adjust the sensor: ▶  **Sensitivity** ▶ Use  to adjust the sensor sensitivity
- Save: ▶ **Save**







Headset – volume correction

Change the call volume for the wired headset. In addition to the standard settings for the call volumes, here you can compensate the audio setting characteristics of your headset.

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Corded Hdset Boost** ▶ Use  to set the volume ▶ **Save**





Microphone sensitivity

Adjust the sensitivity of the microphone for the receiver or wired headset. This gives you improved acoustics in loud environments and when there are echoes.

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Mic Sensitivity** ▶ OK ▶ Use  to select what the setting applies for (**Earpiece / Corded headset**) ▶ Use  to adjust the sensitivity ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.








- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Acoustic Profiles** ▶  **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ use  to select profile ▶ **Select** ( = selected)

Earpiece Profiles: **High frequency** or **Low frequency** (default setting)


Handsfree Profiles: **Standard** (default setting) or **Reduced Echo**

Ringtones

Ringtone volume

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ use  to select **For internal calls and alarms** or **External Calls** ▶ use  to set volume in 5 levels or in crescendo mode (increasing volume) ▶ **Save**



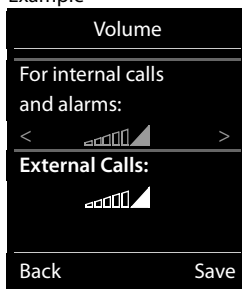




Example



Changes are only saved permanently in **Profile Personal**.



 Ringtone melody

Set different ringtones for internal and external calls.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Melodies** ▶ OK ▶ use  to select the connection ▶ use  to select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off

Switching the ringtone off permanently

- ▶ Use the  key to set the **Profile Silent** ... The following icon appears in the status bar: 


or: Enable "Do not disturb"

- ▶  ▶ ... Use  to select  **Audio Settings** ▶ OK ▶  **Do Not Disturb** ▶ **Change** = enabled)

Switching the ringtone on permanently

Use the  key to set **Profile Loud** or **Profile Personal**


Switching the ringtone off for the current call

- ▶ **Silence** or press the End call key 

Switching the alert tone (beep) on/off






Switch on an alert tone (beep) instead of the ringtone:

- ▶ Use the Profile key to select  **Profile Silent** ▶ **Press Beep** within 3 seconds ... The following is shown in the status bar: 

Switching off the alert tone: ▶ Use the Profile  key to change profile






Switching the silent alert on/off

Incoming calls and other messages are indicated by a silent alert.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Silent Alert** ▶ **Change** = on)

Switching advisory tones on/off



The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then



Tone when keys are pressed:

- ▶ **Key Tones:** ... use  to select **On** or **Off**



Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶ ... use  to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

▶  **Battery** ▶ ... use  to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

▶  **Out of Range:** ... use  to select **On** or **Off**


Save settings:

▶ **Save**

Auto answer










When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.


▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change**  = activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

Emergency numbers

 
 
 
You can enter up to three phone numbers as emergency numbers - that you can also dial when the keypad lock is PIN-protected.

▶  ▶ ... Use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Emergency Numbers** ▶ **OK** ▶ Use  to select an entry (--- = empty entry) ▶ **Change** ▶ Use  to enter the name for the emergency number ▶  Use  to enter the emergency number ▶ **Save**

Delete entry: ▶ Use  to delete the name and phone number ▶ **Save**

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a number from the directory to the keys  and  to .





A number has not been assigned to the digit key.

▶ Press and **hold** the digit key

or

▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

▶ Press and **hold** the digit key ... the number is dialled immediately

or

▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

Changing the digit key assignment

▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options: Change the assignment:

▶ ... use to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**

Delete the assignment:

▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... Use to select the function ▶ **OK** ... The assignment of the display key is changed

Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**

Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Changing the handset PIN






The handset is protected against unauthorised use by a PIN. The handset PIN must be entered e. g. when switching off the keypad lock.

Change the handset's 4-digit PIN (default setting: **0000**):

▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Handset PIN** ▶ **OK** ▶ ... use to enter the current PIN ▶ **OK** ▶ ... use to enter the new handset PIN ▶ **OK**

Resetting a handset

Reset any individual settings and changes that you have made.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Reset** ▶ OK ▶ Yes ... the handset's settings are reset









The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Resetting the handset to the default settings

Reset all settings and personal information.

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Erase Handset** ▶ OK ▶ Use  to enter the current PIN ▶ OK

All user information, lists, the directory and the handset registration with the base are erased. The Registration wizard is started.






Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).







The phone checks whether new firmware is available for the handset. If it is, a message is displayed.

- ▶ Start the firmware update with **Yes**.

Enable/disable automatic check for new firmware:

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Update** ▶ OK ▶  **Automatic Check** ▶ OK ▶ **Change** (= enabled)







Start the firmware update manually

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Update** ▶ OK ▶  **Update** ▶ OK ▶ OK ... if there is new firmware, the update will start



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Checking the firmware version

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Update** ▶ OK ▶  **Current Version** ▶ OK ... the firmware version of the handset is displayed

Appendix

Customer Service & Help

Do you have any questions?

For quick help and information, please refer to this user guide or visit gigasetpro.com.

For online information and services concerning

- Products
- Documents
- Interop
- Firmware
- FAQ
- Support

please refer to wiki.gigasetpro.com.

For further information our Gigaset specialised reseller will be happy to help you related to your Gigaset product.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset SL800H PRO is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

gigasetpro.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	lithium ion (Li-Ion)
Voltage:	3.7 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	300/170 *
Talktime (hours)	15
Operating time with 1.5 hours of calls per day (hours)	130/95 *
Charging time in charging cradle (hours)	2.5

* With the **No Radiation** function disabled / with the **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 4.00 W
To maintain the charge status:	approx. 0.30 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 μ s
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C733 / C734
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	5 V
Output current	0.4 A
Output power	2 W
Average active efficiency	> 71.6 %
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

Standard characters

Press the relevant key the number of times indicated.










	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	← ¹⁾	.	,	?	!	← ²⁾	0			









- 1) Space
- 2) Line break

Display icons


 
The following icons are displayed depending on the settings and the operating status of your telephone.



Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated
	Keypad lock activated
	Bluetooth enabled
	Headset / hearing aid connected via Bluetooth






Icon	Meaning
	Data device connected via Bluetooth
	"Do not disturb" enabled
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%





Display key icons

Icon	Meaning
	Last number redial
	Delete text

   
 
 




Icon	Meaning
	Open the directory
	Copy number to the directory

Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)
	Information
	(Security) prompt
	Please wait ...

Menu overview



Not all functions described in the user guide are available in all countries or from all network providers.

Open the main menu: ► when handset is in idle status press



Select Services

Next Call Anonym.	→ p. 22
Call Divert	→ p. 23
Call Waiting	→ p. 23
Do Not Disturb	→ p. 23
Ringback Off	→ p. 23



Info Centre

Company-specific functions can be provided by Gigaset N870 IP PRO.



Additional Features

1 Touch	→ p. 18
Resource Directory	→ p. 40
Screensavers	→ p. 40
Caller Pictures	→ p. 40
Sounds	→ p. 40
Capacity	→ p. 41



Call Lists

All calls	→ p. 24
Outgoing calls	→ p. 24
Accepted calls	→ p. 24
Missed calls	→ p. 24



Messaging

Intended for future functions



Answer Machine

Play Messages	→ p. 32
Network Mailbox	→ p. 32



Organizer

Calendar	→ p. 34
Timer	→ p. 36
Alarm Clock	→ p. 37
Missed Appts	→ p. 35



Contacts

Directory	→ p. 26
Online Directory	→ p. 26



Settings

Date/Time	Is set centrally. Manual settings on the handset are ignored.		
Audio Settings	Handset Volume		→ p. 47
	Smart Volume	Earpiece Volume	→ p. 47
		Ringtone Volume	→ p. 47
	Mic Sensitivity	→ p. 48
	Acoustic Profiles	Earpiece Profiles	→ p. 48
		Handsfree Profiles	→ p. 48
	Advisory Tones	→ p. 49
	Do Not Disturb	→ p. 39
	Silent Alert	→ p. 49
	Ringtones (Handset)	Volume	→ p. 48
		Melodies	→ p. 49
		Time Control	→ p. 38
		Anon. Calls Silent	→ p. 38
	Silent Charging	→ p. 38	
	→ p. 48	
	Corded Hdset Boost	
Display & Keypad	Screensaver	→ p. 45
	Large Font	→ p. 46
	Colour Schemes	→ p. 46
	Display Backlight	→ p. 46
	Key Illumination	→ p. 46
	Auto Keypadlock	→ p. 47
Language	→ p. 45	
Registration	Register Handset	→ p. 10
	Select Base	→ p. 10
	Basic Registration	→ p. 10
Bluetooth	Activation	→ p. 41
	Search Devices	→ p. 42
	Known Devices	→ p. 42
	Own Device	→ p. 43
Telephony	Auto Answer	→ p. 47
	Auto-Accept Call	→ p. 47
	Area Codes	Is set centrally. Manual settings on the handset are ignored.	
		
	Country	→ p. 45
	Emergency Numbers	→ p. 50
System	Handset Reset	→ p. 52
	Handset PIN	→ p. 51
	Handset Update	→ p. 52
	Erase Handset	→ p. 52

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software which is subject to the GNU General Public License (GPL) or the GNU Library/Lesser General Public License (LGPL). The corresponding licence conditions can be found below in their original version. You can download the corresponding source code from the Internet at www.gigaset.com/opensource. The appropriate source code can also be requested from Gigaset Communications GmbH at cost price within three years of purchasing the product. Please use the contact details provided at www.gigaset.com/service.

Licence texts

Copyright (c) 2001, Dr Brian Gladman <>, Worcester, UK.

All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.

Issue Date: 29/07/2002

Index

-
- A**
- Advisory tones 49
 - Alarm 37
 - Alarm clock 37
 - switch on/off 37
 - Alert tone (beep) 34, 49
 - Anniversary, see Appointment
 - Answer machine
 - calling back a caller 24
 - Answer, auto 50
 - Answering machine, play messages 32
 - Appointment
 - display missed 35
 - missed 35
 - notification 35
 - setting 34
 - Area code 16
 - Assigning number key 50
 - Authorisation 53
 - Auto answer 50
 - simple 19
 - Automatic
 - redial 17
-
- B**
- Battery
 - charging 10
 - charging status 57
 - inserting 9
 - Beep (alert tone) 34, 49
 - Belt clip 11
 - Bluetooth 41
 - activate 41
 - changing the device name 43
 - copy directory (vCard) 29
 - de-register devices 42
 - list of known devices 42
 - registering devices 42
 - Broken display 6
-
- C**
- Calendar 34
 - Call
 - anonymous 22
 - external 16
 - incoming 19
 - Call divert 23
 - Call list
 - copying a number to the directory 24
 - delete 24
 - delete an entry 24
 - dialling 17
 - entry 24
 - opening 24
 - Call lists 24
 - Call Manager 19
 - Call protection 38
 - Call swapping, two external calls 20
 - Call transfer 21
 - Call waiting 23
 - Call waiting, external
 - accepting/rejecting 19
 - Call, anonymous 22
 - protection from 38
 - Calling Line Identification
 - switching off temporarily 22
 - Calls
 - making an external call 16
 - Care 54
 - Care of the device 54
 - Changing
 - display language 45
 - Changing the device name (Bluetooth) 43
 - Changing the handset PIN 51
 - Character charts 56
 - Charge status of the batteries 57
 - Charging cradle (handset)
 - connecting 8
 - Charging time of handset 55
 - CLIP image
 - view in resource directory 40
 - CLIP, CLI Presentation 22
 - CLIP-picture, in directory 27
 - Colour scheme 46
 - Company directory 26, 29
 - automatic search 29
 - dial number 31
 - open 30
 - search 30
 - search for entry 30
 - search mode 30
 - Conference call 20
 - ending 20
 - two external calls 20
 - Connecting the USB data cable 11
 - Consultation call 20
 - end 20
 - Contact with liquid 54
 - Contents of the package 8
 - Control key 3, 12
 - Correcting incorrect entries 15
 - Countdown (timer) 36
 - Country 45
 - Customer Care 53
 - Customer Service 53
-
- D**
- Data protection 53

-
- Delayed Extension Dialling 18
 - De-registering devices (Bluetooth) 42
 - Dialling
 - from the call list 17
 - from the redial list 16
 - using quick dial 50
 - Dialling pause 18
 - Directories
 - using them 26
 - Directory 27
 - copy vCard (Bluetooth) 29
 - copying numbers 28
 - entry 27
 - memory 28
 - open 26
 - order of entries 28
 - saving an entry 27
 - searching 28
 - selecting an entry 28
 - Directory key
 - assignment 26
 - Display
 - backlight 46
 - broken 6
 - changing display language 45
 - colour scheme 46
 - directory memory 28
 - large font 46
 - missed appointment/anniversary 35
 - network mailbox message 25
 - screensaver 45
 - setting 45
 - Display icons 57
 - Display keys 3, 13
 - assigning 50
 - icons 57
 - Display language
 - setting 10
 - Disposal 54
 - "Do not disturb" profile 33
 - Do not disturb 23
-
- E**
- Earpiece profile 48
 - Earpiece volume 21
 - automatic 47
 - Emergency numbers 50
 - not possible 6
 - End call key 3, 16
 - Entering numbers 15
 - Entering special characters 15
 - Entering text 15
 - Entering umlauts 15
 - Extension systems, dialling (Delayed Extension Dialling) 18
-
- F**
- Firmware update 52
 - Firmware updates 44
-
- G**
- Getting started 8
 - Gigaset QuickSync 29, 43
 - GPL 61
 - Group accept 19
-
- H**
- Handset
 - automatic keypad lock 47
 - changing the settings 45
 - colour scheme 46
 - connecting the charging cradle 8
 - display backlight 46
 - display language 45
 - handset volume 21
 - handsfree volume 21
 - idle status 14
 - keypad illumination 46
 - muting 21
 - overview 3
 - registering 10
 - resetting 52
 - restoring to default setting 52
 - set up 9
 - switch on/off 12
 - update 52
 - Handsfree key 21
 - Handsfree mode 21
 - Handsfree profile 48
 - Handsfree volume 21
 - Hash key 3
 - Headset (Bluetooth) 41
 - Headset connection 3
 - Headset socket 11
 - Headset volume 48
 - Help 53
-
- I**
- Icons
 - alarm clock 37
 - displaying new messages 25
 - indications 58
 - on display keys 57
 - status bar 57
 - timer 36
 - Idle status
 - returning to 14
 - Illumination, keypad 46
 - Indications, icons 58
 - INT key, open directory 26

-
- K**
- Key 1 (fast access) 3
 - Key, assigning 50
 - Keypad illumination 46
 - Keypad lock, automatic 47
 - Keys
 - control key 3, 12
 - display keys 3, 13
 - end call key 3, 16
 - handsfree 21
 - hash key 3
 - menu 12
 - message key 3
 - on/off key 3
 - profile key 3, 33
 - recall key 3
 - star key 3
 - talk key 3
-
- L**
- Language
 - display 45
 - Large font 46
 - LDAP (Lightweight Directory Access Protocol) .. 29
 - LGPL 61
 - Liquid 54
 - List
 - known devices (Bluetooth) 42
 - Lock/unlock the keypad 12
 - Loud surroundings 22
 - Lower/upper case 15
-
- M**
- Mains unit
 - handset 56
 - Making calls
 - external 16
 - Manufacturer's advice 53
 - Medical equipment 7
 - Melody
 - ringtone for internal/external calls 49
 - Memory in the directory 28
 - Memory, resource directory 41
 - Menu key 12
 - Message key 3
 - Message lists 25
 - Message Waiting Indicator (MWI) 25
 - Messages
 - play on network mailbox 32
 - Microphone
 - adjust sensitivity 22, 48
 - switch on/off 21
 - volume 48
 - Missed anniversaries/appointments 35
 - Missed calls
 - counter 24, 25
 - Multi-cell system 4
-
- Muting the handset 21
-
- N**
- Network mailbox 32
 - enter number 32
 - play messages 32
 - Network MB, see Network mailbox
 - Network provider 22
 - Network services 22
 - Number
 - copying to the directory 28
 - do not transfer 22
 - saving in the directory 27
 - withhold 22
-
- O**
- On/off key 3
 - One touch call 18
 - Open Source Software 61
 - Operating time of handset 55
 - Overview
 - handset 3
-
- P**
- PC Interface 43
 - Picture
 - as CLIP image 40
 - as screensaver 40
 - delete 40
 - formats 40
 - rename 40
 - Play sound 40
 - Power adapter 6, 56
 - handset 56
 - Profile key 3, 33
 - Profiles 33
 - Protection from calls
 - "Do not disturb" profile 33
 - anonymous 38
 - switch off ringtone when in charging
 - cradle 38
 - time control 38
-
- Q**
- QuickSync 29, 43
-
- R**
- Recall key 3
 - Redial list 16, 24
 - Registering (handset) 10
 - Registering device (Bluetooth) 42
 - Resource Directory 40
 - memory 41
 - Resource directory
 - view CLIP image 40

Ringback		Sounds for ringtones	40
cancelling	23	Speaker	21
disable on busy	19	Star key	3
when busy	18	Status bar	3
Ringback when call is not answered	18	icons	57
Ringtone	48	SUOTA	52
automatic volume	47	Switch on/off alarm (timer)	37
changing	48	Symbols, see Icons	57
disable	19		
melody for internal/external calls	49	T	
switch off when in charging cradle	38	Talk key	3
time control	38	Technical data	55
volume	48	Telephone	
		operating	12
S		Time control for external calls	38
Screensaver	45	Timer	36
Searching in directory	28		
Sensitivity		U	
volume	47	Update	44
Setting up		Upper/lower case	15
handset	9	USB connection socket	3
Show new messages	25		
Show notifications	25	V	
Sicherheitshinweise	6	Viewing network mailbox message	25
Signal strength	57	VIP group, classify directory entry	27
Silent alert	49	VIP ringtone	27
Simple Auto Answer	19	Volume	
Snooze mode (alarm)	37	earpiece	47
Sound		handset speaker/earpiece volume	21
delete	40	headset	47, 48
formats	40	speaker	47
playback	40		
rename	40		
Sound profiles	33		

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigasetpro.com