

Gigaset

R700H PRO

Up-to-date information on your product: → wiki.gigasetpro.com


Contents

Overview	3
Safety precautions	5
Getting started	7
Using the telephone	14
Getting to know your telephone	14
Making calls	19
Call lists	23
Message lists	24
Directories	26
Local handset directory	26
Base directory	32
Assignment of the control key to a directory	32
Answer machine	33
Local answering machine	33
Network mailbox	34
Set fast access for the answer machine	35
Additional functions	36
Functions button	36
Sound profiles	39
Calendar	40
Timer	42
Alarm clock	43
ECO DECT	44
Protection against unwanted calls	45
Resource Directory	48
Bluetooth	49
Additional functions using the PC interface	52
Setting the handset	55
Appendix	68
Customer Service & Help	68
Manufacturer's advice	68
Technical data	70
Accessories	72
Display icons	73
Index	75
Open Source Software	79



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

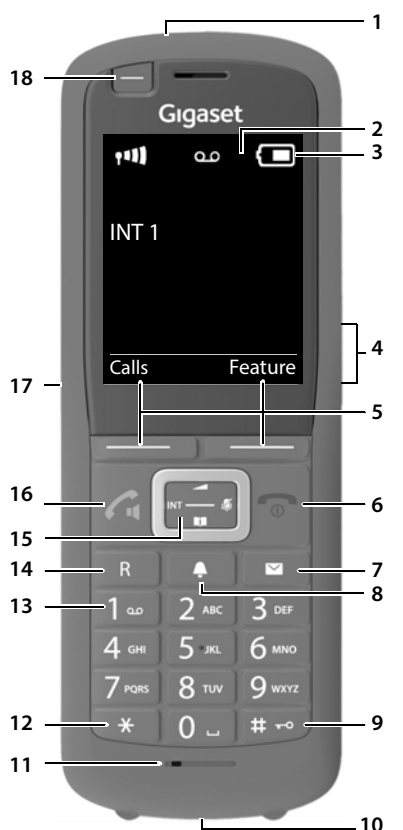

- 1 **Torch (spot LED) / Visual call signal**
- 2 **Display**
- 3 **Status bar** (→ p. 73)
Icons display current settings and operating status of the phone
- 4 **Volume keys** (→ p. 15)
for receiver/headset, ringtone, handsfree mode and appointment reminders
- 5 **Display keys** (→ p. 16)
Various functions, depending on the operating situation

- 6 **End call key / On/off key**
End call; cancel function
Go back one menu level
Return to idle status
▶ Press briefly
▶ Press and hold
▶ Press and hold
- Switch the handset on/off (in idle status)
▶ Press and hold
- 7 **Message key** (→ p. 24)
Access to the calls and message lists;
Flashes: new message or new call
- 8 **Profile key**
Switch between sound profiles
- 9 **Hash key**
Lock/unlock the keypad (in idle status) ▶ Press and hold
Toggle between upper/lower case and digits (when inputting text) ▶ Press briefly
- 10 **USB connection socket**
For data exchange between the handset and PC
- 11 **Microphone**
- 12 **Star key**
Open special characters table ▶ Press briefly (when inputting text)
- 13 **Key 1**
Select answer machine/network ▶ Press and hold mailbox ▶ Press and hold
- 14 **Recall key**
Consultation call (flash) ▶ Press briefly
Insert a dialling pause ▶ Press and hold
- 15 **Control key / Menu key** (→ p. 14)
Open a menu; navigate in menus and entry fields; access functions (depending on the situation)
- 16 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between receiver and handsfree mode; send SMS (when composing an SMS)
Open the redial list ▶ Press briefly
Start dialling ▶ Press and hold
- 17 **Headset connection**
(3.5 mm jack)
- 18 **Functions key** (→ p. 15)

Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

Keys

	or	Talk key		or	Handsfree key
		End call key			Number / letter keys
		Control key rim / centre			Message key
		Recall key			Star key
		Hash key			Profile key
OK, Back, Select, Change, Save, ...			Display keys		

Procedures

Example: Switching Auto answer on/off

- ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** = activated)

Symbols	Meaning
▶	Every arrow initiates an action.
▶	When in idle status press the centre of the control key. The main menu opens.
▶	Navigate to the icon using the control key .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶ Telephony	Select the Telephony entry using the control key .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated /deactivated .

Safety precautions



Read the safety precautions and the user guide before use.

Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at gigaset.com/pro in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The base and charger are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").



If a USB adapter cable is included, only use a USB power supply (5Volt) with USB-A connection. The use of other voltage sources e.g. PC's with USB connection can cause damage.

If a plug-in power supply is included, please use this power supply.

Getting started

Contents of the package

- One **handset**
- One battery cover (rear cover for the handset)
- Two batteries
- One charging cradle incl. power adapter
- One belt clip
- One rubber cover for the headset socket
- One rubber cover for the USB connection
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.


The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

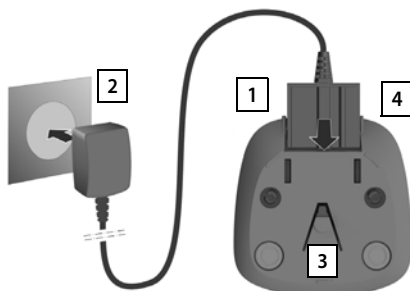

Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**


Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries (for correct +/- direction, see diagram).

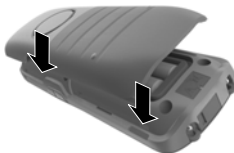

- ▶ Line up the battery cover at the recesses with the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.



- To re-open the battery cover:
 - ▶ Remove the belt clip (if attached).
 - ▶ Use your fingernail to reach into the recess and pull the battery cover up **1**.

 
Covering the headset socket


- ▶ Plug the lug of the rubber cover for the headset socket into the opening on the left of the handset.
- ▶ Press down the cap of the rubber cover.



Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle or using a standard USB mains adapter.



The batteries are fully charged when the power icon  disappears from the display.



The battery may heat up during charging. This is not dangerous.


After a time, the charge capacity of the battery will decrease for technical reasons.

Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the batteries.

As soon as power is applied to the handset, a Setup wizard starts.

Setting the display language

- ▶ Press the control key  until the language required is selected on the display, e.g. **English** ▶ press the display key **OK**


Deutsch

English

Français

You can also change the display language later on in the **Settings** menu.

Select country

- ▶ Press the control key  until the country in which you are using the device is highlighted on the display, e.g. **Germany** ▶ Press the Display key **OK**

United Kingdom

Ireland

Austria

You can also change the country later on from menu **Settings**

Registering the handset (depending on the base)



Registration must be initiated on the base station **and** on the handset.

Both must be carried out **within 60 secs.**

On the base / On the router

Gigaset base: ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).

Other base station/router:

- ▶ Information regarding the registration procedure
→ Documentation regarding your base/your router

On the handset



- Registration on a base: ▶ **Please register handset** is displayed
- ▶ Press the Display key **Register** . . . A search is performed for a base ready for registration ▶ If required, enter the system PIN (default for Gigaset bases: **0000**)

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**.


A handset can be registered to up to four base stations.

- ▶  ▶   **Settings** ▶ **OK** ▶  **Registration** ▶ **OK**

- Registering the handset: ▶ **Register Handset** ▶ **OK** . . . an available base is sought ▶ if required: enter system PIN (default setting on Gigaset bases: **0000**) ▶ **OK**

- Change of base: ▶ **Select Base** ▶ **OK** ▶  select base or **Best Base** ▶ **Select** ( = selected)
- Best Base:** The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

De-registering the handset (depending on the base):

- ▶ **De-reg. Handset** ▶ **OK** . . . the handset being used is selected ▶  select another handset if required ▶ **OK** ▶ enter system PIN if required ▶ **OK** ▶ confirm de-registration with **Yes**
- If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).



Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, use menu entry **Basic Registration**. This guarantees correct displays on the handset, but can entail restrictions for some functions.

Data protection

If the product is connected to the Internet via an IP base station or router, it will automatically connect to the Gigaset support server sending regular product specific information. This information will for example be used for firmware updates or to provide internet services.

For more information regarding the stored data, please visit → gigaset.com

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.



Date and time are set using the base. The date and time can also be set on an IP-compatible base via a time server on the network.

If the base permits it, you can set the date and time manually using the handset.

- ▶ Press the display key **Set Time**

or, if the date and time have already been set:

- ▶ ▶ **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**

The active input position flashes.

Change input position: ▶

To switch between the entry fields: ▶

Enter date:

- ▶ enter the day, month and year in 8-digit format.

Enter time:

- ▶ enter hours and minutes in 4-digit format.


Save settings:

- ▶ Press the display key **Save**. . . . **Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:

- ▶ Press and **hold** the End call key

The telephone is now ready for use.

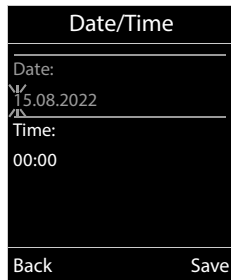

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.





Professional belt clip (accessory)

Attaching the belt clip:

Press the holder on the back of the handset so that the tabs click into place in the notches **1**.

- ▶ Secure the belt clip on the belt **2**.
- ▶ Hook in the handset with holder into the belt clip **3** and push it down **4**.

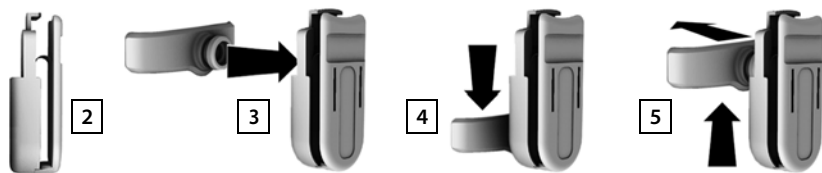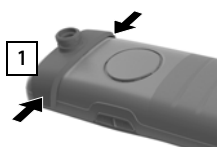


Removing the belt clip:

- ▶ Push the handset up and unhook it from the belt clip **5**.

Connecting the headset

- ▶ Remove the cover from the headset socket.
 - ▶ Connect the headset with 3.5 mm jack to the left side of the handset **1**.
- or
- ▶ Connect headset via Bluetooth (→ p. 50)

Setting the headset volume: → p. 58

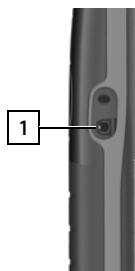

Connecting the USB data cable

For data exchange between the handset and PC:


- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.



- i** Connect the handset **directly** to the PC, **not** via a USB hub.

If you do **not** connect a USB cable, insert the rubber cover (provided) to guarantee protection from splash water.

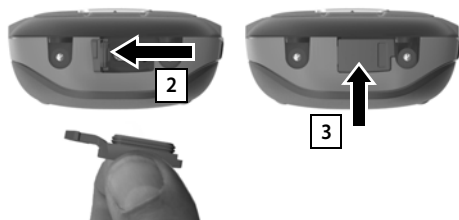

- ▶ Insert the lug of the rubber cover on the left of the opening **2**.
- ▶ Press down the cap of the rubber cover **3**.



Using the telephone


Getting to know your telephone


Switching the handset on/off

- Switch on: ▶ Press and **hold** the End call key  on the handset when switched off
- Switch off: ▶ When the telephone is in idle status, press and **hold** the End call key 

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

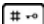Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the symbol  appears in the display.



If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.



Define emergency numbers that can be dialled even when the keypad lock is PIN-protected:

→ p. 61

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key" or  for "press the centre of the control key".

When the phone is idle

Open the main menu

 
Open the directory


Open the list of available online directories (such as the directory of a provider in the Internet or a central directory on a CAT-iq base)


Open the list of handsets

Set the voice volume for receiver / handsfree function


Set the microphone sensitivity



 Press **briefly**

 Press and **hold**



 Press and **hold**

In submenus, selection and entry fields

Confirm a function

Navigate a line up/down

Select an option, move the cursor to the left/right



During a call

Open the directory

Open the list of available online directories (such as the directory of a provider in the Internet or a central directory on a CAT-iq base)


Mute the microphone


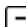
Set the microphone sensitivity

Initiating an internal consultation call

Change the voice volume for receiver / handsfree function

Press and **hold**Press **briefly**Press and **hold**

Depending on base: The assignment of directories to the key  (press **briefly** or for **longer**) can be changed.

Volume keysSet volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ▶Press the volume keys  /  on the right side of the handset**Functions key**

The Function key can be assigned a function of your choice (**Send key / QuickDial / LED torch / Alarm key** and other base-dependent functions).

When the phone is idle or when the screensaver is enabled

▶ Press the key ... The function assigned is performed

QuickDial

Dial the phone number assigned to the button.

LED torch

Turn on/off the torch.

Alarm key

Trigger an action, such as sounding of alarm, flashing of the LEDs, calling of a particular number.

Shorter and longer pressing of the alarm button can cause different actions to be triggered.

 
Send key

Dial a phone number entered previously from the keypad or selected in a call list or the directory (open redial list).

Assign Functions key → p. 36

Display keys

The display keys perform a range of functions depending on the operating situation.



- ▶ Press the Display key . . . The function assigned is performed

Display key icons → p. 73



The display keys have a function preset by default in idle status.

Changing the assignment: → p. 64

LED Torch

Use the phone as a torch. The spot LED is located on the top of the handset.

Activating the torch function

- ▶ Press the display key **LED torch**.

or

- ▶ ▶ **Additional Features** ▶ **OK** ▶ **LED Torch** ▶ **OK**

Deactivating the torch function

- ▶ Press the display key **Off**

or: after 2 minutes the function is automatically deactivated.

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.



The menu guidance depends on the base. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.

Examples: **Audio Settings** may be in the top-level menu or in the **Settings** submenu, while **Calendar** may be in the **Organizer** menu or the **Additional Features** menu.

Select/confirm functions

Confirm selection using

OK or press the centre of the control key

One menu level back using

Back

Change to idle display using

Press and **hold**



Switch function on/off using

Change on / off

Activate/deactivate option using


Select activated / not activated

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶
 select a submenu ▶ **OK**

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

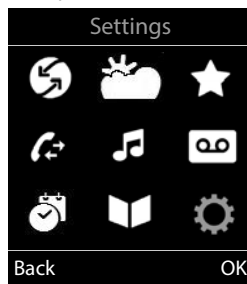

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶  select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**

or

▶ **Briefly** press the End call key 


Returning to idle status

▶ Press and **hold** the End call key 





If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.

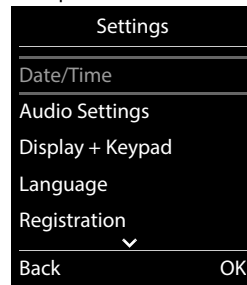Example





Entering text




Input position


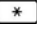

- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

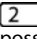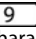Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.


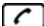
- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash  key
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶  navigate to the desired character ▶ **Insert**




The availability of special characters depends on the language setting.


Making calls

Making a call

▶  enter the number ▶ **briefly** press the Talk key 




or

▶ press and **hold** the Talk key  ▶  enter the number

Cancel dialling: ▶ Press the End call key 

On an IP-capable Gigaset base

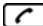The connection is selected via the send connection (line) set for the handset. To use another line:

▶ press and **hold** the Talk key  ▶  select the line ▶ **Dial** ▶  enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Dialling a number from the local directory

▶  open the directory ▶  select an entry ▶ press the Talk key 

If multiple numbers are entered:


▶  select a number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from a public/central directory



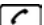
Depending on the base to which the handset is connected, you can dial from a public directory or a central directory on a CAT-iq base.

▶ press and **hold** 


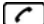
Further information → in the detailed user guide for your telephone

Dialling from the redial list

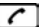

The redial list contains the 20 numbers last dialled with the handset.


▶ **Briefly** press the Talk key  ... the redial list is opened ▶  select an entry ▶ press the Talk key 

If a name is displayed:




▶ **View** ... the number is displayed ▶  browse numbers if necessary ▶ when the desired number is reached press the Talk key 

Managing entries in the redial list

- ▶ Briefly press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ Options ... possible options:

Copy an entry to the directory: ▶  Copy to Directory ▶ OK

Copy the number to the display:






- ▶  Display Number ▶ OK ▶ Use as required  to change or add ▶  save as a new entry in the directory


Delete the selected entry: ▶  Delete Entry ▶ OK


Delete all entries: ▶  Delete List ▶ OK

Dialling from the call list

The call lists (→ p. 23) contain the most recent accepted, outgoing and missed calls.

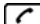- ▶  ▶  Call Lists ▶ OK ▶  select a list ▶ OK ▶  select an entry ▶ press the Talk key 

 The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.


The **Missed Calls** list can also be opened by pressing the Message key .

Anonymous calling

When this function is enabled, your phone number is not sent.

- ▶  ▶  Select Services ▶ OK ▶  select a connection ▶ OK ▶ **Withhold Number** ▶ Edit  = enabled


Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk .

Accepting a call:







- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶ 
- Accept a call on the headset

Switch off ringtone: ▶ **Silent** ... the call can be accepted for as long as it is shown on the display

Reject the call: ▶ Press the End call key 

Setting up Call Divert


When call divert is enabled, incoming calls are forwarded to another connection.

- ▶  ▶  ▶  **Select Services** ▶ **OK** ▶  select a connection ▶ **OK** ▶ **Call Divert** ▶ **OK** ▶  select when call divert is to apply (**All Calls/ When Busy / No Answer**) ▶ **OK** ▶  enter the phone number ▶ **Save Entry**

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine (where the system has a local answer machine):

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ Place the handset in the charging cradle ▶ hold  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset):

- ▶ Press  ▶ use  to set the volume ▶ **Save**




The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone



When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

or: ▶ **Briefly** press the Profile key 

Adjust the microphone sensitivity

Adjust the microphone sensitivity for the receiver or wired headset during a call.

- ▶  press and **hold** ▶  set the required sensitivity ▶ **Save**



Changing without saving means the change only applies for the current call.



Permanent setting of the microphone sensitivity when the phone is idle:

- ▶  press and **hold** ▶  select **Earpiece / Corded headset** ▶  set the sensitivity ▶ **Save**

or

- ▶  ▶  ▶  **Audio Settings** ▶ **OK** ▶  ▶ **OK** ▶  **Mic Sensitivity** ▶ **OK** ▶  select **Earpiece / Corded headset** ▶  set the sensitivity ▶ **Save**

Set the acoustic profile to loud surroundings:

- ▶ Press and **hold** the  button ▶  set the sensitivity ▶ **Save**

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



The base/router to which the handset is registered provides information on call numbers.

Detailed information can be found at → wiki.gigasetpro.com

List entry

The following information is displayed in the list entries::

- The list type (in the header)
- Icon for the type of entry:



Missed Calls






Accepted Calls








Outgoing Calls (redial list)



Call on the answer machine (only for a system with a local answer machine)

- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All Calls	
  Frank	
Today, 15:40	[3]
 089563795	
13.05.22, 18:32	
  Susan Black	
12.05.22, 13:12	
View	Options

Opening the call list






Via the display key: ▶ **Calls** ▶  select list ▶ OK

Via the menu: ▶  ▶  **Call Lists** ▶ OK ▶  select list ▶ OK







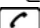






Via the Message key (missed calls):

▶ Press the Message key  ▶  **Missed Calls:** ▶ OK

Calling back a caller from the call list


▶  ▶  **Call Lists** ▶ OK ▶  select list ▶ OK ▶  select entry ▶ Press the Talk key 

Additional options

- ▶  ▶  ▶ **Call Lists** ▶ OK ▶  select list ▶ OK ... possible options:
 - View an entry: ▶  select entry ▶ **View**
 - Number into directory:
 - ▶  select entry ▶ **Options** ▶  **Copy to Directory** ▶ OK
 - Number into black list:
 - ▶  select entry ▶ **Options** ▶  **Copy to Blocklist** ▶ OK
 - Request SMS information about a call number (might require payment):
 - ▶  select entry ▶ **Options** ▶  **SMS Enquiry** ▶ OK
 - Delete an entry:
 - ▶  select entry ▶ **Options** ▶  **Delete Entry** ▶ OK
 - Delete list:
 - ▶ **Options** ▶  **Delete List** ▶ OK ▶ Yes

Message lists

Notifications about missed calls, messages on the answering machine/network mailbox, missed SMS messages and missed alarms are saved in the messages list and can be shown on the handset display.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Activation from the handset is only possible on Gigaset bases. Use the web interface as required for CAT-iq routers. Information → user guide of the base/router.

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

 on the answer machine/network mailbox

 in the missed calls list


 in the SMS message list

 in the missed alarms list



The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Example

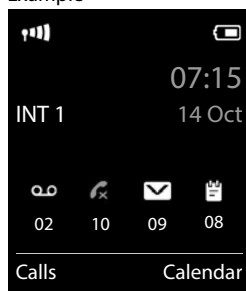


Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed

An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.

An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.

- ▶  Select a list ▶ **OK** ... the calls or messages are listed
Network mailbox: The network mailbox number is dialled.

Example

Messages & Calls	
Missed Appts:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Answer Mach.:	
Back	OK






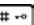



The message list contains an entry for every answering machine assigned to the handset, such as a network mailbox.



Activating/deactivating Message key flashing

Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated for each message type.

In idle status:

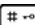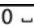- ▶  ▶ Press keys      ... the number 9 appears in the display ▶ use  to select the message type:

Messages on the network mailbox

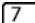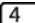▶  

missed calls


▶  

new SMS

▶  

Messages on the answer machine (only for a system with a local answer machine)

▶  

The number 9 followed by the entry (e.g. 975) is displayed, the current setting for the select message type flashes in the entry field (e.g. 0) ▶ use  to set the action for the arrival of new messages:

The Message key flashes

▶ 


The Message key does not flash

▶ 

- ▶ Confirm selected setting with **OK**

or

- ▶ return to idle display without making changes: ▶ **Back**

System	
975 SET:	
	[0]
	
Back	OK

Directories

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets.



Information about online directories on IP-capable bases and central directories on CAT-iq bases → user guide of the base.

Opening the directory

▶ Briefly press in idle status

or

▶ ▶ Contacts ▶ OK ▶ Directory ▶ OK



Changing the assignment of the control key to a directory: → p. 32

Directory entries

Number of entries: up to 200

Information: First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon

Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ switch between the entry fields

Name:

- ▶ enter the first and/or last name

Numbers:

- ▶ Tel.1 - Type ▶ select a number type (**Home**, **Office** or **Mobile**) ▶ ▶ enter a number

Enter more numbers: ▶ toggle between the entry fields

Tel.1 - Type/Tel.2 - Type/Tel.3 - Type ▶ enter a number

Anniversary:

- ▶ activate/deactivate **Anniversary** ▶ enter date and time ▶ select type of alert (**Optical only** or a ringtone)

Caller Melody (VIP):

- ▶ select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Save entry: ▶ Save



The entry is only valid if it contains at least one number.

Example

New Entry	
First Name:	Robert
Surname:	
Tel.1 - Type:	Abc
	▼
< C	Save

Searching for/selecting a directory entry

- ▶ ▶ browse searched names

or

- ▶ ▶ enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and hold

Displaying/changing an entry

- ▶ ▶ select entry ▶ View ▶ select the field to be changed ▶ Edit

or

- ▶ ▶ select an entry ▶ Options ▶ Edit Entry ▶ OK

Deleting entries

Delete the **selected** entry:



- ▶ ▶ select an entry ▶ Options ▶ Delete Entry ▶ OK

Delete **all** entries:

- ▶ ▶ Options ▶ Delete All ▶ OK ▶ Yes

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ Options ▶  Sort by Surname / Sort by First Name

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶  ▶ Options ▶  Available Memory ▶ OK

Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or Options ▶  Copy to Directory ▶ OK ... possible options:

Create a new entry:

▶ <New Entry> ▶ OK ▶  select number type ▶ OK ▶ complete entry ▶ Save

Add number to an existing entry:

▶  select an entry ▶ OK ▶  select number type ▶ OK ... the number is entered or a prompt to overwrite an existing number is displayed ▶ if required, answer the prompt with Yes/No ▶ Save

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.
The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.

The recipient handset does not support vCards

A separate entry is created and sent for each number.

The sending handset does not support vCards

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

▶ ▶ select the desired entry ▶ **Options** ▶ **Copy entry** ▶ **OK** ▶ **to Internal** ▶ **OK** ▶ select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**



Use **vCard via SMS** to send a directory entry in vCard format by SMS.

Copying the entire directory

▶ ▶ **Options** ▶ **Copy all** ▶ **OK** ▶ **to Internal** ▶ **OK** ▶ select the receiving handset ▶ **OK** ... the entries are copied one after the other

Copying a vCard using Bluetooth

Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.



Bluetooth mode is activated

The other handset/mobile phone supports Bluetooth.

▶ ▶ select an entry if needed ▶ **Options** ▶ **Copy entry / Copy all** ▶ **vCard via Bluetooth** ... the **Known Devices** list is displayed ▶ select device ▶ **OK**

Receiving a vCard using Bluetooth

If a device in the **Known Devices** list sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ▶ use  to enter the PIN of the **sending** Bluetooth device ▶ **OK** ... the copied vCard is available as a directory entry

Synchronising the phonebook with the PC address book (Gigaset QuickSync)



The Gigaset QuickSync programme has been installed on the computer.

The handset is connected via Bluetooth or via a USB data cable to the computer.

Free download and further information at → gigaset.com/quicksync

Transferring contacts from other Bluetooth devices

Use the contacts of devices that are connected over Bluetooth, such as smartphones.









Bluetooth is enabled, and the other device is entered as a trustworthy device, connected over Bluetooth and supports the exchange of contacts.

On the smartphone: ▶ From the Bluetooth settings for the Gigaset R700H, enable access to the contacts



The remote directory is only opened for viewing. Changing and deleting entries are not possible.


- ▶  ▶  ▶  **Contacts** ... The list of available directories is displayed ▶  **Bluetooth Directory** ▶ **OK** ... The trustworthy devices with enabled contacts are displayed ▶  Select the required devices ▶ **Select**



Search for a contact: ▶  Scroll through the list or enter the initial letters


See the details: ▶  Select the entry ▶ **View**

Dial a phone number: ▶  Select the entry ▶ Press the Talk key 

or: ▶ **Options** ▶  **Display Number** ▶ **OK**

▶  Select the number if required ▶ **OK**

Transfer a contact: ▶  Select an entry ▶ **Options** ▶  **Copy entry** ▶ **OK** ▶

 Select the phone number as required ▶ **OK**

Transfer another contact: ▶ **Yes**

End a transfer: ▶ **No**


Transfer all contacts: ▶ **Options** ▶  **Copy all** ▶ **OK** ▶  Select the phone number as required ▶ **OK**





Contacts without a phone number are ignored. First and last names and a maximum of three phone numbers are displayed (**Mobile, Home, Office**). Other information is ignored.

The number of contact entries displayed and the sorting order are dependent on the device connected and the access permissions defined on it.

Changing the assignment of the control key to a directory

Briefly press the control key  to open the preferred directory. The default directory is the local one.

The preferred directory is the one

- opened with a  **brief** press of the control key,
- into which a number is transferred using  when it is dialled
- in which a search is performed for the right name for a phone number (such as for an incoming call for showing in the display or when transferring a call to a list)

Change the preferred directory:

- ▶  ▶   **Contacts** ▶ **OK** ▶  **Preferred Directory** ▶ **OK** ▶  **Select Handset Directory or Bluetooth Directory** ▶ **Selection** ( = selected)


Base directory

(depending on the base)

If the DECT base (on a CAT-iq router for example) provides a separate directory, it can also be displayed and edited on the handset.

- ▶  ▶   **Contacts** ▶ OK ▶  **Base Directory** ▶ OK ... The first entry in the phone directory is displayed






or

- ▶ Press and **hold** the Control button 

For information on the base directory: → Documentation relating to your base/router


Transferring contacts

Transfer contacts from the base directory to the local directory (and in the other direction).



- ▶ Press and  **hold** the Control key ▶  **Base Directory / Handset Directory** ▶ OK ▶  Select an entry as required ▶  **Copy entry / Copy all** ▶ OK ▶  **to Handset Directory / to Base Directory** ▶ OK

Assignment of the control key to a directory

Changing the assignment of the control key to a directory






Briefly press the control key  to open the preferred directory. The default directory is the local one.

The preferred directory is the one

- opened with a **brief** press of the control key 
- into which a number is transferred using  when it is dialled
- in which a search is performed for the right name for a phone number (such as for an incoming call for showing in the display or when transferring a call to a list)

The local directory is the default preferred directory.

Changing the preferred directory:






- ▶  ▶   **Contacts** ▶ OK ▶  **Preferred Directory** ▶ OK ▶  **select Handset Directory or Base Directory** ▶ OK

Answer machine



Local answering machine

Some Gigaset bases make available a local answering machine, that you can use from the handset menu. Below is an introduction to the basic functions. For further information → refer to the user guide for the base.






Activate/deactivate the answer machine

- ▶  ▶  **Voice Mail** ▶ OK ▶  **Activation** ▶ OK ▶  select **Answer Machine** (if more than one answer machine is available) ▶ **Change** ▶  select **On** or **Off** ▶ **Save**

Playing back messages

- ▶ Press the Message key  ▶  select an answer machine (if there are messages for several answer machines) ▶ **OK**

Recording a personal announcement/advisory message

- ▶  ▶  **Voice Mail** ▶ OK ▶  **Announcements** ▶ OK ▶  select **Record Announc. or Rec. Advisory Msg.** ▶ OK ▶  select **Answer Machine** (if there are several) ▶ OK ▶ OK ▶ record your announcement message (at least 3 seconds) ... possible options:


Complete the recording and save:

- ▶ **End** ... the announcement is played back for you to check

Repeat the recording:

- ▶ **New**

Cancel the recording:

- ▶ Press the End call key  or **Back**

Resume the recording:

- ▶ **OK**

Changing the language for the voice prompt and default announcement (if available)

- ▶  ▶  **Voice Mail** ▶ OK ▶  **Language** ▶ OK ▶  select your language ▶ **Select**  = selected)

Network mailbox

Each network mailbox accepts incoming calls made via the corresponding line. To record all calls, a network mailbox must be set up for all handset connections.



The network mailbox has been **requested** from the network provider.

A network mailbox might need to be set up on the phone system or in the base configuration.



The network mailbox is automatically called via the corresponding connection. An automatic area code specific to the phone is **not** prefixed.

The network mailbox messages can be played back using the phone's keypad (digit codes). In the configuration of the phone system / base, conversion of the digit codes to the DTMF signals used by the provider must be set.

Enable network mailbox / Enter number

On the handset, you can manage the network mailboxes that are assigned to one of its receive connections.

- ▶ ▶ ▶ Voice Mail ▶ OK ▶ Network Mailbox ▶ OK ▶ select connection if applicable ▶ OK ... then

For a fixed line network/connection

- ▶ enter or amend the network mailbox number ▶ Save



To activate/deactivate the network mailbox for the fixed line network connection use the phone number and a function code of your network provider. Please contact the network provider if you require any further information.


For a VoIP connection

Activate/deactivate network MB:

- ▶ **Status:** select On or Off
- Enter number: ▶ Network Mailbox ▶ enter or amend the network mailbox number

With some VoIP providers, the phone number has already been downloaded together with the general VoIP provider data and saved to the base station.
- Save settings: ▶ Save

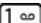

Playing back messages

- ▶ Press and hold 




Key 1 has been assigned to the network mailbox.

or


- ▶ Press the Message key  ▶  select network mailbox (**Net AM: Fixed Line / Mailbox: IP1**) ▶ **OK**

or


- ▶  ▶   **Voice Mail** ▶ **OK** ▶ **Play Messages** ▶ **OK** ▶  select network mailbox (**Net AM: Fixed Line / Mailbox: IP1**) ▶ **OK**

Listen to announcement out loud: ▶ Press the handsfree key 


Set fast access for the answer machine

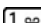It is possible to call a network mailbox or the telephone's local answer machine directly by pressing key .

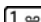


For systems without a local answer machine, the network mailbox is automatically connected with key .

Assigning key 1 / Changing assignment

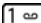


Settings for the fast access are device-specific. A different answer machine can be assigned to key  on each registered handset. The answer machine for the handset's receive connections are offered, e.g. **Net AM: Fixed Line, Mailbox: IP1**.

- ▶  ▶   **Voice Mail** ▶ **OK** ▶  **Set Key 1** ▶ **OK** ▶  select answer machine ▶ **Select** ( = selected)

Return to idle status: ▶ Press and **hold** the End call key 

Network mailbox

If no number has yet been saved for the network mailbox:

- ▶  make a change in the line **Network Mailbox** ▶  enter the number of the network mailbox ▶ **Save** ▶ Press and **hold** the End call key  (idle status)

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The procedure required for your telephone may differ from the procedures described here. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

→ Documentation regarding your base/your router

All Gigaset user guides in PDF format:

→ wiki.gigasetpro.com

Functions button

Assign a function to the Functions button in the top left of the handset.

▶ ▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Feature Key** ▶ OK ... then



Enable/disable: ▶ **Activation:** Select **On** or **Off**

Select function: ▶ **Function** ▶ Select the function ▶ Configure the function-specific settings (see below)

Also lock the Functions button when the keypad lock is enabled:

▶ **Keypad locked** ▶ Select **Key active** or **Key inactive**

Specify a PIN to protect against unauthorised changing of the Functions button assignment:

▶ **Feature Key PIN** ▶ Enter the PIN (max. 8 digits) ... Once a PIN has been entered, it is prompted when the menu entry is accessed **Feature Key**

Save: ▶ **Save**

Using the Functions button → p. 15

Setting up the "QuickDial" function

Assign call number to Functions button.

- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Feature Key ▶ OK ▶
 Activation:  On ▶  Function:  QuickDial

When the earpiece or handsfree function is used for the call initiated:

- ▶  Via ▶ Select  Earphone or  Handsfree









To enter the phone number:

- ▶  Call to ▶  Enter the number or  select it from the directory

Save the settings: ▶ Save

Setting up the "LED torch" function

Turn the torch on/off

- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Feature Key ▶ OK ▶
 Activation:  On ▶  Function:  LED torch ▶ Save

Setting up the "Send key" function

The key works like the Talk key. When the phone is idle, the redial list is opened. It enables for example a phone number entered previously from the keypad (or selected in a call list or directory) to be dialled - even when the keypad is locked.

- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Feature Key ▶ OK ▶
 Activation:  On ▶  Function:  Send key ▶ Save

Setting up the “Alarm key” function

Trigger an action using the Functions button.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Display + Keypad** ▶ OK ▶ ▶ **Feature Key** ▶ OK ▶
Activation: ▶ **On** ▶ **Function:** ▶ **Alarm key**

When the earpiece or handsfree function is used for the call initiated:

- ▶ ▶ **Via** ▶ Select ▶ **Earphone or Handsfree**

Enable Spot LED:

- ▶ ▶ Select **LED blinking** ▶ ▶ **On or Off**

Shorter and longer pressing of the Functions button can cause different actions to be triggered. Configure one after the other the settings for short and long presses.

- ▶ Select ▶ **Short key press / Long key press** ▶ ▶ Select **On or Off** each time

Enter the phone number to which the alarm is forwarded:

- ▶ ▶ **Call to** ▶ ▶ Enter the number or select it from the directory

Specify a delay time between pressing of the button and triggering of the alarm:

- ▶ ▶ **Alarm delay** ▶ ▶ Select the delay time

Specify the alarm melody to be played on the handset after the Functions button is pressed:

- ▶ ▶ **Melody** ▶ ▶ Select the melody

Set the volume for the melody played:

- ▶ ▶ **Volume** ▶ ▶ Select the volume



Save the settings: ▶ **Save**

When the Functions button, configured as an Alarm button, is pressed


- connections currently established for the base are ended
- incoming calls are rejected
- the handset plays the alarm melody over the speaker (if configured)
- the Spot LED flashes in the SOS sequence (if enabled)
- an alarm call is made to the number specified

Sound profiles


The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**. You can use the **Do not disturb** profile to prevent the handset signalling an incoming call.

- ▶ Press the Profile key  ... The profile currently set is shown
- ▶ Switch between profiles using key 


or

- ▶  select a profile ▶ OK

Set the microphone sensitivity to loud surroundings:


- ▶ Press and **hold** the profile key 

Profile "Do not disturb"

- ▶ Set with the profile key 

or

- ▶  ▶  ▶  **Audio Settings** ▶ OK ▶  **Do Not Disturb** ▶ **Change** (= On)

- The idle display shows "**Do not disturb**" **active**. The status bar shows 
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.




An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

If a call arrives while you are using the telephone, the handset can return to idle status (depends on the base).

Sound profiles

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert		On	Same as Profile Personal	Off
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
LED light for a call		Yes	No	No
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ► after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Profile Loud** and **Profile Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2022						
Mo	Tu	We	Th	Fr	Sa	Su
					01	02 03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ **Organizer** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ select desired day ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** select **On** or **Off**
- Enter date: ▶ **Date** ... the selected day has been pre-set ▶ enter new date
- Enter time: ▶ **Time** ▶ enter hours and minutes of the appointment
- Set name: ▶ **Text** ▶ enter a description of the appointment (e.g. evening meal, meeting)
- Set alarm tone: ▶ **Signal** ▶ select the melody of the reminder alarm or deactivate the acoustic signal
- Enter information for the appointment:
- ▶ select successively **Date**, **Time**, **Text** and **Signal** ▶ use or to set the relevant value ▶ **Save**
- Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ **OK** ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **Off**

Respond with SMS: ▶ Press the display key **SMS** ... the SMS menu is displayed



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Appts** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the Message key  ▶  Missed Appts: ▶ OK ▶  browse through the list of any appointments






or

- ▶  ▶  Organizer ▶ OK ▶  Missed Appts ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ Delete

Displaying/changing/deleting stored appointments

- ▶  ▶  Organizer ▶ OK ▶  Calendar ▶ OK ▶  select day ▶ OK ... the appointment list is displayed ▶  select date ... possible options:

Display appointment details:

- ▶ View ... the appointment settings are displayed

Change appointment:


- ▶ View ▶ Edit
- or ▶ Options ▶  Edit Entry ▶ OK

Activate/deactivate appointment:

- ▶ Options ▶  Activate/Deactivate ▶ OK

Delete appointment: ▶ Options ▶  Delete Entry ▶ OK

Delete all appointments for a day:



- ▶ Options ▶  Delete all Appoints. ▶ OK ▶ Yes

Timer

Setting the timer (countdown)


- ▶  ▶  Organizer ▶ OK ▶  Timer ▶ OK ... then

Enable/disable: ▶ Activation:  select On or Off

Set the duration: ▶  Duration ▶ use  to enter the hours and minutes for the timer

Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)

Save the timer: ▶ Save

The timer starts the countdown. In the idle display, icon  and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.

Disabling/repeating the alarm

- Switch off the alarm: ▶ **Off**
- Repeat the alarm: ▶ **Restart** . . . the timer display is displayed again ▶ set another duration as required ▶ **Save** . . . the countdown is restarted

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** . . . then
- Switch on/off: ▶ **Activation:** select **On** or **Off**
- Setting the wake-up time:
- ▶ **Time** ▶ enter hours and minutes
- Set days: ▶ **Occurrence** ▶ switch between **Monday-Friday**, **Once** and **Daily**
- Set the volume: ▶ **Volume** ▶ set volume in 5 levels s or select **crescendo** (increasing volume)
- Set alarm: ▶ **Melody** ▶ select a ringtone for the alarm
- Enter alarm data: ▶ select successively **Time**, **Occurrence**, **Volume** and **Melody** ▶ use or to set the relevant value ▶ **Save**
- Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **Off**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key . . . the alarm is switched off and repeated after 5 minutes.

ECO DECT

(depending on the base)

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

Reducing radiation by up to 80%

▶  ▶  ▶  Settings ▶ OK ▶  ECO DECT ▶ OK ▶ Maximum Range ▶
Change  = deactivated)



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

Deactivating radiation in idle status

▶  ▶  ▶  Settings ▶ OK ▶  ECO DECT ▶ OK ▶  No Radiation ▶
Change  = activated)




To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.

In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.

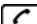▶ Press and **hold** the Talk key  ... the dialling tone sounds.

Protection against unwanted calls

Time control for external calls




Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶ ▶ ▶ **Audio Settings** ▶ OK ▶ **Ringtones (H/Set)** ▶ OK ▶ **Time Control** ▶ **Change...** then
 - Switch on/off: ▶ select **On** or **Off**
 - Enter time: ▶ switch between **Suspend ring. from** and **Suspend ring. until** ▶ enter start and end in 4-digit format
 - Save: ▶ **Save**

Example

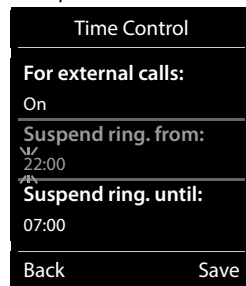

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

For one handset

- ▶ ▶ ▶ **Audio Settings** ▶ OK ▶ **Ringtones (H/Set)** ▶ OK ▶ **Anon. Calls Silent** ▶ **Edit** (= activated) ... the call is only signalled on the display

For all handsets

(only on some Gigaset bases)

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Anonymous Calls** ▶ **Edit** (= activated) ▶ **Protection Mode:**
 - No Protection** Anonymous calls are indicated in the same way as identified numbers.
 - Silent Call** The telephone will not ring and the incoming call will only appear in the display.
 - Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
 - Save settings: ▶ **Save**

Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶  ▶  ▶  **Audio Settings** ▶ OK ▶  **Ringtones (H/Set)** ▶ OK ▶ **Silent Charging** ▶ **Change**  = ringtone is switched off when in charging cradle)








Black list

(only on some Gigaset bases: → wiki.gigasetpro.com)






When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

The black list is enabled when **Silent Call** or **Block Call** is selected as the protection mode.








Displaying/editing the black list

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Blocklist** ▶ **Edit** ▶ **Blocked Numbers** ▶ OK ... the list of blocked numbers is displayed ... possible options:
 - Create an entry: ▶ **New:** use  to enter a number ▶ **Save**
 - Delete an entry: ▶  select an entry ▶ **Delete** ... the entry is deleted

Transferring a number from a call list to the black list

- ▶  ▶  ▶  **Call Lists** ▶ OK ▶  **Accepted Calls/Missed Calls** ▶ OK ▶  select entry ▶ **Options** ▶ **Copy to Blocklist** ▶ OK

Setting the protection mode

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Blocklist** ▶ **Edit** ▶  **Protection Mode** ▶ OK ▶  select desired protection:

No Protection	All calls are indicated, including from callers whose numbers are on the black list.
Silent Call	The telephone will not ring and the incoming call will only appear in the display.
Block Call	The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
- Save settings: ▶ **Save**

Disable the ringtone (do not disturb)

You can use the **Do Not Disturb** function to prevent the handset signalling an incoming call.

▶  ▶  ▶  **Audio Settings** ▶ **OK** ▶  **Do Not Disturb** ▶ **Edit** = enabled)

- The idle display shows "**Do not disturb**" active.
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.



An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

If a call arrives while you are using the phone, the handset can return to idle mode (depends on the base).

Resource Directory

Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ Gigaset QuickSync).

Media types

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Managing images (for screensaver and CLIP) and sounds






- ▶ ▶ **Additional Features** ▶ **OK** ▶ **Resource Directory** ▶ **OK** ... possible options:
 - View image: ▶ **Screensavers / Caller Pictures** ▶ **OK** ▶ select picture ▶ **View** ... the selected picture is displayed
 - Play sound: ▶ **Sounds** ▶ **OK** ▶ select sound ... the selected sound is played
 - Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ select volume ▶ **Save**
 - Rename picture/sound:
 - ▶ **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ select sound/image ▶ **Options** ▶ **Rename** ▶ delete name ▶ enter new name ▶ **Save** ... the entry is saved with the new name
 - Delete picture/sound:
 - ▶ **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ select sound/picture ▶ **Options** ▶ **Delete Entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

- ▶  ▶  ▶  **Additional Features** ▶ OK ▶  **Resource Directory** ▶ OK ▶  **Capacity** ▶ OK ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. to connect a Bluetooth headset or hearing aid.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset or hearing aid



The headset / hearing aid has the **Headset** or **Handsfree profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection to the headset, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 30 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.

In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Bluetooth** ▶ OK ▶  **Activation** ▶ **Change** = activated)
If the local area code is still not saved: ▶  enter local area code ▶ OK

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.

Making a device visible/invisible

When Bluetooth is enabled, the handset is visible to Bluetooth devices in range for 5 minutes. It is then invisible after this time.

Making a device visible again:

- ▶  ▶   **Settings** ▶ OK ▶  **Bluetooth** ▶ OK ▶  **Visibility** ▶ **Change** = enabled)

The  icon in the status bar flashes whilst the handset is visible.







Even when the handset is invisible, requests from devices known as trustworthy are accepted.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



Only one headset / hearing device can be registered. When more than one headset is found, enable the one required using the checkbox = enabled).


- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Search Devices** ▶ OK ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:

Register device: ▶ **Options** ▶  **Trust Device** ▶ OK

The subsequent process is dependent on the device to which the connection is being made. Normally, both devices show the same authentication code.

- ▶ Confirm the authentication code on both devices ... The devices are connected. The device is included in the list of known devices.

Showing information:





- ▶  Select the device as required ▶ **View** ... The device name and address are displayed, as well as functions possible for this device

Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ OK

Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Open the list


- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Known Devices** ▶ OK ... the known devices are listed, an icon indicates the type of device








Bluetooth headset



Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry

- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Known Devices** ▶ OK ▶  select entry ... possible options:

View an entry: ▶ **View** ... the device name and device address are displayed ▶ Press OK to go back


De-registering a device:

- ▶ **Options** ▶ **Delete Entry** ▶ OK

Deregister all devices:

- ▶ **Options** ▶ **Delete List** ▶ OK

Edit name:

- ▶ **Options** ▶ **Edit Name** ▶ OK ▶  edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

When Bluetooth is enabled or Visibility is activated, the handset is only visible to other Bluetooth devices for 5 minutes (→ p. 50). A device is only able to request a connection during this time. Also, a connection can only be established when a register process is started.

- ▶ Start a register process as described in Section **Registering Bluetooth devices**.

Changing the Bluetooth name of the handset


The handset is shown by this name on another Bluetooth device.

- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Own Device** ▶ OK ... the name and the device address are shown ▶ **Change** ▶  change the name ▶ **Save**

Usage as a Bluetooth beacon

The Gigaset R700H can be used as a Bluetooth beacon. It can therefore be used in systems in which BLE (Bluetooth Low Energy) is used for communication, such as for localising the device, asset tracking, use in an alarm system, . . .

The Beacon function is enabled and set up by an Administrator. Which function the handset assumes here is dependent on the system in which it is used.

When the Beacon function is enabled on the handset, the  icon is shown in the status bar. For further information, contact your Administrator.

Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.

Free to download at → www.gigaset.com/quicksync

QuickSync functions:

- Synchronise the contact details of the handset with Microsoft® Outlook® or a Google™ account
- Download from the PC to the handset images for the CLIP display in the directory and for the screensaver
- Download audio files for ringtone melodies from the PC to the handset
- Initiate, take or reject phone calls on the PC
- Update firmware
- Save and restore the handset settings on the PC

For detailed information on all functions: → **Gigaset QuickSync** help system

Registering handset with QuickSync

- ▶ Connecting the handset to the computer via Bluetooth or via a USB data cable.



Connect the handset **directly** to the PC and **not** via a USB hub.



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Start the **Gigaset QuickSync** program on the PC ▶ Add device . . . All devices detected by the program are displayed ▶ Select handset

Transferring data

- ▶ **Phone Explorer** ▶ Select **Screensaver / Caller images / Audio files** ▶ Use the icons in the header to down or upload files - add to or delete from the clipboard

The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Saving and restoring settings

Saving settings:


- ▶ **Save settings** ▶ select which data to save (**images, melodies / settings / contacts, call lists**) (= selected) ▶ **Save settings** ▶ select a storage location in the file system ▶ **OK** ... the data selected is saved (file name extension: .hsdat)

Restore settings:

- ▶ **Save settings** ▶ **Restore settings** ▶ Select a backup file in the file system ▶ **Open** ... the data saved is loaded onto the handset


The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Carrying out a firmware update


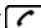
 Firmware updating is only possible via USB.

- ▶ **Update firmware** ... The current firmware version is shown ▶ **Update**


The update process may take up to 10 minutes (not including download time).

 Do not interrupt the process and do not remove the USB data cable.

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.

The display on your telephone is switched off, the Message key  and the Talk key  flash.

Once the update is complete, your telephone will automatically restart.


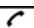
 The firmware can also be updated directly via the DECT radio link if the base/router supports this (→ **Handset Update**).

Procedure in the event of an error

If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery ▶ Re-insert the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery
- ▶ Press and hold keys **4** and **6** at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys **4** and **6** ... the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above



Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.

Setting the handset

Setting the date and time manually

(depending on the base)

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time must be set.



The address of a time server in the Internet is stored in the phone/router. The date and time are taken from this time server provided the phone/router is connected to the Internet and synchronisation with the time server is activated. Manual settings are overwritten in this case.

If the date and time have not yet been set on the handset, the display key **Set Time** appears.

▶ Press the display key **Set Time**

or

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Date/Time** ▶ OK ... then
- Set the date: ▶ **Date:** use to enter the day, month and year in 8-digit format
- Set the time: ▶ **Time** ▶ enter hours and minutes in 4-digit format
- Save settings: ▶ **Save**

Changing the language

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Language** ▶ OK ▶ select language ▶
Select = selected)

If the handset has been set to an incomprehensible language:

- ▶ ▶ Press the keys **slowly** one after the other ▶ select the correct language ▶ press the right display key

Select country

Select the country where you are using the phone. Your selection is used for country-specific defaults.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Country** ▶ OK ▶ select the country ▶ Select = selected)

Display and keypad

Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Screensaver** ▶ **Edit**
(= on) ... then

- Switch on/off: ▶ **Activation:** select **On** or **Off**
- Select screensaver: ▶ **Selection** ▶ select a screensaver (**Digital Clock / Analog Clock / Info Services** / <Pictures> / **Slideshow**)
- View screensaver: ▶ **View**
- Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.



All pictures from the **Screensaver** folder of the **Resource Directory** are available for selection.

End screensaver

▶ Press the End call key briefly ... the display changes to idle status

Notes on displaying Info Services

(only on an IP-capable Gigaset base)



Info Services are activated via the web configurator.
The telephone is connected to the Internet.



If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

(only on an IP-capable Gigaset base)







The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Info Ticker** ▶ **Edit**
(= on)

The text appears as soon as the telephone changes to idle status. If a message is shown in the display, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Large Font ▶ Change  = on)

Colour scheme








You can choose from a range of colour combinations for the display.


- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Colour Schemes ▶ OK ▶  select the desired colour scheme ▶ Select  = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/ charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Display Backlight ▶ OK ▶  select when the setting is applied (In Charger / Out of Charger / In Talk State) ▶ Select in each case with  On or Off ▶ Save

-  The handset's standby time may be significantly reduced if the display backlight is switched on.







Keypad illumination

The keypad has 5 levels of brightness to choose from.

- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Key Illumination ▶ OK ▶  select Intensity (1 - 5) ▶ Save

Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶  ▶  ▶  Settings ▶ OK ▶  Display + Keypad ▶ OK ▶  Auto Keypadlock ▶ Change  = on)

Tones and signals

Call volume

You can set the volume of the earpiece, handsfree function and headset on 5 levels independently of each other.



Changes are only saved permanently in **Profile Personal**.

During a conversation

▶ **Handset Volume** ▶ select volume ▶ **Save** ... the setting is saved

In idle status

▶ **Handset Volume** ▶ select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ select the volume ▶ **Save** ... The setting is saved

or

▶ ▶ **Audio Settings** ▶ **OK** ▶ **Handset Volume** ▶ **OK** ▶ select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ set the volume ▶ **Save**

Automatic volume control

(depending on the base)



Crescendo is **not** set for the ringtone volume (→ p. 59).

The phone is able to automatically adjust the volume of the receiver and ringtone to the ambient volume. Here you can set the sensitivity with which the phone reacts to changes in noise level (**Very High, High, Medium, Low, Very Low**).

▶ ▶ **Audio Settings** ▶ **OK** ▶ **Smart Volume** ▶ **OK** ▶ **Smart Earpiece Vol. / Smart Ringtone Vol.** ▶ **Edit**
 Enable/disable: ▶ **Activation:** select **On** or **Off**
 Adjust the sensor: ▶ **Sensitivity** ▶ adjust the sensor sensitivity
 Save: ▶ **Save**

Headset – volume correction

Change the call volume for the wired headset. In addition to the standard settings for the call volumes, here you can compensate the audio setting characteristics of your headset.

▶ ▶ **Audio Settings** ▶ **OK** ▶ **Corded Hdset Boost** ▶ set the volume ▶ **Save**

Microphone sensitivity

Adjust the sensitivity of the microphone for the receiver or wired headset. This gives you improved acoustics in loud environments and when there are echoes.

- ▶  ▶  ▶  **Audio Settings** ▶ OK ▶ **Mic Sensitivity** ▶ OK ▶  select what the setting applies for (**Earpiece / Corded headset**) ▶  adjust the sensitivity ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶  ▶  ▶  **Audio Settings** ▶ OK ▶  **Acoustic Profiles** ▶  **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶  select profile ▶ **Select** ( = selected)







Earpiece Profiles: **High frequency** or **Low frequency** (default setting)

Handsfree Profiles: **Standard** (default setting) or **Reduced Echo**

Ringtones

Ringtone volume

Set different ringtones for internal and external calls on every available receive connection on the phone (**Fixed Line, IP1, ...**) or set the same ringtone volume for all external calls.

- ▶  ▶  ▶  **Audio Settings** ▶ OK ▶  **Ringtones (H/Set)** ▶ OK ▶ **Volume** ▶ OK ▶  Select **Internal calls and appointments** or external connection ▶  Set the volume on 5 levels or Crescendo (increasing volume) ▶ **Save**



Changes are only saved permanently in **Profile Personal**.



Ringtone melody

Set different ringtones for internal and external calls on every available receive connection on the phone (**Fixed Line, IP1, ...**) or set the same ringtone for all external calls.

- ▶  ▶  ▶  **Audio Settings** ▶ OK ▶  **Ringtones (H/Set)** ▶ OK ▶  **Melodies** ▶ OK ▶  Select **Internal Calls** or connection ▶  Select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off

Switching the ringtone off permanently

- ▶ Use the  key to set the **Profile Silent** ... The following icon appears in the status bar: 


or: Enable "Do not disturb"

- ▶  ▶  **Audio Settings** ▶ **OK** ▶  **Do Not Disturb** ▶ **Change**  = enabled)

Switching the ringtone on permanently

Use the  key to set **Profile Loud** or **Profile Personal**


Switching the ringtone off for the current call

- ▶ **Silent** or press the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Use the Profile key to select  **Profile Silent** ▶ **Press Beep** within 3 seconds ... The following is shown in the status bar: 

Switching off the alert tone: ▶ Use the Profile  key to change profile




Switching the silent alert on/off

Incoming calls and other messages are indicated by a silent alert.

- ▶  ▶  **Audio Settings** ▶ **OK** ▶  **Silent Alert** ▶ **Change**  = on)

Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶  **Audio Settings** ▶ **OK** ▶  **Advisory Tones** ▶ **OK** ... then
Tone when keys are pressed:

- ▶ **Key Tones:**  select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶  select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶  select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:**  select **On** or **Off**


Save settings:

- ▶ **Save**

Auto answer

When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶   **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**
 = activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

Activating/deactivating visual call signal

Visual indication of incoming calls via the spot LED (e.g. in noisy environments).










- ▶  ▶   **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **LED Call Signal** ▶ **Change** = on)




Changes are only saved permanently in **Profile Personal**.

Emergency numbers

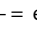






You can enter up to three phone numbers as emergency numbers - that you can also dial when the keypad lock is PIN-protected.

- ▶  ▶   **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Emergency Numbers** ▶ OK ▶  select an entry (--- = empty entry) ▶ **Change** ▶  enter the name for the emergency number ▶  ▶  enter the emergency number ▶ **Save**

Delete entry: ▶  delete the name and phone number ▶ **Save**

Changing the name of a connection (line)



(only on a CAT-iq router)

- ▶  ▶   **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ... all available connections (lines) are displayed ▶  select connection ▶ OK ▶  **Connection Name** ▶ OK ▶  change the name of the connection ▶ **Save**

Assigning handsets to a connection (line)

(only on a CAT-iq router)

Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶  Connections ▶ OK ▶  select connection ▶ OK ▶  Assigned Handsets . . . all registered handsets are displayed ▶  select handset ▶ Change = handset is assigned)

Permit/prevent multiple calls

(only on a CAT-iq router)

If the function is activated, multiple calls can be made in parallel.

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶  Connections ▶ OK ▶  select connection ▶ OK ▶  Multiple Calls ▶ Change = activated)

Permit/prevent internal listening in

(only on a CAT-iq router)

If the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶  Connections ▶ OK ▶  select connection ▶ OK ▶  Listening In ▶ OK ▶ Change = activated)

Show system and line statuses

(only on a CAT-iq base, V2.1 and later)

Showing the system status

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶  Diagnostic ▶ OK ▶  System ▶ OK . . . The System Status is shown (OK or Error)

When there is a system error, show information on the fault cause: ▶ Details

Show line status

- ▶ ▶ ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Diagnostic ▶ OK ▶ Line ▶ OK ... The following status information is shown: **Line Status, Line State, Call Divert**

Show more information (dependent on status): ▶ **Details**

Example: **Line Status = Error**, **Details** shows additional information on the type of fault




Status details are only updated when the relevant menu is accessed. If the status changes during the display, the data is not updated.

Show status messages in idle display

- ▶ ▶ ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Diagnostic ▶ OK ▶ Notifications ▶ OK ▶ System / Line ▶ Select On or Off ▶ Save

If a status display is enabled, relevant messages are shown in the idle display. If there is more than one active message, the one with the highest priority is shown, e.g. **System error** or **Line error** before **Call Divert active**.

Example

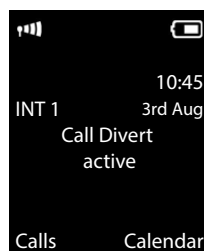

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys and to .



A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ use to select an entry ▶ OK ▶ use to select a number if necessary ▶ OK ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately


or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:

Change the assignment:


- ▶  select an entry ▶ **OK** ▶ select a number if required ▶ **OK**

Delete the assignment:

- ▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶  select the function ▶ **OK** ... The assignment of the display key is changed

Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**



The availability of functions depends on the base.






Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Testing DECT encryption

(depending on the base)

When this function is enabled, the handset tests whether the DECT connection to the base is secure, i.e. is encrypted. If not, a message is shown on the display.

- ▶  ▶   **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Security Check** ▶ **Change** = enabled)



If a repeater without encryption is used, the secure connection test must be disabled.

If, on the base, encryption is disabled at a later time whilst the secure connection test is enabled (because a repeater needs to be connected for example), **Security Info - Press INFO** is shown on the handset.

- ▶ **Info** ... the situation is explained ▶ **Sec. off** ... the secure connection test is disabled

During a call


A sound and a message on the display indicate when encryption is disabled on the base during a call.

Continue call: ▶ **Yes**

Stop call: ▶ **No**

If neither is pressed, the call is stopped automatically after a certain time.



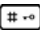




Testing the secure connection status during a call:

- ▶ Press the Hash key  **for a longer time** . . . the secure connection status is shown on the display

Changing the handset PIN

The handset is protected against unauthorised use by a PIN. The handset PIN must be entered e. g. when switching off the keypad lock.

Change the handset's 4-digit PIN (default setting: **0000**):

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset PIN** ▶ OK ▶  enter the current PIN ▶ OK ▶  enter the new handset PIN ▶ OK



If the correct handset PIN is not entered after 5 failed attempts, a 15-second timer is started. Every failed attempt thereafter doubles the timer (up to a maximum delay of 8 hours between PIN entry attempts).

Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).









The base/router to which the handset is registered must also support this function (→ wiki.gigasetpro.com)

If your base/router does not support this function, you can also update the firmware via a USB cable and **Gigaset Quick Sync**.







The phone checks whether new firmware is available for the handset. If it is, a message is displayed.

- ▶ Start the firmware update with **Yes**.

Enable/disable automatic check for new firmware:

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Update** ▶ OK ▶  **Automatic Check** ▶ OK ▶ **Change** (= enabled)







Start the firmware update manually

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Update ▶ OK ▶ OK ... if there is new firmware, the update will start








The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Checking the firmware version

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Current Version ▶ OK ... the firmware version of the handset is displayed

Resetting a handset

Reset any individual settings and changes that you have made.

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset Reset ▶ OK ▶ Yes ... the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists
- SMS lists

Resetting the handset to the default settings

Reset all settings and personal information.

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Erase Handset ▶ OK ▶  enter the current PIN ▶ OK








All user information, lists, the directory and the handset registration with the base are erased. The Registration wizard is started.

Settings for the base

(only on a CAT-iq router)

Changing the base PIN

You need to enter the base PIN when, for example, (de)registering a handset or resetting the base to its default settings.

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Base PIN ▶ OK ▶  enter the current base PIN ▶ OK ▶  enter the new PIN ▶ OK

Displaying base version

The function shows information on the base, such as firmware version, DECT version and name.

▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Base Version ▶ OK

Resetting the base

▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Base Reset ▶ OK ▶ Yes

Appendix

Customer Service & Help

Do you have any questions?

For quick help and information, please refer to this user guide or visit gigaset.com/pro.

For online information and services concerning

- Products
- Documents
- Interop
- Firmware
- FAQ
- Support

please refer to wiki.gigasetpro.com.

For further information our Gigaset specialised reseller will be happy to help you related to your Gigaset product.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Gigaset Communications GmbH hereby declares that the following radio equipment types are in compliance with Directive 2014/53/EU and the Radio Equipment Regulations 2017:

Gigaset R700H PRO

The full text of the EU and UK declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way they are used. (All times are maximum possible times.)

Standby time (hours)	320/180 *
Talktime (hours)	13
Operating time with 1.5 hours of calls per day (hours)	100/85 *
Charging time in charging cradle (hours)	8.5

* With the **No Radiation** function disabled / with the **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 1.50 W
To maintain the charge status:	approx. 0.50 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Power adapter

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C705 / C710
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

The character set used on the handset is dependent on the language set.

Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ğ	ï	í	ì	î	ı
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0		¹⁾ .	,	?	!		²⁾ 0			

- 1) Space
- 2) Line break









Accessories










Name	Item number
Professional belt clip S:	S30852-Z2974-R142

Display icons




The following icons are displayed depending on the settings and the operating status of your telephone.



Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off)
	1% -100% white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator Flashes: Answer machine is recording a message or is being operated by another internal participant (only for a system with a local answer machine)
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated
	Keypad lock activated

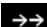




Icon	Meaning
	Bluetooth enabled
	Headset / hearing aid connected via Bluetooth
	Data device connected via Bluetooth
	"Do not disturb" enabled
	Battery charge status: White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%






Display key icons

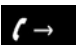Icon	Meaning
	Last number redial
	Delete text
	Open the directory





Icon	Meaning
	Copy number to the directory
	Divert a call to answer machine (only for a system with a local answer machine)




Display icons to indicate . . .

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording (only for a system with a local answer machine)

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Index

-
- A**
- Activating/deactivating message LED 25
 - Advisory tones 60
 - Alarm 43
 - Alarm clock 43
 - switch on/off 43
 - Alert tone (beep) 40, 60
 - Anniversary, see Appointment
 - Answer machine
 - calling back a caller 23
 - playing back messages 35
 - set fast access 35
 - voice prompt language 33
 - Answer, auto 61
 - Appointment
 - display missed 41
 - missed 41
 - notification 41
 - setting 40
 - Assigning key 1 35
 - Assigning number key 63
 - Authorisation 68
 - Auto answer 61
-
- B**
- Base directory 32
 - transferring contacts 32
 - Battery
 - charging status 73
 - inserting 8
 - Beacon 52
 - Beep (alert tone) 40, 60
 - Belt clip 12
 - Best base station 10
 - Black list 46
 - copying a number from a call list 46
 - Bluetooth 49
 - activate 49
 - beacon 52
 - changing the device name 51
 - copy directory (vCard) 29
 - copying directory 30
 - de-register devices 51
 - list of known devices 51
 - making a device visible/invisible 50
 - registering devices 50
 - Broken display 5
-
- C**
- Calendar 40
 - Call
 - external 19
 - Call block 46
 - Call divert 21
 - Call list
 - copying a number to the directory 24
 - delete 24
 - delete an entry 24
 - dialling 20
 - entry 23
 - opening 23
 - Call lists 23
 - Call protection 45
 - protection from 45
 - Calling
 - external 19
 - Care 69
 - Care of the device 69
 - Changing
 - display language 55
 - Changing the device name (Bluetooth) 51
 - Changing the handset PIN 65, 66
 - Character charts 71
 - Charge status of the batteries 73
 - Charging the batteries 9
 - Charging time of handset 70
 - CLIP image
 - view in resource directory 48
 - Colour scheme 57
 - Configuring system messages 62
 - Connecting the charging cradle (handset) 7
 - Connecting the USB data cable 13
 - Connection
 - assigning handset 62
 - changing name 61
 - Contact
 - sending from smartphone 30
 - Contact with liquid 69
 - Contents of the package 7
 - Control key 3, 14
 - Correcting incorrect entries 18
 - Countdown (timer) 42
 - Country 55
 - set 9
 - Customer Care 68
 - Customer Service 68
-
- D**
- Data protection 68
 - Deactivating wireless module 44
 - De-registering devices (Bluetooth) 51
 - Dialling
 - from the call list 20
 - from the directory 19
 - from the redial list 19
 - using quick dial 63

- Directory 26
 copy vCard (Bluetooth) 29
 copying numbers 28
 dialling numbers 19
 entry 26
 memory 28
 opening 26
 order of entries 28
 preferred 31, 32
 saving an entry 27
 searching 27
 selecting an entry 27
 sending entry/list to handset 29
 sending to handset 29
 sending with Bluetooth 30
- Directory key
 change assignment 32
- Directory key, change assignment 31
- Display
 activating/deactivating new message 25
 backlight 57
 broken 5
 changing display language 55
 colour scheme 57
 directory memory 28
 large font 57
 missed appointment/anniversary 41
 network mailbox message 24
 screensaver 56
 setting 56
- Display icons 73
- Display keys 3, 16
 assigning 63
 icons 73
- Display language
 setting 9
- Disposal 69
- "Do not disturb" profile 39
-
- E**
- Earpiece profile 59
- Earpiece volume 21
 automatic 58
- ECO DECT 44
- Emergency numbers 61
 not possible 5
- Encryption, DECT connection 64
- End call key 3, 19
- Entering special characters 18
- Entering text 18
- Entering the number
 of the network mailbox 34
- Entering umlauts 18
- Environment 69
-
- F**
- Fast access 35
- Firmware update 65
- Firmware updates 53
- Functions button
 quick dial 37
- Functions key 3
-
- G**
- Getting started 7
- Gigaset QuickSync 30, 52
-
- H**
- Handset
 assigning connection 62
 automatic keypad lock 57
 changing the settings 55
 colour scheme 57
 connecting the charging cradle 7
 display backlight 57
 display language 55
 handset volume 21
 handsfree volume 21
 idle status 17
 keypad illumination 57
 muting 21
 overview 3
 registering 9
 resetting 66
 restoring to default setting 66
 setting up 8
 switch on/off 14
 update 65
 using as a Bluetooth beacon 52
- Handsfree key 21
- Handsfree mode 21
- Handsfree profile 59
- Handsfree volume 21
- Hash key 3
- Headset (Bluetooth) 49
- Headset connection 3
- Headset socket 12
- Headset volume 58
- Help 68
-
- I**
- Icons
 alarm clock 43
 displaying new messages 24
 indications 74
 on display keys 73
 status bar 73
 timer 42
- Idle display
 status messages 63
- Idle status
 returning to 17
- Illumination, keypad 57
- Indications, icons 74
- Internal listening in 62

-
- K**
- Key 1 (fast access) 3
 - Key, assigning 63
 - Keypad illumination 57
 - Keypad lock, automatic 57
 - Keys
 - control key 3, 14
 - display keys 3, 16
 - end call key 3, 19
 - fast access 3
 - functions key 3
 - handsfree 21
 - hash key 3
 - menu 14
 - message key 3
 - on/off key 3
 - profile key 3, 39
 - recall key 3
 - star key 3
 - talk key 3
 - volume 15
 - volume keys 3
-
- L**
- Language
 - display 55
 - Large font 57
 - LED 3
 - Line 61
 - Liquid 69
 - List
 - known devices (Bluetooth) 51
 - Locking/unlocking the keypad 14
 - Loud surroundings 22
 - Lower/upper case 18
-
- M**
- Making calls
 - external 19
 - Manufacturer's advice 68
 - Maximum Range 44
 - Medical equipment 6
 - Melody
 - ringtone for internal/external calls 59
 - Memory in the directory 28
 - Memory, resource directory 49
 - Menu key 14
 - Message key 3
 - Message lists 24
 - Microphone
 - adjust sensitivity 22, 59
 - switch on/off 21
 - volume 59
 - Missed anniversaries/appointments 41
 - Multiple calls 62
 - Muting the handset 21
-
- N**
- Network mailbox 34
 - activate/deactivate 34
 - defining for fast access 35
 - entering number 34
 - Network MB, see Network mailbox
 - Number
 - copying to the directory 28
 - saving in the directory 27
 - Numbers
 - entering 18
-
- O**
- On/off key 3
 - Open Source Software 79
 - Operating time of handset 70
 - Overview
 - handset 3
-
- P**
- PC Interface 52
 - Picture
 - as CLIP image 48
 - as screensaver 48
 - delete 48
 - formats 48
 - rename 48
 - Play sound 48
 - Power adapter 5, 71
 - Preferred directory 31, 32
 - Profile key 3, 39
 - Profiles 39
 - Protection from calls
 - "Do not disturb" profile 39
 - anonymous 45
 - black list 46
 - switch off ringtone when in charging
 - cradle 46
 - time control 45
-
- Q**
- Quick dial 19, 35
 - QuickSync 30, 52
 - saving and restoring settings 53
-
- R**
- Radiation
 - reducing 44
 - Radiation-free 44
 - Recall key 3
 - Redial list 19, 23
 - Registering (handset) 9
 - Registering device (Bluetooth) 50
 - Resource Directory 48
 - memory 49

- Resource directory
 view CLIP image 48
- Ringtone 59
 automatic volume 58
 changing 59
 melody for internal/external calls 59
 switch off when in charging cradle 46
 time control 45
 volume 59
-
- S**
- Safety precautions 5
- Screensaver 56
- Searching in directory 27
- Sending
 entire directory to handset 29
- Sensitivity
 volume 58
- Setting the date 11, 55
- Setting the time 11, 55
- Setting up the handset 8
- Settings
 saving and restoring with QuickSync 53
- Show line status 63
- Show new messages 24
- Showing the system status 62
- Signal strength 73
- Silent alert 60
- Snooze mode (alarm) 43
- Sound
 delete 48
 formats 48
 playback 48
 rename 48
- Sound profiles 39
- Sounds for ringtones 48
- Speaker 21
- Spot LED 3
 turn on/off 16
- Star key 3
- Status bar 3
 icons 73
- SUOTA 65
- Switch on/off alarm (timer) 43
- Symbols, see Icons 73
-
- T**
- Talk key 3
- Technical data 70
- Telephone
 operating 14
- Time control for external calls 45
- Timer 42
- Torch 3
 switching on and off 16
-
- U**
- Update 53
- Upper/lower case 18
-
- V**
- Viewing network mailbox message 24
- VIP group, classify directory entry 27
- VIP ringtone 27
- Visual call signal 61
- Volume
 earpiece 58
 handset speaker/earpiece volume 21
 headset 58
 speaker 58
- Volume keys 3, 15

All rights reserved. Rights of modification reserved.

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software. The corresponding licence conditions can be found below in their original version.

Licence texts

Copyright (c) 2001, Dr Brian Gladman <>, Worcester, UK.
All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.

Issue Date: 29/07/2002

Issued by

Gigaset Communications GmbH
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2022

Subject to availability.

All rights reserved. Rights of modification reserved.

[gigaset.com/pro](https://www.gigaset.com/pro)