

Gigaset

R700H PRO

N870 IP PRO DECT Multicell System

Up-to-date information on your product: → wiki.gigasetpro.com

Contents


Overview	3
Handset	3
Base	4
Illustration in the user guide	5
Safety precautions	6
Getting started	8
Contents of the package	8
Handset	8
Using the telephone	13
Getting to know your telephone	13
Making calls	18
Call lists	25
Message lists	26
Directories	27
Answering machine	34
Additional functions	35
Functions button	35
Sound profiles	37
Calendar	38
Timer	40
Alarm clock	41
Protection against unwanted calls	42
Resource Directory	44
Bluetooth	45
Additional functions using the PC interface	48
Adjusting the telephone settings	51
Handset	51
Appendix	61
Customer Service & Help	61
Manufacturer's advice	61
Technical data	63
Accessories	65
Display icons	66
Menu overview	68
Index	71
Open Source Software	75



Not all of the functions described in the user guide are available in all countries.

Overview

Handset

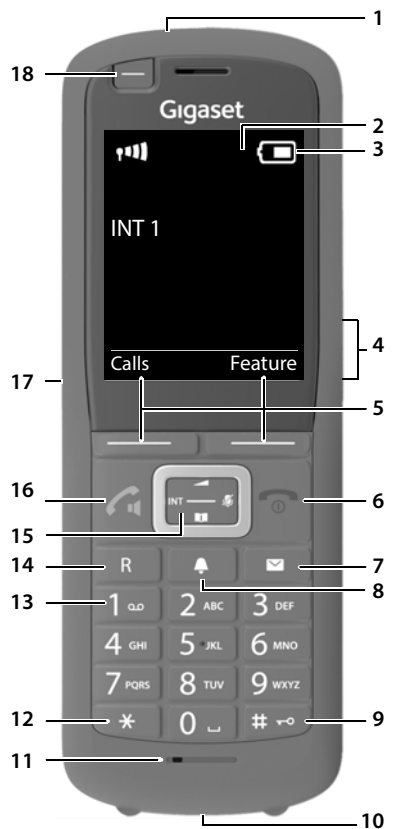

- 1 **Torch (spot LED) / Visual call signal**
- 2 **Display**
- 3 **Status bar** (→ p. 66)
Icons display current settings and operating status of the phone
- 4 **Volume keys** (→ p. 14)
for receiver/headset, ringtone, handsfree mode and appointment reminders
- 5 **Display keys** (→ p. 15)
Various functions, depending on the operating situation

- 6 **End call key / On/off key**
End call; cancel function
Go back one menu level
Return to idle status
▶ Press briefly
▶ Press and hold
▶ Press and hold
Switch the handset on/off (in idle status)
- 7 **Message key** (→ p. 26)
Access to the calls and message lists;
Flashes: new message or new call
- 8 **Profile key**
Switch between sound profiles
- 9 **Hash key**
Lock/unlock the keypad (in idle status) ▶ Press and hold
Toggle between upper/lower case and digits (when inputting text) ▶ Press briefly
- 10 **USB connection socket**
For data exchange between the handset and PC
- 11 **Microphone**
- 12 **Star key**
Open special characters table (when inputting text) ▶ Press briefly
- 13 **Key 1**
Select network mailbox ▶ Press and hold
- 14 **Recall key**
Consultation call (flash) ▶ Press briefly
Insert a dialling pause ▶ Press and hold
- 15 **Control key / Menu key** (→ p. 14)
Open a menu; navigate in menus and entry fields; access functions (depending on the situation)
- 16 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between receiver and handsfree mode
Open the redial list ▶ Press briefly
Start dialling ▶ Press and hold
- 17 **Headset connection**
(3.5 mm jack)
- 18 **Functions key** (→ p. 15)

Base

Your handset is registered with a N870 IP PRO Multicell System, that can comprise many base stations. When you move around with your handset within range of the multi-cell system, the handset automatically connects to the base station having the best connection (roaming). You can also move around freely during a call without the connection being interrupted (handover).

Information on starting and administration of base stations, and on registering a handset with a multi-cell system:

➔ User guide "N870 IP PRO - Installation, configuration and operation"






 
 
 






 

 
 


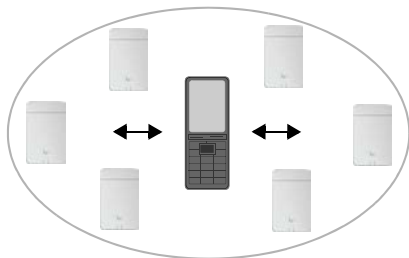Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.



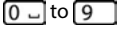



 

 
Keys

 or 	Talk key	 or 	Handsfree key
	End call key		Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		Profile key
OK, Back, Select, Change, Save, ...		Display keys	

Procedures

Example: Switching Auto answer on/off

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶ Auto Answer ▶ Change  = activated)

Symbols	Meaning
▶	Every arrow initiates an action.
▶ 	When in idle status press the centre of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated  /deactivated  .

Safety precautions



Read the safety precautions and the user guide before use.

Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at gigaset.com/pro in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The base and charger are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").



If a USB adapter cable is included, only use a USB power supply (5Volt) with USB-A connection. The use of other voltage sources e.g. PC's with USB connection can cause damage.

If a plug-in power supply is included, please use this power supply.

Getting started

Contents of the package

- One handset
- One battery cover (rear cover for the handset)
- Two batteries
- One charging cradle incl. power adapter
- One belt clip
- One rubber cover for the headset socket
- One rubber cover for the USB connection
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.


Handset

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

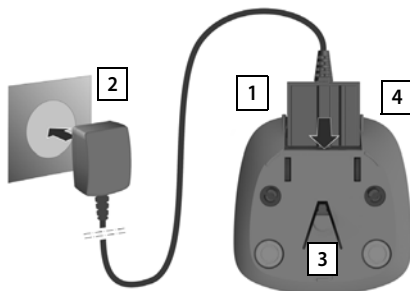

Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**


Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries (for correct +/- direction, see diagram).

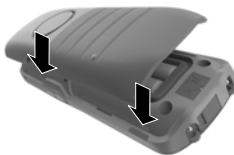


- ▶ Line up the battery cover at the recesses with the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.



- To re-open the battery cover:
 - ▶ Remove the belt clip (if attached).
 - ▶ Use your fingernail to reach into the recess and pull the battery cover up **1**.


Covering the headset socket


- ▶ Plug the lug of the rubber cover for the headset socket into the opening on the left of the handset.
- ▶ Press down the cap of the rubber cover.

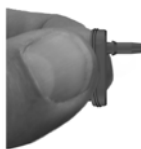

Charging the batteries

 - ▶ Charge the batteries fully prior to first use in the charging cradle or using a standard USB mains adapter.



The batteries are fully charged when the power icon  disappears from the display.



The battery may heat up during charging. This is not dangerous.


After a time, the charge capacity of the battery will decrease for technical reasons.

Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the batteries.

As soon as power is applied to the handset, a Setup wizard starts.

Setting the display language

- ▶ Press the control key  until the language required is selected on the display, e.g. **English** ▶ press the display key **OK**



You can also change the display language later on in the **Settings** menu.

Registering a handset

Register the handset with the Gigaset N870 IP PRO.



Registration must be initiated **both** on the Gigaset N870 IP PRO **and** on the handset. For this, the handset must be within range of the Gigaset N870 IP PRO.

On the Gigaset N870 IP PRO

- ▶ Start the registration process

Information for this:


→ User guide "N870 IP PRO - Installation, configuration and operation"

or: Contact the administrator of the DECT network.







On the handset

You require the 4-digit system PIN (registration code) generated on the Gigaset N870 IP PRO.

If the handset is not yet registered with a base:

- ▶ **Register** ... A search is performed for a base ready for registration ▶  enter the system PIN ▶ **OK**

If the handset is already registered with a base:

- ▶  ▶   **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **Register Handset** ▶ **OK** ...
A search is performed for a base ready for registration ▶  enter the system PIN ▶ **OK**

Once registration is complete, the handset returns to idle mode. Shown on the idle display is the name set on the Gigaset N870 IP PRO for the handset (user name or display name). If it is not, repeat the procedure.

Your phone is now ready for use.



The handset can be registered with up to four base stations. Changing the base:

- ▶ ▶ ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Select Base** ▶ **OK** ▶ select the base ▶ **OK**

Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, use menu option **Basic Registration**. This guarantees correct displays on the handset, but can entail restrictions for some functions.

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.




Professional belt clip (accessory)

Attaching the belt clip:

Press the holder on the back of the handset so that the tabs click into place in the notches **1**.

- ▶ Secure the belt clip on the belt **2**.
- ▶ Hook in the handset with holder into the belt clip **3** and push it down **4**.

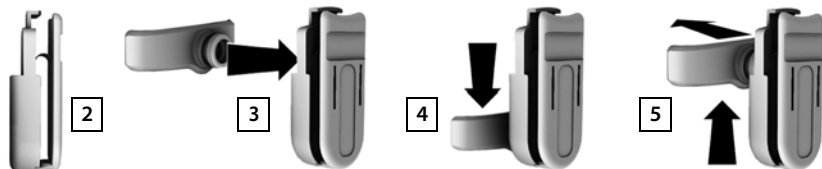

Removing the belt clip:

- ▶ Push the handset up and unhook it from the belt clip **5**.


Connecting the headset

- ▶ Remove the cover from the headset socket.
- ▶ Connect the headset with 3.5 mm jack to the left side of the handset **1**.

or

- ▶ Connect headset via Bluetooth (→ p. 45)

Setting the headset volume: → p. 53

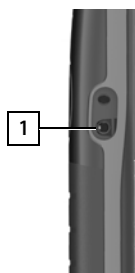

Connecting the USB data cable

For data exchange between the handset and PC:


- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.



i Connect the handset **directly** to the PC, **not** via a USB hub.

If you do **not** connect a USB cable, insert the rubber cover (provided) to guarantee protection from splash water.


- ▶ Insert the lug of the rubber cover on the left of the opening **2**.
- ▶ Press down the cap of the rubber cover **3**.

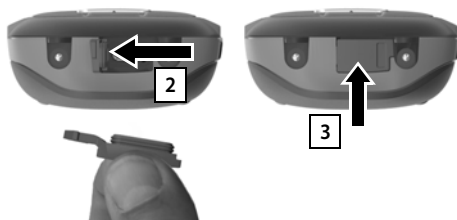


Using the telephone

Getting to know your telephone

 
Switching the handset on/off


Switch on: ▶ Press and **hold** the End call key  on the handset when switched off

Switch off: ▶ When the telephone is in idle status, press and **hold** the End call key 

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the symbol  appears in the display.



If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.



Define emergency numbers that can be dialled even when the keypad lock is PIN-protected:

→ p. 57

Control key

 


The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key" or  for "press the centre of the control key".

When the phone is idle


Open the main menu



 Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)



Open the local directory:

 

Open the company directory

 


This function must be enabled on the Gigaset N870 IP PRO.

Set the voice volume for receiver / handsfree function



Set the microphone sensitivity



In submenus, selection and entry fields

Confirm a function



Navigate a line up/down

 


Select an option, move the cursor to the left/right




During a call

Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)




Open the local directory:

 


Open company directory (if enabled)



 Mute the microphone




Set the microphone sensitivity


 


Change the voice volume for receiver / handsfree function



The assignment of directories to the key  (press **briefly** or **for longer**) can be changed on the Gigaset N870 IP PRO.

  Volume keys

Set volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ▶
Press the volume keys  /  on the right side of the handset

Functions key



The Function key can be assigned a function of your choice (**Send key / QuickDial / LED torch / Alarm key / System function** and other base-dependent functions).

When the phone is idle or when the screensaver is enabled

- ▶ Press the key ... The function assigned is performed

QuickDial

Dial the phone number assigned to the button.

LED torch

Turn on/off the torch.

Alarm key

Trigger an action, such as sounding of alarm, flashing of the LEDs, calling of a particular number.

Shorter and longer pressing of the alarm button can cause different actions to be triggered.

The function can be used with an alarm system. For this, the base establishes a connection to the alarm server. The connection details must be entered in the configuration of the base. What is triggered by pressing the alarm button depends on the configuration on the alarm server. The alarm system can also trigger actions on the handset, such as sound an alarm and show symbols and text on the display.

For information about the alarm system (AML): → wiki.gigasetpro.com

Send key

Dial a phone number entered previously from the keypad or selected in a call list or the directory (open redial list).

 
System function

Activate a function configured on the base.

Assign Functions key → p. 35

Display keys

The display keys perform a range of functions depending on the operating situation.



- ▶ Press the Display key ... The function assigned is performed

Display key icons → p. 66



The display keys have a function preset by default in idle status.

Changing the assignment: → p. 58

LED Torch

Use the phone as a torch. The spot LED is located on the top of the handset.

Activating the torch function

▶ Press the display key **LED torch**.

or

▶  ▶   **Additional Features** ▶ **OK** ▶  **LED Torch** ▶ **OK**

Deactivating the torch function

▶ Press the display key **Off**

or: after 2 minutes the function is automatically deactivated.


Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.

Menu overview → p. 68

Select/confirm functions


Confirm selection using

OK or press the centre of the control key 



One menu level back using

Back

Change to idle display using

 Press and hold

Switch function on/off using


Change on  / off 

Activate/deactivate option using

Select activated  / not activated 


Main menu

In idle status: ▶ Press the **centre** of the control key  ▶

 select a submenu ▶ **OK**

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

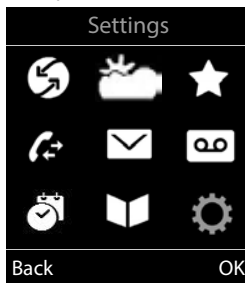

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶  select a function ▶ OK


Return to the previous menu level:

▶ Press the display key **Back**

or

▶ **Briefly** press the End call key 


Returning to idle status

▶ Press and **hold** the End call key 





If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.

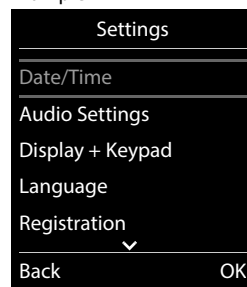Example





Entering text




Input position




- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.


Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash  key
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶  navigate to the desired character ▶ **Insert**

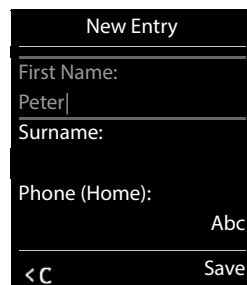

The availability of special characters depends on the language setting.

Making calls

The base stations of the Gigaset N870 IP PRO together form the DECT wireless network of the phone system. You can initiate or answer calls on a handset across the whole wireless network and change base station during a call (handover).



The handset is located in the wireless cell of at least one of the base stations registered with the phone system.

The handset is assigned a send and receive connection.

If the Gigaset N870 IP PRO is connected to a phone system that permits groups to be formed, phone connections can also be assigned to groups. In such cases, you also receive calls on your handset that are sent to your group number.


 
The Gigaset N870 IP PRO uses for telephony a VoIP phone system or the services of a VoIP provider. The availability of some phone functions depends on whether they are supported by the phone system / provider and whether they have been enabled. Contact the operator of your phone system for a description of the features.



Depending on the specifications of your phone system, you may need to dial an area code for calls outside the region covered by your VoIP phone system.

When you use the fixed line network for calls, you might need (depending on provider / phone system) to dial the area code even for local calls. This is not necessary when the area code is entered in the phone configuration.

Making calls

▶  Enter the number ▶  Press **briefly** the Talk key

or

▶  Press and **hold** the Talk key ▶  enter the number

The connection is established over the SIP link assigned to the handset.

 

 
Cancel dialling: ▶  Press the End call key




 
If the display backlight is deactivated, you can reactivate it by pressing any key. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

Dialling from the redial list

 

The redial list contains the 20 numbers last dialled with the handset.

▶  **Briefly** press the Talk key ... The redial list is opened ▶  select the entry ▶ Press the Talk key 

If a name is displayed:

▶ **View** ... The number is displayed ▶ Use as required  to scroll through the numbers ▶ At the phone number required, press the Talk key 




Managing entries in the redial list

- ▶  Briefly press the Talk key ... The redial list is opened ▶  select an entry ▶ **Options** ... Possible options:


Copy entry to directory:

- ▶  **Copy to Directory** ▶ **OK**

Copy the number to the display:

- ▶  **Display Number** ▶ **OK** ▶ Use as required  to change or add ... ▶  save in the directory as a new entry


Delete the selected entry:

- ▶  **Delete Entry** ▶ **OK**

Delete all entries:

- ▶  **Delete List** ▶ **OK**

Set automatic redial:


- ▶  **Automatic Redial** ▶ **OK** ... The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes, "open listening" is activated.

The participant answers: ▶  Press the Talk key ... The function is ended

The subscriber does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.


Dialling from a call list

The call lists (→ p. 25) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶  **Call Lists** ▶ **OK** ▶  select the list ▶ **OK** ▶  select an entry ▶  press the Talk key









The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed Calls** list can also be opened by pressing the Message key .


One touch call

A predefined number is dialled by pressing **any** key. This allows children, who are unable to enter a number, to call a certain number for example.

Enabling one touch call mode:


- ▶  ▶  **Additional Features** ▶ **OK** ▶  **One-Touch Call** ▶ **OK** ▶  enable Activation ▶  **Call to** ▶  enter a number ▶ **Save** ... when the phone is in idle, the enabled one touch calling is displayed

Make a one touch call: ▶ Press any key ... the saved number is dialled

Cancel dialling: ▶ Press the End call  key.

End one touch call: ▶ Press and **hold** the  key

Example

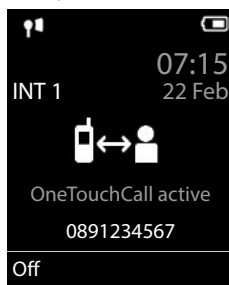

Initiating ringback

If the line of a called subscriber is busy, you can arrange for a ringback (if the phone system or provider supports the CCBS and CCNR services).

CCBS (Completion of Call to busy subscriber)	Ringback when busy
CCNR (Completion of Calls on No Reply)	Ringback when call is not answered

The service code for enabling/disabling CCBS and CCNR must be configured in the provider settings.


Enabling ringback:

- ▶ Enter the service code specified for the phone system / provider, e.g.


If you do not want a ringback, you can disable the function.

- ▶ Enter the service code specified for the phone system / provider, e.g.

Incoming calls

An incoming call for the connection assigned to your handset is indicated by ringing, by a display on the screen and by the flashing Talk / Handsfree key .

The signal light (LED) at the top of the handset also flashes (if enabled).

Accept the call: ▶ Press the Talk key  or ▶ **Accept**

If **Auto Answer** is enabled:

- ▶ Remove the handset from the charging cradle

Disable ringtone: ▶ **Silence** . . . You can accept the call as long as it is displayed on the screen

Reject the call: ▶ Press the End call key 

Information about the caller

If it is sent, the number of the caller is displayed. If the caller's number is saved in a directory, the name is displayed.

Using the Call Manager of the phone system

If a Call Manager is used on the phone system, it is possible to define that incoming calls are accepted directly by headset or handsfree function. This must be configured for the handset on the Gigaset N870 IP PRO.



Group accept

Accept incoming calls for a group of subscribers.

Group accept must be enabled, and the phone number or SIP URI of the group must be entered. This must be configured for the handset on the Gigaset N870 IP PRO.

Accepting/rejecting a waiting call during a call


During an external call, the call waiting tone signals that another party is trying to call you. The number or name of the caller is displayed if the phone number is sent.

- Reject the call: ▶ **Options** ▶  **Reject Waiting Call** ▶ **OK**
 - Accept the call: ▶ **Accept** ▶ Speak to the new caller. The first call is placed on hold.
 - End the call, resume the call on hold:
 - ▶ Press the End call key .
-

Calls with three parties



Consultation calls

During an external phone call, hold another external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶  enter the number of the second party ... The active call is put on hold and the second party is called.


If the second party does not answer: ▶ **End**

Ending a consultation call



- ▶ **Options** ▶  **End Active Call** ▶ **OK** ... The connection to the first caller is reactivated.
- or
- ▶ Press the End call key  ... The first party is called again.
-

Call swapping

Switching between two calls (call swapping). The other call is placed on hold.

- ▶ During an external call, dial the number of a second party (consultation call) or accept a waiting caller ... The display shows the numbers/names of both parties.
- ▶ The control key  enables you to switch between the parties.

Ending a currently active call

- ▶ **Options** ▶  **End Active Call** ▶ **OK** ... The connection to the other caller is reactivated.
- or
- ▶ Press the End call key  ... The first party is called again.
-

Conference call

You can speak to two people simultaneously.

- ▶ During an external call, dial the number of a second party (consultation call) or accept a waiting caller ... Then:


Start the conference call:


- ▶ **Confer.** ... All the callers can hear each other and hold a call with each other.

Switching back to call swapping:

- ▶ **End Conf.** . . . You are reconnected to the party with whom the conference call was initiated.



End call with both participants:

- ▶ Press the End call key 

Each party can end their participation in the conference call by pressing the End call key  or hanging up.

Transferring a call to another party

Transfer a call to another party (connect).

- ▶ Use the Display key **Ext. Call** to start an external consultation call ▶  enter the number of the second party . . . The active call is put on hold . . . The second party is called ▶ Press the End call key  (during the call or before the second party has answered) . . . The call is forwarded to the second party.




The options for transferring calls must be set up correctly for the phone system.

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ Place the handset in the charging cradle ▶ hold  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset):

- ▶ Press  ▶ use  to set the volume ▶ **Save**




The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

or: ▶ **Briefly** press the Profile key 

Adjust the microphone sensitivity

Adjust the microphone sensitivity for the receiver or wired headset during a call.

- ▶ press and **hold** ▶ set the required sensitivity ▶ **Save**

Changing without saving means the change only applies for the current call.

Permanent setting of the microphone sensitivity when the phone is idle:

- ▶ press and **hold** ▶ select **Earpiece / Corded headset** ▶ set the sensitivity ▶ **Save**

or

- ▶ ▶ **Settings** ▶ **OK** ▶ **Audio Settings** ▶ **OK** ▶ **Mic Sensitivity** ▶ **OK** ▶ select **Earpiece / Corded headset** ▶ set the sensitivity ▶ **Save**

Set the acoustic profile to loud surroundings:

- ▶ Press and **hold** the button ▶ set the sensitivity ▶ **Save**

Network services

Network services are dependent on the phone system and network provider.

To activate/deactivate the features, a code is sent to the telephone network.

Deactivating Calling Line Identification for the next call

By default for an outgoing call, the phone number is sent and can be shown with the caller on the display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously.

- ▶ ▶ **Select Services** ▶ **OK** ▶ **Next Call anon.** ▶ **OK** ▶ enter the number ▶ **Dial** ... The connection is established without CLI

Call divert

When call divert is enabled, incoming calls are forwarded to another connection.

- ▶ ▶ **Select Services** ▶ **OK** ▶ **Call Divert** ▶ **OK** ▶ select when call divert is to apply ▶ **OK**

- All Calls:** Calls are forwarded immediately.
- No Answer:** Calls are diverted if no one accepts the call within several rings.
- When Busy:** Calls are diverted if the line is busy.
- Enable/disable: ▶ **Status:** select **On** or **Off**
- Enter the number for call divert:
 - ▶ **To Phone Number** ▶ enter the number
 - ▶ **Send**

Call waiting

During a call, a call waiting tone indicates another caller. If the number is being transferred, you see the number or the name of the caller on the display.

Reject waiting caller: ▶ **Reject** ... The waiting caller hears the busy tone

Accepting a call: ▶ **Accept**

Once you have accepted the waiting call, you can switch between the two parties (**Call Swap**) or speak to them both at the same time (**Conference**).

Prevent/permit call waiting

▶  ▶   **Select Services** ▶ **OK** ▶  **Call Waiting** ▶ **OK**

Enable/disable: ▶ **Status:**  select **On** or **Off**

Enable: ▶ **Send**

Do not put through call

When you do not want to be disturbed, you can arrange for no more calls to be put through.

▶  ▶   **Select Services** ▶ **OK** ▶  **Do Not Disturb** ▶ **OK**

Enable/disable: ▶ **Status:**  select **On** or **Off**

Enable: ▶ **Send**


Cancelling ringback

After you have initiated a ringback, you can cancel it before the other party calls back.

▶  ▶   **Select Services** ▶ **OK** ▶  **Ringback off** ▶ **OK** ... You receive a confirmation from the phone network ▶ Press the End call key 



You can only activate one ringback at a time. Activating a ringback will automatically cancel any ringback that is already active.

If the ringback is indicated before you are able to cancel it: ▶ Press the End call key 

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



To display the numbers of missed and received calls in the call lists, the relevant option must be enabled on the Gigaset N870 IP PRO.

List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
 - Missed Calls**
 - Accepted Calls**
 - Outgoing Calls** (redial list)
- Caller's number. If the number is stored in the directory, the name and number type (**Phone (Home)**, **Phone (Office)**, **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All Calls	
Frank	Today, 15:40 [3]
089563795	13.05.22, 18:32
Susan Black	12.05.22, 13:12
View	Options

Opening the call list

Via the display key: **Calls** select list OK

Via the menu: **Call Lists** OK select list OK

Via the Message key (missed calls):

Press the Message key **Missed Calls:** OK

Calling back a caller from the call list

Call Lists OK select list OK select entry Press the Talk key

Additional options

Call Lists OK select list OK ... possible options:

View an entry: select entry **View**

Number into directory:

select entry **Options** **Copy to Directory** OK

Delete an entry: select entry **Options** **Delete Entry** OK


Delete list: **Options** **Delete List** OK Yes

Message lists

Notifications about missed calls, messages on the network mailbox and missed alarms are saved in the messages list and can be shown on the handset display.

Which messages are shown on the handset are defined in the configuration of the handset on the Gigaset N870 IP PRO.

Counter for missed calls: When the option is enabled, the number of missed calls in idle mode is shown on the handset display.

Message Waiting Indicator (MWI): For every message type (missed call, missed alarm, new message on the network mailbox), the MWI can be disabled/enabled on the Gigaset N870 IP PRO. If the option is enabled, the LED on the Message key , flashes when a new notification arrives for a message type enabled.

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

 on the network mailbox

 in the missed calls list

 in the missed alarms list




The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed

An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.


An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.

- ▶  Select a list ▶ **OK** ... the calls or messages are listed
Network mailbox: The network mailbox number is dialed.




The message list contains an entry for every answering machine assigned to the handset, such as a network mailbox.

Example

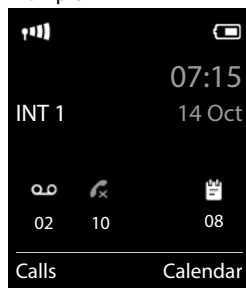

Example

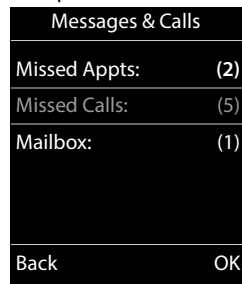

Directories

The following directories are available:


- The (local) directory on the handset
- Company directories provided over a server
- Online directories made available by public providers

The local directory is always available. Which other directories are available is defined by Gigaset N870 IP PRO.

Open directories

Open directories with the Directory key

- ▶ Press the Directory key  (bottom of control key)

The  key is normally assigned as follows:

- Press **briefly** to open the selection of available online directories.
- Press and **hold** to open the local directory,

This assignment can be changed for every handset from the Gigaset N870 IP PRO. Direct access (press briefly) can be assigned to a specific online directory. In this case, open the local directory by pressing and holding the Directory key .

Opening directories via the menu

Local directory:

- ▶  ▶   Directory ▶ OK

List of all online directories set up on the phone system

- ▶  ▶   Network Directory ▶ OK

The directories are shown with the names specified on the Gigaset N870 IP PRO.

Opening the company directory using the INT key

A company directory is available if it has been set up on the Gigaset N870 IP PRO and when the phone system has access to this directory. The directory to open with the INT key can be set separately for every handset.

- ▶ Press the INT key  (left of control key)



It is not possible to transfer entries from the local directory to another handset.

Local handset directory

The local directory is unique to the handset.

Directory entries

- Number of entries: Maximum 200
- Information: First and last names, up to three phone numbers, anniversary with signalling, VIP ringtone with VIP icon
- Length of the entries: Numbers: max. 32 digits
First and last names: max. 16 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ switch between the entry fields
- Name:
 - ▶ enter the first and/or last name
- Numbers:
 - ▶ Tel.1 - Type ▶ select a number type (Home, Office or Mobile) ▶ ▶ enter a number
- Enter more numbers: ▶ toggle between the entry fields
- Tel.1 - Type/Tel.2 - Type/Tel.3 - Type ▶ enter a number

Anniversary:

- ▶ activate/deactivate **Anniversary** ▶ enter date and time ▶ select type of alert (**Optical only** or a ringtone)

Caller Melody (VIP):

- ▶ select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Caller Picture:

- ▶ select a picture that is to be displayed during a call from the participant (→ Resource Directory).

Save entry: ▶ Save



The entry is only valid if it contains at least one number.

Example

New Entry	
First Name:	Robert
Surname:	
Tel.1 - Type:	Abc
	▼
< C	Save






For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

Searching for/selecting a directory entry

▶  ▶  browse searched names

or

▶  ▶  enter initial letters (max. 8 letters) . . . the display jumps to the first name starting with these initial letters ▶  continue browsing to the desired entry, if needed

Scroll through directory: ▶  ▶ Press and hold 

Displaying/changing an entry




▶  ▶  select entry ▶ **View** ▶  select the field to be changed ▶ **Edit**

or

▶  ▶  select an entry ▶ **Options** ▶ **Edit Entry** ▶ **OK**

Deleting entries

Delete the **selected** entry:


▶  ▶  select an entry ▶ **Options** ▶  **Delete Entry** ▶ **OK**

Delete **all** entries:

▶  ▶ **Options** ▶  **Delete All** ▶ **OK** ▶ **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ **Options** ▶  **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶  ▶ **Options** ▶  **Available Memory** ▶ **OK**

Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or **Options** ▶  **Copy to Directory** ▶ **OK** ... possible options:

Create a new entry:

▶ **<New Entry>** ▶ **OK** ▶  select number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:

▶  select an entry ▶ **OK** ▶  select number type ▶ **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ▶ if required, answer the prompt with **Yes/No** ▶ **Save**






Copying a vCard using Bluetooth

Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.



Bluetooth mode is activated

The other handset/mobile phone supports Bluetooth.

▶  ▶  select an entry if needed ▶ **Options** ▶  **Copy entry / Copy all** ▶  **vCard via Bluetooth** ... the **Known Devices** list is displayed ▶  select device ▶ **OK**

Receiving a vCard using Bluetooth

If a device in the **Known Devices** list sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ▶ use  to enter the PIN of the **sending** Bluetooth device ▶ **OK** ... the copied vCard is available as a directory entry

Synchronising the phonebook with the PC address book (Gigaset QuickSync)



The Gigaset QuickSync programme has been installed on the computer.

The handset is connected via Bluetooth or via a USB data cable to the computer.

Free download and further information at → gigaset.com/quicksync

Transferring contacts from other Bluetooth devices

Use the contacts of devices that are connected over Bluetooth, such as smartphones.



Bluetooth is enabled, and the other device is entered as a trustworthy device, connected over Bluetooth and supports the exchange of contacts.

On the smartphone: ▶ From the Bluetooth settings for the Gigaset N870 IP PRO, enable access to the contacts



The remote directory is only opened for viewing. Changing and deleting entries are not possible.

- ▶ ▶ ▶ **Contacts** ... The list of available directories is displayed ▶ **Bluetooth Directory** ▶ **OK** ... The trustworthy devices with enabled contacts are displayed ▶ Select the required devices ▶ **Select**

Search for a contact: ▶ Scroll through the list or enter the initial letters

See the details: ▶ Select the entry ▶ **View**

Dial a phone number: ▶ Select the entry ▶ Press the Talk key

or: ▶ **Options** ▶ **Display Number** ▶ **OK**

▶ Select the number if required ▶ **OK**

Transfer a contact: ▶ Select an entry ▶ **Options** ▶ **Copy entry** ▶ **OK** ▶

Select the phone number as required ▶ **OK**

Transfer another contact: ▶ **Yes**

End a transfer: ▶ **No**

Transfer all contacts: ▶ **Options** ▶ **Copy all** ▶ **OK** ▶ Select the phone number as required ▶ **OK**



Contacts without a phone number are ignored. First and last names and a maximum of three phone numbers are displayed (**Mobile, Home, Office**). Other information is ignored.

The number of contact entries displayed and the sorting order are dependent on the device connected and the access permissions defined on it.

Company directory

If company directories (LDAP) are set up on the Gigaset N870 IP PRO, they are available on the handset with the following functions:


- Scroll through directory or search directory entries
- Show directory entries with details (no editing or deleting)
- Select phone numbers directly from the directory
- Transfer directory entries to the local directory

When a phone number is entered or there is an incoming call, a search of the directory is automatically performed for an entry matching the phone number. When an entry is found, the name is displayed instead of the phone number.

Show the company directory on the phone display

The company directory is assigned to the INT key: ▶ Press 




Depending on the setting on the Gigaset N870 IP PRO, you can also access a company directory from the directory key .

Directory entries

The following description is an example company directory display on a handset.

The menu shows all the directories that have been set up on the Gigaset N870 IP PRO and activated with the name assigned in each case. In the example on the right, the directory is displayed as **Our directory**.

▶  Select the directory ▶ **OK**

The phone performs a query on the LDAP server.


The directory is shown in accordance with the following rules:

- The search starts in the (sub)directory defined as the search basis on the LDAP server.
- The entries are listed in alphabetical order.
- Entries are displayed with **Surname** and **First name** when both attributes are available in the LDAP database. Otherwise only the last name or first name is displayed.


Directories	
Our directory	
Directory 3	
Directory 4	
Directory 5	
Directory 6	
Back	OK

Our directory	
Albert	
Bond	
Bond, Agnes	
Bond, Paul	
Brown, Susan	
View	Options


Search directory

- ▶  Scroll through the directory

or

- ▶  Enter a name (or its starting letters)

As soon as you press a key on the keypad, the phone switches to search mode. You can enter up to 15 characters. All directory entries matching your entry are displayed.


- Delete recent characters ▶ 

b
Bond
Bond, Agnes
Bond, Paul
Brown, Susan
< C Options

br
Brown, Susan
< C Options

The current search term is shown in the topmost line.

Displaying a directory entry


- ▶  Select the required entry


- ▶ Press **View** or 

or

- ▶ **Options** ▶ **View**


The directory entry is shown with detailed information.


- ▶  Scroll through entry

- Close entry: ▶ **Back** or press the End call key 


Brown, Susan
Surname: Brown
First name: Susan
Phone (home): 1234567890
Back

Select a number from the directory

- ▶  Select the required entry

- ▶ Press the Talk key  ... If only one phone number is stored, it is dialed. If there are two or more numbers, they are shown in a selection list.

or

- ▶  Select the required phone number from the detailed view of the entry: **Phone (home)**, **Phone (office)** or **Phone (home)**

- ▶ Press the Talk key  ... The number is dialed

Brown, Susan
Phone (office): 0987654321
Phone (mobile): 0908987876
Street: Avenue 12
Back

Answering machine

The answering machine takes incoming calls for the handset.

Requirements

The following settings are required so that you can receive and listen to voice messages:

On the phone system

- ▶ A network mailbox is set up for the connection assigned to the handset.

On the Gigaset N870 IP PRO

- ▶ In the phone system configuration, the system for receiving notifications is registered for new messages on the network mailbox.

On the handset

- ▶ In the handset configuration, the phone number is entered and the network mailbox is enabled.

If necessary, contact the administrator of the DECT network.


Enter/change numbers from the handset

- ▶  ▶   Voice Mail ▶ OK ▶  Network Mailbox ▶ OK ▶  enter or change the number of the network mailbox ▶ Save

Play messages on the handset


- ▶ Press and hold the  button

or

- ▶ Press the Messages  key ▶ OK

or

- ▶  ▶   Voice Mail ▶ OK ▶ Play Messages ▶ OK

Listen to announcement over speaker: ▶ Press the Speaker  button

Additional functions

Functions button

Assign a function to the Functions button in the top left of the handset.

- ▶ ▶ ▶ Settings ▶ OK ▶ Display + Keypad ▶ OK ▶ Feature Key ▶ OK... then



- Enable/disable: ▶ **Activation:** Select **On** or **Off**
- Select function: ▶ **Function** ▶ Select the function ▶ Configure the function-specific settings (see below)

Also lock the Functions button when the keypad lock is enabled:

- ▶ **Keypad locked** ▶ Select **Key active** or **Key inactive**

Specify a PIN to protect against unauthorised changing of the Functions button assignment:

- ▶ **Feature Key PIN** ▶ Enter the PIN (max. 8 digits) ... Once a PIN has been entered, it is prompted when the menu entry is accessed **Feature Key**

- Save: ▶ **Save**

Using the Functions button → p. 15

Setting up the “QuickDial” function

Assign call number to Functions button.

- ▶ ▶ ▶ Settings ▶ OK ▶ Display + Keypad ▶ OK ▶ Feature Key ▶ OK ▶ **Activation:** **On** ▶ **Function:** **QuickDial**

When the earpiece or handsfree function is used for the call initiated:

- ▶ **Via** ▶ Select **Earphone** or **Handsfree**

To enter the phone number:

- ▶ **Call to** ▶ Enter the number or select it from the directory

- Save the settings: ▶ **Save**

Setting up the “LED torch” function

Turn the torch on/off

- ▶ ▶ ▶ Settings ▶ OK ▶ Display + Keypad ▶ OK ▶ Feature Key ▶ OK ▶ **Activation:** **On** ▶ **Function:** **LED torch** ▶ **Save**

Setting up the “Send key” function

The key works like the Talk key. When the phone is idle, the redial list is opened. It enables for example a phone number entered previously from the keypad (or selected in a call list or directory) to be dialled - even when the keypad is locked.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Feature Key** ▶ OK ▶
 Activation: **On** ▶ **Function:** **Send key** ▶ **Save**

Setting up the “Alarm key” function

Trigger an action using the Functions button.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Feature Key** ▶ OK ▶
 Activation: **On** ▶ **Function:** **Alarm key**

When the earpiece or handsfree function is used for the call initiated:

- ▶ **Via** ▶ Select **Earphone or Handsfree**

Enable Spot LED:

- ▶ Select **LED blinking** ▶ **On or Off**

Shorter and longer pressing of the Functions button can cause different actions to be triggered. Configure one after the other the settings for short and long presses.

- ▶ Select **Short key press / Long key press** ▶ Select **On or Off** each time

Enter the phone number to which the alarm is forwarded:

- ▶ **Call to** ▶ Enter the number or select it from the directory

Specify a delay time between pressing of the button and triggering of the alarm:

- ▶ **Alarm delay** ▶ Select the delay time

Specify the alarm melody to be played on the handset after the Functions button is pressed:

- ▶ **Melody** ▶ Select the melody

Set the volume for the melody played:

- ▶ **Volume** ▶ Select the volume

Save the settings: ▶ **Save**

When the Functions button, configured as an Alarm button, is pressed

- connections currently established for the base are ended
- incoming calls are rejected
- the handset plays the alarm melody over the speaker (if configured)
- the Spot LED flashes in the SOS sequence (if enabled)
- an alarm call is made to the number specified



The phone number routed to the alarm system can also be assigned as a quick dial number on the Digits or a Display button.

Setting up the "System action" function



The function is supported by the base and is configured for the handset.

With this function you are able to select a function configured on the base as a system action. In this case, the Function key only works as a button in line with the conditions defined in the configuration. What is triggered by pressing the alarm button depends on the configuration on the alarm server.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Display + Keypad** ▶ OK ▶ ▶ **Feature Key** ▶ OK ▶ **Activation:** ▶ **Function:**

Sound profiles

The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**. You can use the **Do not disturb** profile to prevent the handset signalling an incoming call.

- ▶ Press the Profile key ... The profile currently set is shown
- ▶ Switch between profiles using key

or

- ▶ select a profile ▶ OK

Set the microphone sensitivity to loud surroundings:

- ▶ Press and **hold** the profile key

Profile "Do not disturb"

- ▶ Set with the profile key

or

- ▶ ▶ ▶ **Audio Settings** ▶ OK ▶ ▶ **Do Not Disturb** ▶ **Change** (= On)

- The idle display shows "**Do not disturb**" **active**. The status bar shows
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.




An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Sound profiles

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert		On	Same as Profile Personal	Off
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
LED light for a call		Yes	No	No
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ► after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Profile Loud** and **Profile Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2022						
Mo	Tu	We	Th	Fr	Sa	Su
					01	02 03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ▶ **Organizer** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ select desired day ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** select **On** or **Off**
- Enter date: ▶ **Date** ... the selected day has been pre-set ▶ enter new date
- Enter time: ▶ **Time** ▶ enter hours and minutes of the appointment
- Set name: ▶ **Text** ▶ enter a description of the appointment (e.g. evening meal, meeting)
- Set alarm tone: ▶ **Signal** ▶ select the melody of the reminder alarm or deactivate the acoustic signal
- Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ **OK** ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **Off**



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Appts** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the Message key  ▶  Missed Appts: ▶ OK ▶  browse through the list of any appointments






or

- ▶  ▶  Organizer ▶ OK ▶  Missed Appts ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ Delete

Displaying/changing/deleting stored appointments

- ▶  ▶  Organizer ▶ OK ▶  Calendar ▶ OK ▶  select day ▶ OK ... the appointment list is displayed ▶  select date ... possible options:

Display appointment details:

- ▶ View ... the appointment settings are displayed

Change appointment:


- ▶ View ▶ Edit
- or ▶ Options ▶  Edit Entry ▶ OK

Activate/deactivate appointment:

- ▶ Options ▶  Activate/Deactivate ▶ OK

Delete appointment: ▶ Options ▶  Delete Entry ▶ OK

Delete all appointments for a day:



- ▶ Options ▶  Delete all Appoints. ▶ OK ▶ Yes

Timer

Setting the timer (countdown)


- ▶  ▶  Organizer ▶ OK ▶  Timer ▶ OK ... then

Enable/disable: ▶ Activation:  select On or Off

Set the duration: ▶  Duration ▶ use  to enter the hours and minutes for the timer

Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)

Save the timer: ▶ Save

The timer starts the countdown. In the idle display, icon  and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.

Disabling/repeating the alarm

- Switch off the alarm: ▶ **Off**
- Repeat the alarm: ▶ **Restart** . . . the timer display is displayed again ▶ set another duration as required ▶ **Save** . . . the countdown is restarted

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ Organizer ▶ OK ▶ Alarm Clock ▶ OK . . . then
- Switch on/off: ▶ **Activation:** select **On** or **Off**
- Setting the wake-up time:
- Set days: ▶ **Time** ▶ enter hours and minutes
- Set the volume: ▶ **Volume** ▶ set volume in 5 levels s or select **crescendo** (increasing volume)
- Set alarm: ▶ **Melody** ▶ select a ringtone for the alarm
- Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

- Deactivate the alarm: ▶ **Off**
- Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key . . . the alarm is switched off and repeated after 5 minutes.

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶ ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (H/Set) ▶ OK ▶ Time Control ▶ Change ... then
 - Switch on/off: ▶ select On or Off
 - Enter time: ▶ switch between Suspend ring. from and Suspend ring. until ▶ enter start and end in 4-digit format
 - Save: ▶ Save

Example



The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed.

- ▶ ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (H/Set) ▶ OK ▶ Anon. Calls Silent ▶ Edit = on) ... the call is only signalled on the display




Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶ ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (H/Set) ▶ OK ▶ Silent Charging ▶ Change = ringtone is switched off when in charging cradle)

Disable the ringtone (do not disturb)

You can use the **Do Not Disturb** function to prevent the handset signalling an incoming call.

- ▶  ▶  **Audio Settings** ▶ **OK** ▶  **Do Not Disturb** ▶ **Edit** = enabled)
- The idle display shows "**Do not disturb**" active.
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.



An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Resource Directory
















Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ Gigaset QuickSync).

Media types

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

 If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Managing images (for screensaver and CLIP) and sounds





- ▶  ▶   **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK** ... possible options:
 - View image: ▶  **Screensavers / Caller Pictures** ▶ **OK** ▶  select picture ▶ **View** ... the selected picture is displayed
 - Play sound: ▶  **Sounds** ▶ **OK** ▶  select sound ... the selected sound is played
 - Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶  select volume ▶ **Save**
 - Rename picture/sound:
 - ▶  **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶  select sound/image ▶ **Options** ▶ **Rename** ▶  delete name ▶  enter new name ▶ **Save** ... the entry is saved with the new name
 - Delete picture/sound:
 - ▶  **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶  select sound/picture ▶ **Options** ▶ **Delete Entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

- ▶  ▶  **Additional Features** ▶ OK ▶  **Resource Directory** ▶ OK ▶  **Capacity** ▶ OK ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. to connect a Bluetooth headset or hearing aid.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset or hearing aid



The headset / hearing aid has the **Headset** or **Handsfree profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection to the headset, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 30 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.

In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

- ▶  ▶   **Settings** ▶ OK ▶  **Bluetooth** ▶ OK ▶  **Activation** ▶ **Change** = activated)
- If the local area code is still not saved: ▶  enter local area code ▶ OK

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.

Making a device visible/invisible

When Bluetooth is enabled, the handset is visible to Bluetooth devices in range for 5 minutes. It is then invisible after this time.

Making a device visible again:

- ▶  ▶   **Settings** ▶ OK ▶  **Bluetooth** ▶ OK ▶  **Visibility** ▶ **Change** = enabled)

The  icon in the status bar flashes whilst the handset is visible.







Even when the handset is invisible, requests from devices known as trustworthy are accepted.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



Only one headset / hearing device can be registered. When more than one headset is found, enable the one required using the checkbox = enabled).


- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Search Devices** ▶ OK ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:

Register device: ▶ **Options** ▶  **Trust Device** ▶ OK

The subsequent process is dependent on the device to which the connection is being made. Normally, both devices show the same authentication code.

- ▶ Confirm the authentication code on both devices ... The devices are connected. The device is included in the list of known devices.

Showing information:





- ▶  Select the device as required ▶ **View** ... The device name and address are displayed, as well as functions possible for this device

Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ OK

Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Open the list


- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Known Devices** ▶ OK ... the known devices are listed, an icon indicates the type of device








Bluetooth headset



Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry

- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Known Devices** ▶ OK ▶  select entry ... possible options:

View an entry: ▶ **View** ... the device name and device address are displayed ▶ Press OK to go back

De-registering a device:

- ▶ **Options** ▶ **Delete Entry** ▶ OK

Deregister all devices:

- ▶ **Options** ▶ **Delete List** ▶ OK

Edit name:

- ▶ **Options** ▶ **Edit Name** ▶ OK ▶  edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

When Bluetooth is enabled or Visibility is activated, the handset is only visible to other Bluetooth devices for 5 minutes (→ p. 46). A device is only able to request a connection during this time. Also, a connection can only be established when a register process is started.

- ▶ Start a register process as described in Section **Registering Bluetooth devices**.

Changing the Bluetooth name of the handset


The handset is shown by this name on another Bluetooth device.

- ▶  ▶   **Settings** ▶ OK ▶ **Bluetooth** ▶ OK ▶  **Own Device** ▶ OK ... the name and the device address are shown ▶ **Change** ▶  change the name ▶ **Save**

Usage as a Bluetooth beacon

The Gigaset N870 IP PRO can be used as a Bluetooth beacon. It can therefore be used in systems in which BLE (Bluetooth Low Energy) is used for communication, such as for localising the device, asset tracking, use in an alarm system, . . .

The Beacon function is enabled and set up by an Administrator. Which function the handset assumes here is dependent on the system in which it is used.

When the Beacon function is enabled on the handset, the  icon is shown in the status bar.

For further information, contact your Administrator.

Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.

Free to download at → www.gigaset.com/quicksync

QuickSync functions:

- Synchronise the contact details of the handset with Microsoft® Outlook® or a Google™ account
- Download from the PC to the handset images for the CLIP display in the directory and for the screensaver
- Download audio files for ringtone melodies from the PC to the handset
- Initiate, take or reject phone calls on the PC
- Update firmware
- Save and restore the handset settings on the PC

For detailed information on all functions: → **Gigaset QuickSync** help system

Registering handset with QuickSync

- ▶ Connecting the handset to the computer via Bluetooth or via a USB data cable.



Connect the handset **directly** to the PC and **not** via a USB hub.



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Start the **Gigaset QuickSync** program on the PC ▶ Add device . . . All devices detected by the program are displayed ▶ Select handset

Transferring data

- ▶ **Phone Explorer** ▶ Select **Screensaver / Caller images / Audio files** ▶ Use the icons in the header to down or upload files - add to or delete from the clipboard

The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Saving and restoring settings

Saving settings:

- ▶ **Save settings** ▶ select which data to save (**images, melodies / settings / contacts, call lists**) (= selected) ▶ **Save settings** ▶ select a storage location in the file system ▶ **OK** ... the data selected is saved (file name extension: .hsdat)

Restore settings:

- ▶ **Save settings** ▶ **Restore settings** ▶ Select a backup file in the file system ▶ **Open** ... the data saved is loaded onto the handset

The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Carrying out a firmware update



Firmware updating is only possible via USB.

- ▶ **Update firmware** ... The current firmware version is shown ▶ **Update**

The update process may take up to 10 minutes (not including download time).



Do not interrupt the process and do not remove the USB data cable.

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.


 
The display on your telephone is switched off, the Message key and the Talk key flash. Once the update is complete, your telephone will automatically restart.

Procedure in the event of an error

If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery ▶ Re-insert the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery
- ▶ Press and hold keys **4** and **6** at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys **4** and **6** ... the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above



Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.

Adjusting the telephone settings

Handset

Changing the language

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Language** ▶ OK ▶ select language ▶
Select = selected)

If the handset has been set to an incomprehensible language:

- ▶ ▶ Press the keys **9** **5** **slowly** one after the other ▶ select the correct language ▶ press the right display key

Select country

Select the country where you are using the phone. Your selection is used for country-specific defaults.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Country** ▶ OK ▶ select the country ▶ **Select** = selected)

Display and keypad

Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Screensaver** ▶ **Edit** (= on) ... then

Switch on/off: ▶ **Activation:** select **On** or **Off**

Select screensaver: ▶ **Selection** ▶ select a screensaver (**Digital Clock / Analog Clock / Info Services / <Pictures> / Slideshow**)

View screensaver: ▶ **View**


Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.



All pictures from the **Screensaver** folder of the **Resource Directory** are available for selection.

End screensaver

- ▶ Press the End call key  briefly ... the display changes to idle status

Notes on displaying Info Services



Info Services are activated via the web configurator.

The telephone is connected to the Internet.



If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off






The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Info Ticker** ▶ **Edit**
(= on)

The text appears as soon as the telephone changes to idle status. If a message is shown in the display, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Large Font** ▶ **Change**
(= on)

Colour scheme








You can choose from a range of colour combinations for the display.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Colour Schemes** ▶ OK ▶  select the desired colour scheme ▶ **Select** ( = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Display Backlight** ▶ OK ▶  select when the setting is applied (**In Charger / Out of Charger / In Talk State**) ▶ Select in each case with  **On or Off** ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.

Keypad illumination

The keypad has 5 levels of brightness to choose from.

- ▶  ▶   **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Key Illumination** ▶ OK ▶  **select Intensity (1 - 5)** ▶ **Save**

Activating/deactivating automatic keypad lock


Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶  ▶   **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Auto Keypadlock** ▶ **Change** = on)



Tones and signals

Call volume




You can set the volume of the earpiece, handsfree function and headset on 5 levels independently of each other.

-  Changes are only saved permanently in **Profile Personal**.







During a conversation

- ▶  **Handset Volume** ▶  **select volume** ▶ **Save** ... the setting is saved

In idle status

- ▶  **Handset Volume** ▶  **select what the setting is to apply for (Earpiece / Speaker / Corded headset)** ▶  **select the volume** ▶ **Save** ... The setting is saved

or

- ▶  ▶   **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ▶  **select what the setting is to apply for (Earpiece / Speaker / Corded headset)** ▶  **set the volume** ▶ **Save**

Automatic volume control



Crescendo is **not** set for the ringtone volume (→ p. 55).

The phone is able to automatically adjust the volume of the receiver and ringtone to the ambient volume. Here you can set the sensitivity with which the phone reacts to changes in noise level (**Very High, High, Medium, Low, Very Low**).

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Smart Volume** ▶ OK ▶ **Smart Earpiece Vol. / Smart Ringtone Vol.** ▶ **Edit**
- Enable/disable: ▶ **Activation:** select **On** or **Off**
- Adjust the sensor: ▶ **Sensitivity** ▶ adjust the sensor sensitivity
- Save: ▶ **Save**

Headset – volume correction

Change the call volume for the wired headset. In addition to the standard settings for the call volumes, here you can compensate the audio setting characteristics of your headset.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Corded Hdset Boost** ▶ set the volume ▶ **Save**

Microphone sensitivity

Adjust the sensitivity of the microphone for the receiver or wired headset. This gives you improved acoustics in loud environments and when there are echoes.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Mic Sensitivity** ▶ OK ▶ select what the setting applies for (**Earpiece / Corded headset**) ▶ adjust the sensitivity ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Acoustic Profiles** ▶ **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ select profile ▶
Select = selected)







Earpiece Profiles: **High frequency** or **Low frequency** (default setting)

Handsfree Profiles: **Standard** (default setting) or **Reduced Echo**

Ringtones

Ringtone volume

Set different ringtone volumes for internal and external calls, and other connections configured (group calls, intercom, emergency calls) or set the same ringtone volume for all external calls.








- ▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (H/Set)** ▶ OK ▶ **Volume** ▶ OK ▶  Select **Internal calls and appointments** or external connection ▶  Set the volume on 5 levels or Crescendo (increasing volume) ▶ **Save**



Changes are only saved permanently in **Profile Personal**.



Ringtone melody

Set different ringtones for internal and external calls, or other connections configured (group calls, intercom, emergency calls) or set the same ringtone for all external calls.

- ▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (H/Set)** ▶ OK ▶  **Melodies** ▶ OK ▶  Select **Internal Calls** or connection ▶  Select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off

Switching the ringtone off permanently


- ▶ Use the  key to set the **Profile Silent** ... The following icon appears in the status bar: 
- or: Enable "Do not disturb"

- ▶  ▶   **Audio Settings** ▶ OK ▶  **Do Not Disturb** ▶ **Change** = enabled

Switching the ringtone on permanently

Use the  key to set **Profile Loud** or **Profile Personal**


Switching the ringtone off for the current call

- ▶ **Silence** or press the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Use the Profile key to select  **Profile Silent** ▶ **Press Beep** within 3 seconds ... The following is shown in the status bar: 

Switching off the alert tone: ▶ Use the Profile  key to change profile

Switching the silent alert on/off

Incoming calls and other messages are indicated by a silent alert.

- ▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Silent Alert** ▶ **Change** = on

Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Audio Settings** ▶ OK ▶ ▶ **Advisory Tones** ▶ OK ...

then

Tone when keys are pressed:

- ▶ **Key Tones:** select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶ **Confirmation** ▶ select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶ **Battery** ▶ select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶ **Out of Range:** select **On** or **Off**

Save settings:

- ▶ **Save**

Auto answer

When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**
(= activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key for a further 2 seconds while placing the handset in the charging cradle.

Activating/deactivating visual call signal

Visual indication of incoming calls via the spot LED (e.g. in noisy environments).

- ▶ ▶ ▶ **Settings** ▶ OK ▶ ▶ **Telephony** ▶ OK ▶ ▶ **LED Call Signal** ▶ **Change** (= on)



Changes are only saved permanently in **Profile Personal**.

Emergency numbers

You can enter up to three phone numbers as emergency numbers - that you can also dial when the keypad lock is PIN-protected.

- ▶ ▶ **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Emergency Numbers** ▶ **OK** ▶ select an entry (--- = empty entry) ▶ **Change** ▶ enter the name for the emergency number ▶ ▶ enter the emergency number ▶ **Save**

Delete entry: ▶ delete the name and phone number ▶ **Save**

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys and to .



A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ use to select an entry ▶ **OK** ▶ use to select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:

Change the assignment:


- ▶ select an entry ▶ **OK** ▶ select a number if required ▶ **OK**

Delete the assignment:

- ▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶  select the function ▶ **OK** ... The assignment of the display key is changed






Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**

Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Testing DECT encryption

When this function is enabled, the handset tests whether the DECT connection to the base is secure, i.e. is encrypted. If not, a message is shown on the display.

- ▶  ▶   **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Security Check** ▶ **Change** = enabled)



If a repeater without encryption is used, the secure connection test must be disabled.

If, on the base, encryption is disabled at a later time whilst the secure connection test is enabled (because a repeater needs to be connected for example), **Security Info - Press INFO** is shown on the handset.

- ▶ **Info** ... the situation is explained ▶ **Sec. off** ... the secure connection test is disabled

 
During a call

A sound and a message on the display indicate when encryption is disabled on the base during a call.

- Continue call: ▶ **Yes**
- Stop call: ▶ **No**

If neither is pressed, the call is stopped automatically after a certain time.








Testing the secure connection status during a call:

- ▶ Press the Hash key  **for a longer time** ... the secure connection status is shown on the display

Changing the handset PIN

The handset is protected against unauthorised use by a PIN. The handset PIN must be entered e. g. when switching off the keypad lock.

Change the handset's 4-digit PIN (default setting: **0000**):






▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset PIN ▶ OK ▶  enter the current PIN ▶ OK ▶  enter the new handset PIN ▶ OK



If the correct handset PIN is not entered after 5 failed attempts, a 15-second timer is started. Every failed attempt thereafter doubles the timer (up to a maximum delay of 8 hours between PIN entry attempts).

Resetting a handset

Reset any individual settings and changes that you have made.

▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset Reset ▶ OK ▶ Yes ... the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Resetting the handset to the default settings

Reset all settings and personal information.

▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Erase Handset ▶ OK ▶  enter the current PIN ▶ OK

All user information, lists, the directory and the handset registration with the base are erased. The Registration wizard is started.






Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).







The phone checks whether new firmware is available for the handset. If it is, a message is displayed.

- ▶ Start the firmware update with **Yes**.

Enable/disable automatic check for new firmware:

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Automatic Check ▶ OK ▶ Change = enabled)







Start the firmware update manually

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Update ▶ OK ▶ OK ... if there is new firmware, the update will start



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Checking the firmware version

- ▶  ▶   Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Current Version ▶ OK ... the firmware version of the handset is displayed

Appendix

Customer Service & Help

Do you have any questions?

For quick help and information, please refer to this user guide or visit gigaset.com/pro.

For online information and services concerning

- Products
- Documents
- Interop
- Firmware
- FAQ
- Support

please refer to wiki.gigasetpro.com.

For further information our Gigaset specialised reseller will be happy to help you related to your Gigaset product.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Gigaset Communications GmbH hereby declares that the following radio equipment types are in compliance with Directive 2014/53/EU and the Radio Equipment Regulations 2017:

Gigaset R700H PRO

The full text of the EU and UK declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way they are used. (All times are maximum possible times.)

Standby time (hours)	320/180 *
Talktime (hours)	13
Operating time with 1.5 hours of calls per day (hours)	100/85 *
Charging time in charging cradle (hours)	8.5

* With the **No Radiation** function disabled / with the **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 1.50 W
To maintain the charge status:	approx. 0.50 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C705 / C710
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

The character set used on the handset is dependent on the language set.

Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ğ	ï	í	ì	î	ı
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0		¹⁾ .	,	?	!	²⁾ ←	0			

- 1) Space
- 2) Line break










Accessories









Name	Item number
Professional belt clip S:	S30852-Z2974-R142

Display icons




The following icons are displayed depending on the settings and the operating status of your telephone.


Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off)
	1% -100% white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated
	Keypad lock activated
	Bluetooth enabled
	Headset / hearing aid connected via Bluetooth

   

 
 
 
Icon	Meaning
	Data device connected via Bluetooth
	"Do not disturb" enabled
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%

Display key icons





Icon	Meaning
	Last number redial
	Delete text
	Open the directory





Icon	Meaning
	Copy number to the directory




Display icons to indicate . . .

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Menu overview



Not all functions described in the user guide are available in all countries or from all network providers.

Open the main menu: ► when handset is in idle status press



Select Services

Next Call anon.	→ p. 23
Call Divert	→ p. 23
Call Waiting	→ p. 24
Do Not Disturb	→ p. 24
Ringback off	→ p. 24



Info Centre

Company-specific functions can be provided by Gigaset N870 IP PRO.



Additional Features

LED Torch	→ p. 16												
1 Touch	→ p. 19												
Resource Directory	→ p. 44												
	<table border="1"> <tr> <td>Screensavers</td> <td>.....</td> <td>→ p. 44</td> </tr> <tr> <td>Caller Pictures</td> <td>.....</td> <td>→ p. 44</td> </tr> <tr> <td>Sounds</td> <td>.....</td> <td>→ p. 44</td> </tr> <tr> <td>Capacity</td> <td>.....</td> <td>→ p. 45</td> </tr> </table>	Screensavers	→ p. 44	Caller Pictures	→ p. 44	Sounds	→ p. 44	Capacity	→ p. 45	
Screensavers	→ p. 44												
Caller Pictures	→ p. 44												
Sounds	→ p. 44												
Capacity	→ p. 45												



Call Lists

All Calls	→ p. 25
Outgoing Calls	→ p. 25
Accepted Calls	→ p. 25
Missed Calls	→ p. 25



Voice Mail

Play Messages	→ p. 34
Network Mailbox	→ p. 34



Organizer

Calendar	→ p. 38
Timer	→ p. 40
Alarm Clock	→ p. 41
Missed Appts	→ p. 39



Contacts

Directory	→ p. 27
Network Directory	→ p. 27
Bluetooth Directory	When a device with enabled directory is coupled via Bluetooth	→ p. 31



Settings

Date/Time	Is set centrally. Manual settings on the handset are ignored.		
Audio Settings	Handset Volume		→ p. 53
	Smart Volume	Smart Earpiece Vol.	→ p. 54
		Smart Ringtone Vol.	→ p. 54
	Mic Sensitivity	→ p. 54
	Acoustic Profiles	Earpiece Profiles	→ p. 54
		Handsfree Profiles	→ p. 54
	Advisory Tones	→ p. 56
	Do Not Disturb	→ p. 43
	Silent Alert	→ p. 55
	Ringtones (H/Set)	Volume	→ p. 55
		Melodies	→ p. 55
		Time Control	→ p. 42
		Anon. Calls Silent	→ p. 42
	Silent Charging	→ p. 42	
	→ p. 54	
	Corded Hdset Boost	
Display + Keypad	Screensaver	→ p. 51
	Large Font	→ p. 52
	Colour Schemes	→ p. 52
	Display Backlight	→ p. 52
	Feature Key	→ p. 35
	Key Illumination	→ p. 53
	Auto Keypadlock	→ p. 53
Language	→ p. 51	
Registration	Register Handset	→ p. 10
	Select Base	→ p. 10
	Basic Registration	→ p. 10
Bluetooth	Activation	→ p. 45
	Visibility	→ p. 46
	Search Devices	→ p. 46
	Known Devices	→ p. 47
	Own Device	→ p. 47
Telephony	Auto Answer	→ p. 56
	LED Call Signal	→ p. 56
	Area Codes	Is set centrally. Manual settings on the handset are ignored.	
	Country	→ p. 51
	Emergency Numbers	→ p. 57

System	Handset Reset	➔ p. 59
	Security Check	➔ p. 58
	Handset PIN	➔ p. 59
	Handset Update	➔ p. 60
	Erase Handset	➔ p. 59

Index

- A**
- Advisory tones 55, 56
 - Alarm 41
 - Alarm clock 41
 - switch on/off 41
 - Alert tone (beep) 38, 55
 - Anniversary, see Appointment
 - Answer machine
 - calling back a caller 25
 - Answer, auto 56
 - Answering machine, play messages 34
 - Appointment
 - display missed 39
 - missed 39
 - notification 39
 - setting 38
 - Area code 18
 - Assigning number key 57
 - Authorisation 61
 - Auto answer 56
 - simple 20
 - Automatic
 - redial 19
- B**
- Battery
 - charging status 66
 - inserting 9
 - Beacon 48
 - Beep (alert tone) 38, 55
 - Belt clip 11
 - Bluetooth 45
 - activate 45
 - beacon 48
 - changing the device name 47
 - copy directory (vCard) 30
 - copying directory 31
 - de-register devices 47
 - list of known devices 47
 - making a device visible/invisible 46
 - registering devices 46
 - Broken display 6
- C**
- Calendar 38
 - Call
 - anonymous 23
 - external 18
 - incoming 20
 - Call divert 23
 - Call list
 - copying a number to the directory 25
 - delete 25
 - delete an entry 25
 - dialling 19
 - entry 25
 - opening 25
 - Call lists 25
 - Call Manager 20
 - Call protection 42
 - Call swapping, two external calls 21
 - Call transfer 22
 - Call waiting 24
 - Call waiting, external
 - accepting/rejecting 21
 - Call, anonymous 23
 - protection from 42
 - Calling Line Identification
 - switching off temporarily 23
 - Calls
 - making an external call 18
 - Care 62
 - Care of the device 62
 - Changing
 - display language 51
 - Changing the device name (Bluetooth) 47
 - Changing the handset PIN 59
 - Character charts 64
 - Charge status of the batteries 66
 - Charging the batteries 10
 - Charging time of handset 63
 - CLIP image
 - view in resource directory 44
 - CLIP, CLI Presentation 23
 - CLIP-picture, in directory 28
 - Colour scheme 52
 - Company directory 27, 32
 - automatic search 32
 - dial number 33
 - open 32
 - search 33
 - search for entry 33
 - search mode 33
 - Conference call 21
 - ending 22
 - two external calls 21
 - Connecting the charging cradle (handset) 8
 - Connecting the USB data cable 12
 - Consultation call 21
 - end 21
 - Contact
 - sending from smartphone 31
 - Contact with liquid 62
 - Contents of the package 8
 - Control key 3, 14
 - Correcting incorrect entries 17
 - Countdown (timer) 40
 - Country 51

-
- Customer Care 61
 - Customer Service 61
-
- D**
- Data protection 61
 - De-registering devices (Bluetooth) 47
 - Dialling
 - from the call list 19
 - from the redial list 18
 - using quick dial 57
 - Directories
 - using them 27
 - Directory 28
 - copy vCard (Bluetooth) 30
 - copying numbers 30
 - entry 28
 - memory 29
 - open 27
 - order of entries 29
 - saving an entry 28
 - searching 29
 - selecting an entry 29
 - sending with Bluetooth 31
 - Directory key
 - assignment 27
 - Display
 - backlight 52
 - broken 6
 - changing display language 51
 - colour scheme 52
 - directory memory 29
 - large font 52
 - missed appointment/anniversary 39
 - network mailbox message 26
 - screensaver 51
 - setting 51
 - Display icons 66
 - Display keys 3, 15
 - assigning 57
 - icons 66
 - Display language
 - setting 10
 - Disposal 62
 - "Do not disturb" profile 37
 - Do not disturb 24
-
- E**
- Earpiece profile 54
 - Earpiece volume 22
 - automatic 54
 - Emergency numbers 57
 - not possible 6
 - Encryption, DECT connection 58
 - End call key 3, 18
 - Entering special characters 17
 - Entering text 17
 - Entering umlauts 17
 - Environment 62
-
- F**
- Firmware update 60
 - Firmware updates 49
 - Function key
 - system action 37
 - Functions button
 - quick dial 35
 - Functions key 3
-
- G**
- Getting started 8
 - Gigaset QuickSync 30, 48
 - Group accept 20
-
- H**
- Handset
- automatic keypad lock 53
 - changing the settings 51
 - colour scheme 52
 - connecting the charging cradle 8
 - display backlight 52
 - display language 51
 - handset volume 22
 - handsfree volume 22
 - idle status 17
 - keypad illumination 53
 - muting 22
 - overview 3
 - registering 10
 - resetting 59
 - restoring to default setting 59
 - setting up 9
 - switch on/off 13
 - update 60
 - using as a Bluetooth beacon 48
- Handsfree key 22
 - Handsfree mode 22
 - Handsfree profile 54
 - Handsfree volume 22
 - Hash key 3
 - Headset (Bluetooth) 45
 - Headset connection 3
 - Headset socket 12
 - Headset volume 54
 - Help 61
-
- I**
- Icons
- alarm clock 41
 - displaying new messages 26
 - indications 67
 - on display keys 66
 - status bar 66
 - timer 40
- Idle status
- returning to 17

- Illumination, keypad 53
 Indications, icons 67
 INT key, open directory 27
-
- K**
 Key 1 (fast access) 3
 Key, assigning 57
 Keypad illumination 53
 Keypad lock, automatic 53
- Keys**
 control key 3, 14
 display keys 3, 15
 end call key 3, 18
 fast access 3
 functions key 3
 handsfree 22
 hash key 3
 menu 14
 message key 3
 on/off key 3
 profile key 3, 37
 recall key 3
 star key 3
 talk key 3
 volume 14
 volume keys 3
-
- L**
 Language
 display 51
 Large font 52
 LDAP (Lightweight Directory Access Protocol) 32
 LED 3
 Liquid 62
 List
 known devices (Bluetooth) 47
 Locking/unlocking the keypad 13
 Loud surroundings 23
 Lower/upper case 17
-
- M**
 Mains unit
 handset 64
 Making calls
 external 18
 Manufacturer's advice 61
 Medical equipment 7
 Melody
 ringtone for internal/external calls 55
 Memory in the directory 29
 Memory, resource directory 45
 Menu key 14
 Message key 3
 Message lists 26
 Message Waiting Indicator (MWI) 26
 Messages
 play on network mailbox 34
-
- Microphone 3
 adjust sensitivity 23, 54
 switch on/off 22
 volume 54
 Missed anniversaries/appointments 39
 Missed calls
 counter 25, 26
 Multi-cell system 4
 Muting the handset 22
-
- N**
 Network mailbox 34
 enter number 34
 play messages 34
 Network MB, see Network mailbox
 Network provider 23
 Network services 23
 Number
 copying to the directory 30
 do not transfer 23
 saving in the directory 28
 withhold 23
 Numbers
 entering 17
-
- O**
 On/off key 3
 One touch call 19
 Open Source Software 75
 Operating time of handset 63
 Overview
 handset 3
-
- P**
 PC Interface 48
 Picture
 as CLIP image 44
 as screensaver 44
 delete 44
 formats 44
 rename 44
 Play sound 44
 Power adapter 6, 64
 handset 64
 Profile key 3, 37
 Profiles 37
 Protection from calls
 "Do not disturb" profile 37
 anonymous 42
 switch off ringtone when in charging
 cradle 42
 time control 42
-
- Q**
 QuickSync 30, 48
 saving and restoring settings 49

-
- R**
- Recall key 3
 - Redial list 18, 25
 - Registering (handset) 10
 - Registering device (Bluetooth) 46
 - Resource Directory 44
 - memory 45
 - Resource directory
 - view CLIP image 44
 - Ringback
 - cancelling 24
 - disable on busy 20
 - when busy 20
 - Ringback when call is not answered 20
 - Ringtone 55
 - automatic volume 54
 - changing 55
 - disable 20
 - melody for internal/external calls 55
 - switch off when in charging cradle 42
 - time control 42
 - volume 55
-
- S**
- Safety precautions 6
 - Screensaver 51
 - Searching in directory 29
 - Sensitivity
 - volume 54
 - Setting up the handset 9
 - Settings
 - saving and restoring with QuickSync 49
 - Show new messages 26
 - Show notifications 26
 - Signal strength 66
 - Silent alert 55
 - Simple Auto Answer 20
 - Snooze mode (alarm) 41
 - Sound
 - delete 44
 - formats 44
 - playback 44
 - rename 44
 - Sound profiles 37
 - Sounds for ringtones 44
 - Speaker 22
 - Spot LED 3
 - turn on/off 16
 - Star key 3
 - Status bar 3
 - icons 66
 - SUOTA 60
 - Switch on/off alarm (timer) 41
 - Symbols, see Icons 66
 - System action 37
-
- T**
- Talk key 3
 - Technical data 63
 - Telephone
 - operating 13
 - Time control for external calls 42
 - Timer 40
 - Torch 3
 - switching on and off 16
-
- U**
- Update 49
 - Upper/lower case 17
-
- V**
- Viewing network mailbox message 26
 - VIP group, classify directory entry 28
 - VIP ringtone 28
 - Visual call signal 56
 - Volume
 - earpiece 53
 - handset speaker/earpiece volume 22
 - headset 53, 54
 - speaker 53
 - Volume keys 3, 14

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software. The corresponding licence conditions can be found below in their original version.

Licence texts

Copyright (c) 2001, Dr Brian Gladman <>, Worcester, UK.
All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.

Issue Date: 29/07/2002

Issued by

Gigaset Communications GmbH
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2022

Subject to availability.

All rights reserved. Rights of modification reserved.

[gigaset.com/pro](https://www.gigaset.com/pro)