

FAQ Nx70 - Call limits / capacity per base station

Capacity

The capacity of the device is based on the device role and the enabled codec.

- [Small size system](#)
- [Medium size system](#)
- [Large size system](#)
- [Enterprise system](#)

Valid for:	
N670	N870

How to switch from small to medium. [FAQ Nx70 - Switch from Small to Medium system](#)