


# FAQ Broadsoft - Busy Lamp Field Maxwell 10

## Introduction

Here you can find the description how to use the BLF keys in a Broadsoft environment. (For security reasons we removed the URL's in the example below)

## Broadsoft configuration

In Broadsoft management system go to: **Users - Select the user - Client Applications - Busy Lamp Field**

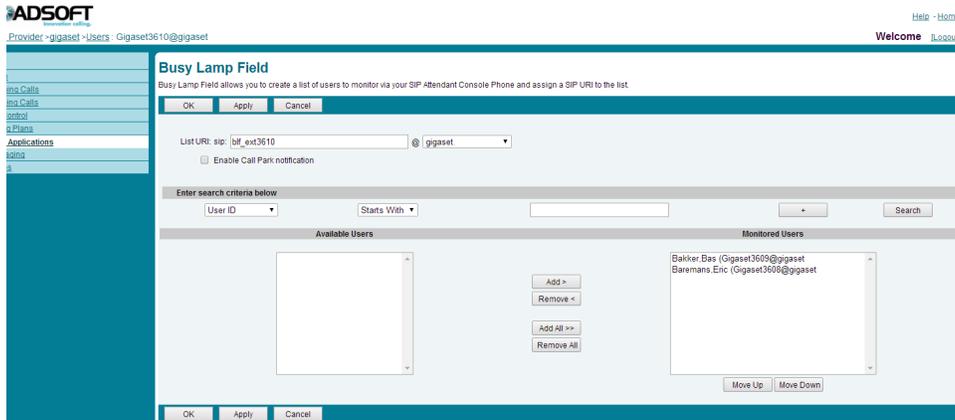

- Define the URI for the BLF list, must be an unique name.
- Add the Users you would like to have under the BLF keys to the **Monitored Users** list
- Press OK to save the settings

## Gigaset Desktop device configuration


In the web-interface of the Maxwell 10 go to: **Settings - Network and Connections - Phone systems**



Connected with phone systems  
: Broadsoft

When selected, also the BLF field will be visible.

**BLF list user = Broadsoft List URI** (First Picture on this page)

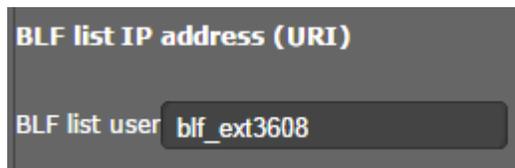

## Gigaset BLF keys

Now you have to add the BLF keys manual to the device, go to:

Setting  
s -  
Function  
Keys  
and  
add  
the  
BLF  
key.

For the  
Phone  
number  
you  
need  
to  
enter  
the  
same  
naming  
as in  
the  
broads  
oft **Mon  
itored  
Users**  
list

### Programmable Key

Key	PK1
Function	BLF
Connection	3608
Name	3610
Phone number	Gigaset3610
Directed call pickup code	*97



#### Info

Subscribe is only send when BLF key is configured. When no BLF key is present then device will not send subscribe.

BLF keys have to be configured manually.

## Maxwell 10 auto provisioning parameters.

### XML syntax:

```
<S_BLF_LIST value="blf_ext3608" class="string" />  
<I_FUNCTION_KEY_TYPE_1 value="3" class="integer" />  
<S_FUNCTION_KEY_NAME_1 value="3610" class="string" />  
<S_FUNCTION_KEY_NUM_1 value="Gigaset3610" class="string" />  
<S_DIRECTED_PICKUP_CODE_1 value="*97" class="string" />
```

Tag Name	Value	Meaning
S_BLF_LIST	Like configured in Broadsoft device management	Broadsoft blf list URI

I_FUNCTION_KEY_TYPE_(X)	3 for BLF key	Type of function key
S_FUNCTION_KEY_NAME_(X)	Name of the key	Seen in the web-interface
S_FUNCTION_KEY_NUMBER_(X)	Like configured in Broadsoft device management	BLF phone number
S_DIRECTED_PICKUP_CODE_(X)	Broadsoft Call Pickup code	The Call Pickup code in case the key is configured as BLF key

- [Introduction](#)
- [Broadsoft configuration](#)
- [Gigaset Desktop device configuration](#)
  - [Gigaset BLF keys](#)
- [Maxwell 10 auto provisioning parameters.](#)