

FAQ Nx70 - RTP port

Introduction

Changing the RTP port is today only possible via auto-provisioning.

Auto-provisioning

Parameter	Description
dm.local.RtpBasePort	Change the RTP port for DECT Manager local
dm.@.RtpBasePort	Change the RTP port for all DECT Managers

Example:

```
<param name="dm.dm1.RtpBasePort" value="10000" />
```