

FAQ N870/N670

- Admin login
- Antenna characteristics
- Area codes
- Auto answer call
- Autoprovisioning
- Autoprovisioning Disable Select Services menu
- Autoprovisioning flow chart
- Autoprovisioning hide pages
- Autoprovisioning hide SIP Passwords
- Autoprovisioning Nested profiles
- Autoprovisioning parameter list
- Autoprovisioning period
- Autoprovisioning SIP account for provisioning

- Base
- Base station events
- Base stations administration
- Base stations Edit
- Base stations mounting instructions
- Base stations synchronisation
- Block new calls
- Broadsoft Feature Key Synchronization
- Broadsoft Phone books

- Call limits
- Call Reject
- Capacity
- Central phonebook
- Change the role
- CLI access
- Client certificates
- Clusters
- Communication /protocol/ports overview
- Convert N720 database to N870
- Corporate directories

- Data protection notice
- Date and time
- DECT Base
- DECT Base in different subnet
- DECT-based synchronisation
- DECT Handsets
- DECT Handset re-registration
- DECT Manager

- DECT Manager Adding
- DECT Manager Administration
- DECT Manager Editing
- DECT manager Synchronization
- DECT Manager Synchronization Adding/Editing
- DECT settings
- Device role
- Diagnostics download
- Directories number list
- Distinctive ring

- Factory reset
- Firmware update
- Fragmentation
- Front

- GAP handset support
- Group pick-up

- Handover
- Handset replacement via web-interface
- Handsets
- Hotspots

- Incidents
- Installation
- Install DECT base in different subnet
- Integrator
- Integrator down
- Integrator role only
- Integrator how to configure
- IP address
- IPU

- Large sized systems
- LAN connection
- LAN synchronisation
- LDAP
- LED
- License
- Login
- Lookup caching

- Mediasec
- Medium sized system
- Mobile devices - Export/Import

- Nested profiles
- Network IP/LAN
- NTP

- Overload Balancing

- PARI
- Planning DECT network
- Provisioning and configuration
- Provisioning parameters

- [RAP](#)
- [Rear](#)
- [Reboot and reset](#)
- [Redundancy](#)
- [Replace header](#)
- [Reset to factory default](#)
- [Roaming](#)
- [Role](#)
- [RPN Group](#)
- [RTP port](#)

- [Satellite Control Protocol \(SCP\)](#)
- [Save and restore](#)
- [SIP compact headers](#)
- [SIP Multicast](#)
- [SIP REGISTRATION S \(Simultaneous\)](#)
- [Site Planning Kit \(SPK\)](#)
- [Small sized system](#)
- [SNMP](#)
- [SSH access](#)
- [SUOTA](#)
- [Switch from Small to Medium system](#)
- [Synchronisation planning](#)
- [Sysdump via CLI](#)
- [Syslog](#)
- [System Security](#)
- [System Web configurator](#)

- [Tel.search.ch phone-book](#)
- [Top](#)

- [User-agent](#)

- [Virtual Integrator how to configure](#)

- [Wall Mounting](#)
- [Web configurator](#)
- [Wireless coverage](#)
- [Wireshark tracing](#)

- [XHTML](#)
- [XML Phone-book](#)
- [XSI services](#)