

# N870 Integrator

## Integrator

The Integrator is a software that combines multiple N870 and/or N670 systems to one large DECT system.

It is available in 2 versions.

### Virtual Integrator

- Integrator software: Can be [downloaded](#) from this wiki
- An Virtual integrator license is needed, without a license it can be used for 35 days
- Hardware (Not delivered by Gigaset): [FAQ Nx70 - Integrator](#)
- Capacity:
  - Up to 100 Multi-cell DECT managers (N870 DM or N670 with upgrade license)
  - Up to 300 Single-cell N670 devices
  - Up to 6000 DECT base-stations (60 per Multi-cell DM)
  - Up to 20000 DECT handsets
  - Up to 6000 simultaneous calls

### N870 in integrator role only

- A normal [N870](#) device can be switched to role integrator only
- No license is needed
- Hardware: A (normal) [N870](#) device
- Capacity:
  - Up to 4 Multi-cell DECT managers (N870 DM or N670 with upgrade license)
  - Up to 20 Single-cell N670 devices
  - Up to 240 DECT base-stations (60 per Multi-cell DM)
  - Up to 800 DECT handsets
  - Up to 240 simultaneous calls



## Licensing

To use the Integrator, you need a license.

The following licenses are available.

| License  | Order number    |
|--|-----------------|
| N870 Virtual Integrator software License   | S30852-H2716-X1 |
| Multi-cell DECT manager License (N870 DECT Manager / N670 with multi-cell License) | S30852-H2716-X2 |
| N670 DECT Manager license  | S30852-H2714-X2 |
| N670 upgrade to N870 feature level   | S30852-H2714-X3 |

See this page with more info about Licensing: [N870 Integrator Licensing](#)