

# DExxx - How to adjust microphone sensitivity

Sensitivity in sending direction can be adjusted in 9 steps

for handsfree microphone and for handset microphone.

Therefore you can choose following hidden page on the web interface of the telephone:

--> open web interface of telephone

--> login with admin account

--> <http://<IPaddress telephone>/welcome.html> change into: <http://<IPaddress telephone>/voiceadj.html>

There are following adjustment parameter:

HandFree MIC TX: actual value, --> adjustments: 0-9

HandSet MIC TX: actual value, --> adjustments: 0-9

Handset AEC: 1 --> 0:Disable, 1: Enable

## **Save**

Increasing the value increases the microphone loudness.

As default now the Automatic Echo-Cancelling (AEC) is activated. AEC should deactivate or minimize an Echo to the earpiece. If there is no improvement or Echo is too high, you should reduce microphone level again.