

FAQ Nx70 - Fragmentation

Introduction

For some platforms we need the option: enable/disable 'don't fragment' flag.
This parameter can only be changed via auto-provisioning.

Auto-provisioning

Parameter	
DmGlobal.0. EnableDFFlagForSipPackets	0 1 (Default)
Example: <param name="DmGlobal.0.EnableDFFlagForSipPackets" value="0"/>	