

FAQ Nx70 - Messaging and Location how to enable/disable per handset

Introduction

The messaging and location feature can be enabled/disabled via:

- Web-interface (Under development)
- Auto-provisioning

License

A [license](#) is needed, else it can not be enabled.

Auto-provisioning

Via the following provisioning example, the location and/or messaging feature can be enabled.

In this example we change enable the feature for the handset with IPUI "035edb3a92".

```
<?xml version="1.0" encoding="UTF-8"?>
<provisioning version="1.1" productID="e2">

<nvm>

<!-- <oper name="set_hs_aml" value="@">> -->
<oper name="set_hs_aml" value="035edb3a92">
    <param name="LocationAML" value="1"/>
    <param name="MessagingAML" value="1"/>
</oper>

</nvm>
</provisioning>
```