

# FAQ N510 Syslog

## Introduction

Via the syslog page, you can enable the device sending syslog messages towards your own syslog server.

## How to do this

1. Open the web-interface of the N510: **http:<IP address N510>**
2. Login the N510, default PIN = **"0000"**
3. Change the URL to: **http:<IP address N510>/syslog.html**
4. Enter the **IP address** of your syslog server
5. **Activate** the syslog server
6. Select **all** syslog messages
7. Try to reproduce the error
8. Attach the syslog messages to the Ticket.

**System log**

The system log is stored on an external syslog file server.

IP Address:

Server port:

Activate Syslog:

**Set filter for system log**

New filter settings are valid for future events.

System events:

Fault in DECT operating system:

Socket layer events:

SIP events:

eMail events:

RAP events:

Lists events:

Severity mask (hex):

- [Introduction](#)
- [How to do this](#)