

FAQ Nx70 - Change the role

Introduction

The N870 has one hardware, the device can have the following role.

Valid for:	
N670	N870

DECT Base (N870 only)

- By default, the device is a DECT Base.
- A DECT base has no web-interface
- If the device is configured as DECT Manager, you can reset this device to Base via: Web-interface: **Settings - System - Reboot and reset** - Reset to **Base only**.
- Via the hardkey, see: [FAQ Nx70 - Installation](#)
- Via the Power procedure, see: [FAQ Nx70 - Reboot and Reset to factory default](#)

DECT Manager + DECT Base (N870 & N670)

- Web-interface: **Settings - System - Reboot and reset** - Reset to **DECT-Manager + Base - dynamic IP**.
- Web-interface: **Settings - System - Reboot and reset** - Reset to **DECT-Manager + Base - keep IP**.
- Via the hardkey, see: [FAQ Nx70 - Installation](#)
- Via the Power procedure, see: [FAQ Nx70 - Reboot and Reset to factory default](#)

Integrator + DECT Manager + DECT Base (N870 & N670)

- Web-interface: **Settings - System - Reboot and reset** - Reset to **All in one - dynamic IP**.
- Web-interface: **Settings - System - Reboot and reset** - Reset to **All in one - keep IP**.
- Via the hardkey, see: [FAQ Nx70 - Installation](#)
- Via the Power procedure, see: [FAQ Nx70 - Reboot and Reset to factory default](#)

Integrator + DECT Manager (N870 only)

- Web-interface: **Settings - DECT Manager - Administration** - Edit DECT manager - change Capacity to **Medium**.
- Web-interface: **Settings - Base stations - Administration** - Edit Local Basestation - Activate base station to **No**.
-

DECT Manager (N870 only)

- Configure the device as DECT Manager + DECT Base via the above procedure.
- Connect to the virtual integrator.
- Via the integrator switch of the DECT base:
 - Web-interface: **Settings - DECT Manager - Administration** - Edit DECT manager - change Capacity to **Medium**.
 - Web-interface: **Settings - Base stations - Administration** - Edit Local Basestation - Activate base station to **No**.



When changing the device role the system is reset to factory setting. This means, that existing configuration and user data will be lost.

If you change the role of a device that has been acting as Integrator, you should save the configuration previously