

# FAQ N870(E)/N670

- Admin login
- Alarming / Messaging / Location
- Antenna characteristics
- Area codes
- Auto answer call
- Automatic Back-up to SFTP server
- Autoprovisioning
- Autoprovisioning Certificates
- Autoprovisioning DHCP option 42 NTP server
- Autoprovisioning DNS option 6 DNS server
- Autoprovisioning Disable Select Services menu
- Autoprovisioning flow chart
- Autoprovisioning hide pages
- Autoprovisioning hide SIP Passwords
- Autoprovisioning Nested profiles
- Autoprovisioning parameter list
- Autoprovisioning period
- Autoprovisioning SIP account for provisioning
  
- Base
- Base station events
- Base stations administration
- Base stations Edit
- Base stations mounting instructions
- Base stations synchronisation
- Blind transfer
- Block new calls
- Broadsoft Feature Key Synchronization
- Broadsoft Phone books
  
- Call limits
- Call Reject
- Capacity
- Central phonebook
- Change the role
- CLI access
- Client certificates
- Clusters
- Communication /protocol/ports overview
- Convert N720 database to N870

- Corporate directories
- Data protection notice
- Date and time
- DECT Base
- DECT Base in different subnet
- DECT-based synchronisation
- DECT Handsets
- DECT Handset re-registration
- DECT Manager
- DECT Manager Adding
- DECT Manager Administration
- DECT Manager Editing
- DECT manager Synchronization
- DECT Manager Synchronization Adding/Editing
- DECT settings
- Device role
- DHCP option 42 NTP server
- Diagnostics download
- Directories number list
- Distinctive ring
- DNS option 6 DNS server
- Factory reset
- Firmware update
- Fragmentation
- Front
- GAP handset support
- Gigaset-config.com
- Group pick-up
- Handover
- Handset replacement via web-interface
- Handsets
- Hotspots
- Incidents
- Installation
- Install DECT base in different subnet
- Integrator
- Integrator down
- Integrator role only
- Integrator how to configure
- IP address
- IPUI
- Large sized systems
- LAN connection
- LAN synchronisation
- LDAP
- LED
- License
- Login
- Lookup caching

- Mediasec
- Medium sized system
- Mini-multicell
- Mobile devices - Export/Import
  
- NAT refresh timer
- Nested profiles
- Network IP/LAN
- NTP
  
- Overload Balancing
  
- PARI
- Planning DECT network
- PoE
- Provisioning and configuration
- Provisioning parameters
  
- RAP
- Rear
- Reboot and reset
- Reboot (Automatic) via CLI
- Redundancy
- Replace header
- Reset to factory default
- Roaming
- Role
- RPN Group
- RTP port
  
- Satellite Control Protocol (SCP)
- Save and restore
- SIP compact headers
- SIP endpoint identifier (EPID)
- SIP Multicast
- SIP REGISTRATION S (Simultaneous)
- Site Planning Kit (SPK)
- Small sized system
- SNMP
- SSH access
- SUOTA
- Switch from Small to Medium system
- Synchronisation planning
- Sysdump via CLI
- Syslog
- System Security
- System Web configurator
  
- Tel.search.ch phone-book
- Top
- TTL value
  
- User-agent
  
- Virtual Integrator how to configure

- [Wall Mounting](#)
- [Web configurator](#)
- [Wireless coverage](#)
- [Wireshark tracing](#)
  
- [XHTML](#)
- [XML Phone-book](#)
- [XSI services](#)