

FAQ Nx70 - Auto provisioning: Hide SIP Passwords

Valid for: **N670** **N870**

Introduction

From software 2.36 we have added the option to hide the SIP passwords via auto-provisioning.

When this feature is enabled it will:

- Prevents sending passwords to web-browser
- Prevents exporting passwords during handsets export
- Prevents importing passwords during handsets import

Auto-provisioning

Parameter	Value
SystemSettings.global.HideSipAccountsPasswords	0 = Passwords are visible (default) 1 = Passwords are hidden

Example:

```
<?xml version="1.0" encoding="UTF-8"?>
<provisioning version="1.1" productID="e2">

<nvm>
<param name="SystemSettings.global.HideSipAccountsPasswords" value="1"/>
</nvm>
</provisioning>
```



We suggest when you use this feature to also [hide the provisioning page](#) to avoid that the SIP passwords can be enabled again via provisioning.