

# FAQ Nx70 - Fragmentation

## Introduction

For some platforms we need the option: enable/disable 'don't fragment' flag.  
This parameter can only be changed via auto-provisioning.

## Auto-provisioning

Parameter	
DmGlobal.0. EnableDFFlagForSipPackets	0 1 (Default)
Example:	
<code>&lt;param name="DmGlobal.0.EnableDFFlagForSipPackets" value="0"/&gt;</code>	