

FAQ DX800A

- Autosensing of external line-type
- FAX port
- Function key - assign internal parties (INT)
- Function keys label printing