

# FAQ Nx70 - License: Master DECT manager


## Master DECT manager

Only needed when the Virtual Integrator is used.

As the license is based on the N870 MAC address and the Virtual Integrator is not an N870 device, you need to define the Master DECT manager.

In the Integrator web-interface go to **SETTINGS - DECT manager - Administration - Global settings**

Select the Master DECT Manager.

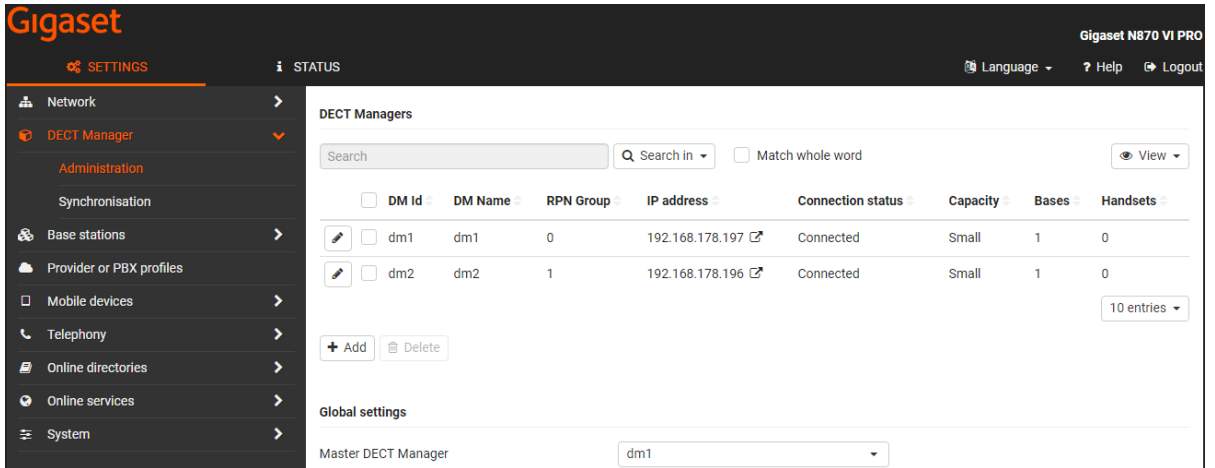

The screenshot shows the Gigaset N870 VI PRO web interface. The top navigation bar includes 'SETTINGS' and 'STATUS'. The left sidebar menu is expanded to 'DECT Manager' > 'Administration'. The main content area displays the 'DECT Managers' configuration page. It features a search bar, a 'Match whole word' checkbox, and a 'View' dropdown. Below is a table with columns: DM Id, DM Name, RPN Group, IP address, Connection status, Capacity, Bases, and Handsets. Two entries are listed: dm1 (RPN Group 0, IP 192.168.178.197) and dm2 (RPN Group 1, IP 192.168.178.196). Both are 'Connected' with 'Small' capacity, 1 base, and 0 handsets. There are '+ Add' and 'Delete' buttons. Below the table is the 'Global settings' section, where 'Master DECT Manager' is set to 'dm1'.

DM Id	DM Name	RPN Group	IP address	Connection status	Capacity	Bases	Handsets
dm1	dm1	0	192.168.178.197	Connected	Small	1	0
dm2	dm2	1	192.168.178.196	Connected	Small	1	0



The Master DECT manager need to be installed, connected and working as the real MAC address of this device is retrieved.