

# DX800 - Function key - assign internal parties (INT)

## Description

Users are able to assign internal parties to programmable soft keys (Left, Right) and hard keys on the Base Station.

On the list we have following options:

- Registered handsets
- Base Station
- "Call All"

If user presses the programmed softkey or hardkey where is internal party assigned, internal call is triggered to that number.

It is not possible to transfer the call using softkeys and hard keys.

If one of the internal parties was assigned to the softkey or hardkey, but after some time we deregister this hs, we will see "Not possible" if we press the softkey or hardkey. Name of the softkey will not be updated.

If the internal name is too long, it will be abbreviated and we put "..." at the end of the name.

- [Description](#)