

# N720 - Ports used.

## Introduction

Below is a list with port-numbers that the N720 is using, the list is based on the Software 108.

DECT Manager	DECT Base	Protocol	Direction	Port Number - Default	Optional	Description
Yes	Yes	DHCP	Out	67, 68		
Yes	Yes	DNS	Out	53		
Yes	Only for Firmware update	HTTP	In/Out (DM) - Out (Base)	80		Web-Interface / provisioning / XML phonebooks / Firmware update
Yes	No	HTTPS	Out	443		Provisioning / XML phonebooks
Yes	No	HTTP Proxy	Out	8080	Can be changed	
Yes	No	SIP	In/Out	5060	Can be changed	
Yes	No	SIP Listen Ports	In	5060	Random 5060-6000	
Yes	No	Proxy	Out	5060	Can be changed	
Yes	No	LDAP	Out	389	Can be changed	
Yes	No	STUN	Out	3478	Can be changed	
No	Yes	RTP	In/Out	5004	Random 5004-6922	
Yes	No	NTP	Out	UDP 123 / TCP 37		
Yes	No	Syslog	Out	TCP 514	Can be changed	
Yes	No	E-mail	Out	110	Can be changed	
Yes	Yes	DECT discovery	In/Out	UDP 4711 / 4712		See <a href="#">wiki article</a>