FAQ - Auto provisioning: How to configure the provisioning URL.

Valid fo	or: N610 N670 N870 N870E	Embedded Integrat	or Virtual Integrator			
Valid for N610 / N670 / N870 / N870E.						
The provisioning server URL can be provided via the following Methods:						
 DHCP option 66 DHCP option 114 SIP Multicast Gigaset Redirect server Manually via web-interface, go to: SETTINGS - System - Provisioning and configuration: "Provisioning server" 						
Gigaset						
SETTINGS i STATUS						
*	Network	> Prov	Provisioning and configuration			
ŧ	DECT Manager	>	5			
&	Base stations	> Prov	sioning server 🔞		profile.gigaset.net/device	
	Provider or PBX profiles	Auto	configuration file 🔞		🖻 Browse	
	Mobile devices	>			🖌 Start auto configuration	
ف	Telephony	>				
	Online directories	>				
۲	Online services	>				
ŧ		✓				
Web configurator						
Provisioning and configuration						