FAQ - Firmware update

Valid for: N610 N670 N870 N870E Embedded Integrator Virtual Integrator Introduction Regular updates to the firmware for the DECT manager and base stations can be found on this wiki. The firmware can be updated via: 1. Auto-provisioning 2. Web-interface via upload firmware file 3. Web-interface via URL to firmware file 4. Web-interface, Automatic: check online for new firmware (New in 2.57.0 or higher) Upgrade and Downgrade are supported. · Upgrade to any newer version keeps the current settings • Downgrade to previous version using the settings of the previous version (using backup of previous version stored in the device) Downgrade to any other version, device does a factory reset n Info If you upload the firmware via the web-interface, the base stations' firmware is updated automatically by the DECT manager. This means that the DECT manager acts like a "proxy" for the base stations. How long does a firmware update take? (i) When an firmware update is started you would be able to see that the DECT manager (with DECT base enabled) is already started but the DECT base stays disabled for some time, which can take up to 900 seconds. The expected time for the whole system can be calculated: Upgrade time = Time for DM firmware update + (360 seconds + number of BSs * 10 seconds, limited to max timer = 900 seconds.) The delay ensures a good and stable firmware update. Handsets will try to connect to active base stations when they are in range. During firmware update, base stations will start/restart, to avoid many handsets try to connect and cause high load which could cause instability, a delay is implemented. After the firmware update is ready the whole DECT system will start and handsets will have all base stations available to reconnect.

Web-interface

Upload the software via the web-interface:

The firmware is stored on the DECT manager and distributed to the base stations.

In the web-interface go to: SETTINGS - System - Firmware

	aacot							_
GI	Jasel						Gigaset N87	0 IP PRO
	¢ SETTINGS	i S	TATUS				👰 Language 🚽 📍 Help 🔅	Logout
#	Network	>	System firmware					
1	DECT Manager	>	Current version		V2 57 0 (V2 57 0+build 2000776)			
&	Base stations	>			v2.37.0 (v2.37.0+build.2899770)			
	Provider or PBX profiles		Backup available for	previous version 💿	V2.57.0 (V2.57.0+build.b9853dc)			
	Mobile devices	>			Downgrade to any other version wi device to factory settings.	ill reset		
<u>ر</u>	Telephony	>	URL to firmware file	۵	http://localbost/swundate/einste	in albert V.		
	Online directories	>						
8	Online services	>			Browse			
= :	System		Automatic update		No new version available			
	Web configurator				Check for update			
					↑ Update			
			Planned schedule 🕼		2024-11-30 00:15			
	Security				Immediately			
			Confirmed schedule	0	2024-11-30 00:16			
			communeu schedule	· ·	2024 11 00 00.10			
	Filmware Save and rectore		DECT Manager's firm	nware				
	Pahoot and reset		Search		Q Search in - Match wh	ole word	I Vi	ew 🔻
			DM Name 🖨	Current version	Confirmed schedule	URL to firmware file		
			🖋 local	V2.57.0 (V2.57.0+build.2a9	9776) 2024-11-30 00:16	swupdate/einstein_	albert_V2.57.0_build.2a99776.upda	ate.bin
\Box	Auto-hide menu						10 entr	ies 🕶
					Set Ca	ancel		
From	 Scroll down and pre- The firmware update software 2.32 or higher 	ss SI e will [.] you	ET start after a fev see an icon if tl	v minutes. ne firmware update	is started.			
Co	nnected base stations							
S	earch			Q Search in 🗸	Match whole we	ord		♥ View •
	MAC address 🔅		Base station	+ RPN +	DM Name 🔅 FW 🗇		Pending firmware upd	ate Status
	7c2f80c1b7b4		LocalBS	0x02	local V2.28	3.0 (V2.28.0-170	-qbda4078) 🕞	Sync
L							32001010/ 43	
								10 entries 👻
-	Delete		Immont					
(You can downgrade	to the	e previous vers	ion and keep your s	settings. If you downgrad	de to any other	version, your device wi	Il be factory default
Firm If you	ware update from an H	ITTP your	server PC, you can al	so enter the URL o	f the firmware file that	is stored on an	external HTTP server.	When the firmware

Parameter	Description
Current version	Shows the current firmware version of the Integrator/DECT manager on which you are logged in.
Backup available for previous version	You can downgrade the firmware by installing any older version. When installing a new firmware the system automatically creates a data backup for the recent firmware. If you later downgrade to this version the data backup will be installed on the system. This way you have a downgrade to previous firmware version and data settings. Downgrade to any other version will reset the device to factory settings.
URL to firmware file	In the text field specify the URL of the configuration server where the firmware is located or click Browse and select the firmware file from your computer's file system.
Planned schedule	At a specific date: Deselect the check box Immediately Enter the exact start time in the format: YYYY-MM-DD HH:mm Immediately: Select the check box next to Immediately (default) the firmware update is started when you click on the Set button.
Confirmed schedule	Shows Immediately or the date for the next planned firmware update.

Automatic Firmware update: From software 2.57.0 or higher, we have the option to automatic search online for new Firmware.

 Supported by the N610 /N670/N870 /N870E 	Automatic update	New version available: V999.57.0 (V999.57.0+build.2a99776)		
/Embedded Integrator, not supported		Check for update		
 Device will search at the 		↑ Update ● Release notes		
Gigaset	server (http://profile.gigaset.net.device/%DVID/lat	est) for the latest firmware		

- firmware update server (http://profile.gigaset.net.device/%DVID/latest) for the latest firmware
 In this directory there should be one firmware file with the name: ipdect.update.bin

- The option "Release Notes" will open the wiki page: Release notes N610/N670/N870/N870E
 Press the button "Check for update", the device will do a partial Content download (± 3000 bytes) to check if:

 Firmware is older
 Firmware is the same

 - Firmware is newer ("Update" button will become active, press to start upgrade)

Auto-provisioning						
Parameter	Value	Description				
SystemSettings.global.FirmwareCheckURL	Firmware URL	URL to the firmware server				
SystemSettings.global.ReleaseNotesURL	Release notes URL	URL to the Release notes				