

FAQ - Auto provisioning: Interval and time window

Valid for:	N610	N670	N870	N870E	Embedded Integrator	Virtual Integrator
------------	------	------	------	-------	---------------------	--------------------

Valid for N610 / N670 / N870 / N870E.

The device will contact once per day the provisioning server, you can change the frequency.

From software 2.32 or higher you can also change the time span when provisioning will be executed.

 Please do not use a time < 1800 seconds.

Auto-provisioning

Parameter	Description
Provisioning.global.Period	0 (Default) = Check between 1 and 4 AM > 0 = Time in seconds
New in 2.32 or higher	
Provisioning.global.PeriodStart	Time when provisioning time span will be started
Provisioning.global.PeriodEnd	Time when provisioning time span will be ended

Example:

```
<?xml version="1.0" encoding="UTF-8"?>
<provisioning version="1.1" productID="e2">

  <nvm>

    <!-- It's the time span when provisioning will be executed
    When period is set to 0, the PeriodStart and PeriodEnd time will be used
    When value is different that 0, then the duration is in seconds -->

    <param name="Provisioning.global.Period" value="0" />

    <!-- Time when provisioning time span will be started -->
    <param name="Provisioning.global.PeriodStart" value="14:00" />

    <!-- Time when provisioning time span will be ended -->
    <param name="Provisioning.global.PeriodEnd" value="18:30" />

  </nvm>

</provisioning>
```