

FAQ - Switch from Small to Medium system

Valid for:	N640	N670	N870	N870E	Embedded Integrator	Virtual Integrator
------------	------	------	------	-------	---------------------	--------------------

Introduction

Here we explain how you change a small size system to a medium size system.

	Small sized system	Medium sized system	
DECT Integrator & DECT Manager	DECT Base is activated	DECT Base is deactivated	By deactivating the DECT base on the Integrator/manager you switch from small to medium.
DECT Bases	Maximum: 10 DECT base Integrator/Manager + 9 extra DECT Base only	Maximum: 60	
DECT handsets	Maximum: 50	Maximum: 250	
Parallel calls	Maximum: 10 (< 2.32) 20 (>= 2.32)	Maximum: 60	

As mentioned above you need to disable the DECT base on the Integrator/Manager to switch from Small to Medium.

This can be done in 2 ways.

1. [Edit the DECT manager and change the Capacity from Small to Medium.](#)
2. [Deactivate the Base station.](#)

If you try to connect the 11th base-station to a Small system, you will get the message: "**System limit has been exceeded**"

Important

If you switch from small to medium then:

- You cannot use the DECT base from the manager anymore, an extra DECT base is then needed to cover this.
- If you change the device role from Small to Medium and the local base station was synchronization level 1, it will be deactivated. Base stations synchronization needs to be adjusted in order to re-synchronize the system. So first change the levels and then disable the base.