

FAQ - Replace header

Valid for:	N610	N670	N870	N870E	Embedded Integrator	Virtual Integrator
------------	------	------	------	-------	---------------------	--------------------

Introduction

The replaces header is used in SIP call control applications. The Replaces header is used to logically replace an existing SIP dialog with a new SIP dialog. This can be used to enable a variety of features, for example: "Attended Transfer" and "Call Pickup".

For some platforms, the behavior needs to be changed. We have seen the following issues where the setting needed to be changed.

- Unattended transfer, the call is signaled as 2^e incoming call.
- Group call pick-up

Auto-provisioning

This feature can be disabled/enabled only via auto-provisioning. Software 2.23 or higher is needed.

Parameter	Description
DmGlobal.0.AcceptReplaceInEarlyState	0 = Disable (Default) 1 = Enable
<code><param name="DmGlobal.0.AcceptReplaceInEarlyState" value="1"/></code>	