

FAQ Maxwell - DTMF

Introduction

The Maxwell's supports the following DTMF options.

- Automatic negotiation of DTMF transmission YES/NO
- Audio
- RFC4733
- Audio + RFC4733
- SIP INFO
- RFC 4733 + SIP Info
- Audio + RFC4733 + SIP Info

Valid for Maxwell			
Basic	2	3	4

Web-interface

In the web-interface go to: **SETTINGS - Telephony - Connections - DTMF transmission**

DTMF Transmission

Audio + RFC 4733

Automatic negotiation of DTMF transmission

Yes No

Auto provisioning

Provisioning parameter	Value
SIP.Account.x.DTMFTransmission Maxwell B/2/3: x = 0 - 3 Maxwell 4: x = 0 - 5	0 = Audio 1 = RFC 4733 2 = Audio + RFC 4733 3 = SIP info 4 = RFC 4733 + SIP info 5 = Audio + RFC 4733 + SIP info
IP.Account.x.AutoNegOfDTMFTransmission Maxwell B/2/3: x = 0 - 3 Maxwell 4: x = 0 - 5	0 = Automatic DTMF transmission disabled 1 = Automatic DTMF transmission enabled
Example: <code><param name="SIP.Account.0.DTMFTransmission" value="1"/></code>	