## FAQ Maxwell - Message Notification

Introduction					
Open the web-interface of the Maxwell 3 / Basic and go to: Settings - Desk Phone - Message Notification					
			Gigaset <sup>well</sup>		
SETTINGS 🗧 STATUS			<b>1</b> 4		
Network >	Visual Call Notification (LED)			1	
Telephony >	Voicemail Messages				
Online Directories	Missed Calls				
Online Services >					
Desk Phone 👻	SIP Notification				
Main Menu	Show SIP messages on				
Ringtones	display				
Display	Back key				
Pictures					
Message Notification					

Settings					
Setting	Description				
Visual Call Not	/isual Call Notification (LED)				
Voicemail Messages	When enabled, the Maxwell will show a blinking MWI LED and the Voicemail icon Image: Constraint of the top bar when there are NEW   Image: Constraint of the top bar when there are NEW Image: Constraint of the top bar when there are NEW   Image: Constraint of the top bar when there are NEW Image: Constraint of the top bar when there are NEW   Image: Constraint of the top bar when there are NEW Image: Constraint of the top bar when there are NEW   Image: Constraint of the top bar when there are new Voicemail messages. Image: Constraint of top bar when there are new Voicemail messages.   Image: Constraint of top bar when there are new Voicemail messages. Image: Constraint of top bar when there are new Voicemail messages.   Image: Constraint of top bar when there are new Voicemail messages. Image: Constraint of top bar when there are new Voicemail messages.   Image: Constraint of top bar when there are new Voicemail messages. Image: Constraint of top bar when there are new Voicemail messages.   Image: Constraint of top bar when there are new Voicemail messages. Image: Constraint of top bar when there are new Voicemail messages.   Image: Constraint of top bar when there are new Voicemail messages. Image: Constraint of top bar when there are new Voicemail messages.   Image: Constraint of top bar when there are new Voicemail messages. Image: Constraint of top bar when there are new Voicemail messages.   Image: Constor top bar when there are new Voicemail messages. I				
Missed Calls	When enabled, the Maxwell will show a blinking MWI LED and the Missed call icon on the top bar when there are NEW voicemail messages. See the above example. When disabled, the MWI LED and Missed call icon will not be shown when there are new Voicemail messages.				
SIP Notification					
	See this wiki article FAQ Maxwell - Show SIP message on the Display.				

## Auto provisioning

Parameter	Description
Telephony.VoiceMail.VoicemailMessages.Active	0 = Disabled 1 = Enabled
Calls.Missed.Notification.Active	0 = Disabled 1 = Enabled
PhoneUI.SIP.ShowSIPMessagesOnDisplay	0 = Disabled 1 = Enabled
PhoneUI.SIP.ClearSIPMessageWithBackKey	0 = Disabled 1 = Enabled