

# FAQ Maxwell - Message Notification

Introduction

Open the web-interface of the Maxwell 3 / Basic and go to: **Settings - Desk Phone - Message Notification**

SETTINGS

STATUS

Network

Telephony

Online Directories

Online Services

Desk Phone

Main Menu

Ringtones

Display

Pictures

Message Notification

Gigaset Maxwell

4

Visual Call Notification (LED)

Voicemail Messages





Missed Calls

SIP Notification

Show SIP messages on display

Clear SIP message with Back key

## Settings

Setting	Description
<b>Visual Call Notification (LED)</b>	
Voicemail Messages	<p>When enabled, the Maxwell will show a blinking MWI LED and the Voicemail icon  on the top bar when there are NEW voicemail messages.</p>  <p>When disabled, the MWI LED and Voicemail icon will not be shown when there are new Voicemail messages.</p> 
Missed Calls	<p>When enabled, the Maxwell will show a blinking MWI LED and the Missed call icon  on the top bar when there are NEW voicemail messages.</p> <p>See the above example.</p> <p>When disabled, the MWI LED and Missed call icon will not be shown when there are new Voicemail messages.</p>
<b>SIP Notification</b>	
	See this wiki article <a href="#">FAQ Maxwell - Show SIP message on the Display</a> .

## Auto provisioning

Parameter	Description
Telephony.VoiceMail.VoicemailMessages.Active	0 = Disabled 1 = Enabled
Calls.Missed.Notification.Active	0 = Disabled 1 = Enabled
PhoneUI.SIP.ShowSIPMessagesOnDisplay	0 = Disabled 1 = Enabled
PhoneUI.SIP.ClearSIPMessageWithBackKey	0 = Disabled 1 = Enabled