

# FAQ Maxwell - Voicemail Subscription

Introduction

Normally our phones will subscribe to the voicemail service to light its red Message Waiting Indicator when a new message is available and turn off when all messages have been read.

Some platforms do not want that the subscribe to be sent, and will automatically inform the device if a new message is available.

From software 2.15.9 we have implemented the option to switch off the Message Waiting Subscription via provisioning.

Valid for Maxwell

Basic	2	3	4
-------	---	---	---

Auto provisioning

Parameter	Min. Value	Max. Value	Description.
Calls.Missed.Subscribe.Active	0	1	0 = inactive - Subscribe for MWI is <b>not</b> sent to server, MWI displayed correctly 1 = active (default) - Subscribe for MWI is sent to server, MWI displayed correctly
Example: <code>&lt;param name="Calls.Missed.Subscribe.Active" value="0" /&gt;</code>			