

FAQ Maxwell - RTP

Introduction

In the web-interface go to: **Settings - Telephony - VoIP - Audio - RTP**

RTP port

the RTP port used for RTP stream

Use random RTP ports.

When enabled, Maxwell will use random port from range <RTP.Port> - <RTP.Port+50> for RTP stream

Valid for Maxwell			
Basic	2	3	4

RTP

RTP port

5004

Use random RTP ports

Yes

No

Use symmetric port

Yes

No

Use RTCP

Yes

No

Auto provisioning

Parameter	Description
SIP.RTP.Port	1 - 65535: 5004 (Default)
SIP.RTP.UseRandomPorts	0 = Do not use random RTP ports 1 = Use random port from range <RTP.Port> - <RTP.Port+50> for RTP stream
SIP.RTP.UseSymmetricPorts	0 = Disabled 1 = Enabled
SIP.RTP.UseRTCP	0 = Disabled 1 = Enabled
Example: <param name="SIP.RTP.Port" value="5004"/> <param name="SIP.RTP.UseRandomPorts" value="1"/>	