

FAQ - License: Master DECT manager

Master DECT manager

Only needed when the Virtual Integrator is used.

As the license is based on the N870 MAC address and the Virtual Integrator is not an N870 device, you need to define the Master DECT manager.

In the Integrator web-interface go to **SETTINGS - DECT manager - Administration - Global settings**

Select the Master DECT Manager.

The screenshot shows the Gigaset N870 VI PRO web interface. The left sidebar contains a menu with the following items: Network, DECT Manager (selected), Administration, Synchronisation, Base stations, Provider or PBX profiles, Mobile devices, Telephony, Online directories, Online services, and System. The main content area is titled 'DECT Managers' and features a search bar, a 'Search in' dropdown, and a 'Match whole word' checkbox. Below these is a table with columns: DM Id, DM Name, RPN Group, IP address, Connection status, Capacity, Bases, and Handsets. The table contains two entries: dm1 (RPN Group 0, IP 192.168.178.197) and dm2 (RPN Group 1, IP 192.168.178.196). Both are connected and have a capacity of 'Small'. A 'View' dropdown shows '10 entries'. At the bottom, there are '+ Add' and 'Delete' buttons, and a 'Global settings' section with a dropdown menu set to 'dm1'.

DM Id	DM Name	RPN Group	IP address	Connection status	Capacity	Bases	Handsets
dm1	dm1	0	192.168.178.197	Connected	Small	1	0
dm2	dm2	1	192.168.178.196	Connected	Small	1	0



The Master DECT manager need to be installed, connected and working as the real MAC address of this device is retrieved.