

FAQ Repeater - Reset

Introduction

If registration was not successful or re-registration has to be carried out for another reason, you can reset the repeater as follows.

- Press repeater button (LEFT LED flashes slowly)
- Release repeater button once the left LED flashes quickly (after approximately 10 seconds)

The repeater is ready for registration once again.