

FAQ - Blind Transfer

Valid for:	N610	N670	N870	N870E	Embedded Integrator	Virtual Integrator
------------	------	------	------	-------	---------------------	--------------------

Introduction

Blind transfer calls, can be activated/de-activated via auto-provisioning.

Auto-provisioning

Parameter	Description
SipProvider.<0-9>.BlindTransfer	0 = Disabled
	1 = Enabled (Default)

Example:

```
<?xml version="1.0" encoding="UTF-8"?>
<settings version="1.0" productID="e2">
```

```
<param name="SipProvider.0.BlindTransfer" value="0"/>
```

```
</settings>
```