

# Factory reset corded phones

## Reset to Factory default.

You can reset the DE310/DE410/DE700/DE900IP PRO to factory default using the following procedures:

### WEB-interface:

1. Open the WEB-GUI from the device.
2. Go to "Settings" - "System" - "Reboot and Reset"

3. Click on: The image shows a dark gray dialog box with the text "Start factory reset" on the left and an "OK" button on the right.
4. The device will be set to factory default excluding "language" and "time zone".

### Phone-interface:

1. Go to "Menu" - "Settings" - "Reset"
2. Enter the Admin Password: standard is "admin"
3. Press the key "Save"
4. Reset settings to default? Press the key "Yes"
5. The device will be set to factory default excluding "language" and "time zone".

### Using the reset button at the bottom of the device

1. At the bottom of the device, there is a reset button.
2. Press the reset button using example a paper-clip and press the key for 5 seconds or more.
3. The device will be reset to the factory default setting including "language" and "time zone".

- [Reset to Factory default.](#)
  - [WEB-interface:](#)
  - [Phone-interface:](#)
  - [Using the reset button at the bottom of the device](#)