

FAQ - Auto provisioning: Hide SIP Passwords

Valid for: N610 N670 N870 N870E Embedded Integrator Virtual Integrator

Valid for N610 / N670 / N870 / N870E.

From software 2.36 we have added the option to hide the SIP passwords via auto-provisioning.

When this feature is enabled it will:

- Prevents sending passwords to web-browser
- Prevents exporting passwords during handsets export
- Prevents importing passwords during handsets import

Auto-provisioning

Parameter	Value
SystemSettings.global.HideSipAccountsPasswords	0 = Passwords are visible (default) 1 = Passwords are hidden
Example: <pre><?xml version="1.0" encoding="UTF-8"?> <provisioning version="1.1" productID="e2"> <nvm> <param name="SystemSettings.global.HideSipAccountsPasswords" value="1"/> </nvm> </provisioning></pre>	



We suggest when you use this feature to also [hide the provisioning page](#) to avoid that the SIP passwords can be enabled again via provisioning.