

FAQ - Auto provisioning: How to configure the provisioning URL.

Valid for: N610 N670 N870 N870E Embedded Integrator Virtual Integrator

Valid for N610 / N670 / N870 / N870E.

The provisioning server URL can be provided via the following Methods:

1. [DHCP option 66](#)
2. [DHCP option 114](#)
3. [SIP Multicast](#)
4. [Gigaset Redirect server](#)
5. Manually via web-interface, go to: **SETTINGS - System - Provisioning and configuration: "Provisioning server"**

