

FAQ - SIP endpoint identifier (EPID)

Valid for: N610 N670 N870 N870E Embedded Integrator Virtual Integrator

Introduction

Provisioning Parameter	Value
SipProvider.<id>. InstanceCoding	0 = Disabled
	<p>1 = Adds an 'epid' tag to the 'From' header</p> <p>https://wiki.unify.com/images/3/3e/OpenScape_Voice_V6%2C_SIP_to_Phones_Interface_Manual.pdf</p> <p>5.14.6 epid parameter The client shall use the MAC address of the phone as the EPID as this uniquely identifies the device and is persistent over a reboot of the phone. The format for the epid will be an 8 character ASCII string encoded as follows where "XX" is a two character string identifying the manufacturer of the device, and "SC" is reserved for use by Siemens devices. The client shall include the epid in the From: header of every request generated by the phone (e.g. REGISTER, INVITE, SUBSCRIBE etc.) for non-keyset lines and for keyset primary lines, i.e. epid shall not be included for calls from keyset secondary lines. Example: From:15615299502<sip:15615299502@10.232.3.110:5061>;tag=0470c66cd6;epid=SCBCC441</p> <p>Example: From: <sip:1014@192.168.178.210>;tag=dd6d1a91-800f-4037-ac55-322665c29b7b;epid=9e74a599</p>
	<p>2 = Add '+sip.instance' to 'Contact' header</p> <p>(according to https://datatracker.ietf.org/doc/html/rfc5626#section-4.1) that uniquely identifies the device.</p> <p>Software version 2.46.0 or higher is needed.</p> <p>Example: Contact: <sip:1020@192.168.178.197:5060>;reg-id=1;+sip.instance="<urn:uuid:00000000-0000-1000-8000-589EC62904F3>"</p>