

FAQ - N-Way conference

Valid for:	N610	N670	N870	N870E	Embedded Integrator	Virtual Integrator
------------	------	------	------	-------	---------------------	--------------------

Valid for N610 / N670 / N870 / N870E. Software 2.52 or higher is needed.

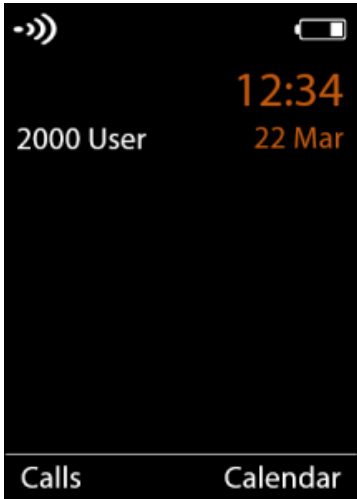 

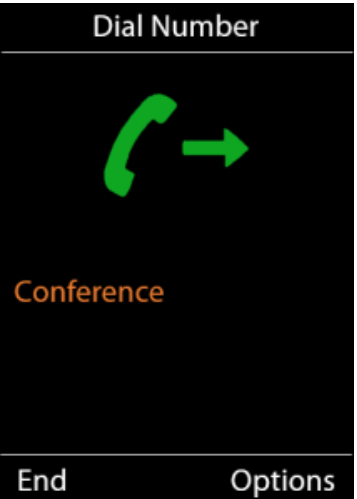 
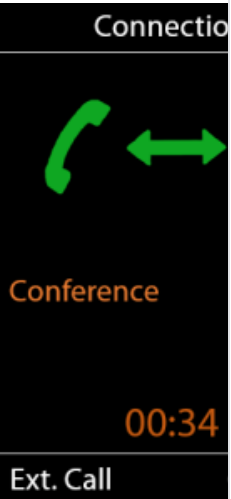 
With this newly added feature, you can setup a conference using the N-way feature of Broadworks.
It offers the possibility to initiate large conferences on the Broadworks platform, straight from a Gigaset professional handset.

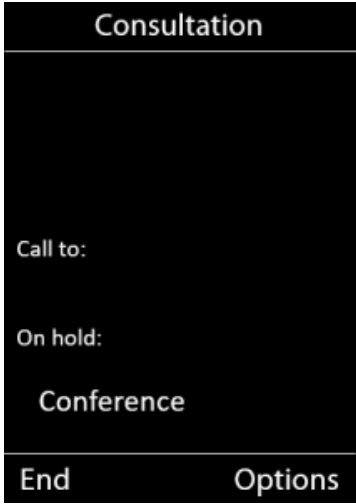 
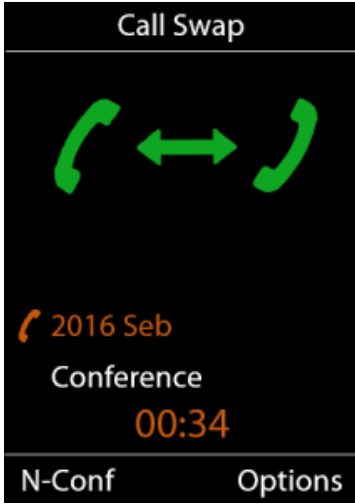 
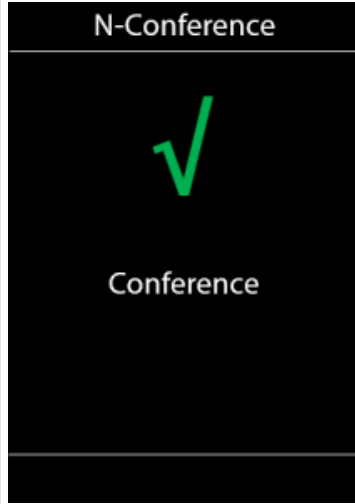 
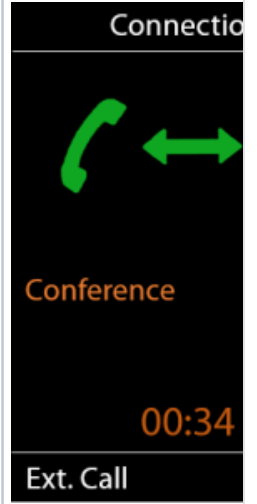 
For conferencing using the N610/N670/N870/N870E IP PRO , there are 3 options:

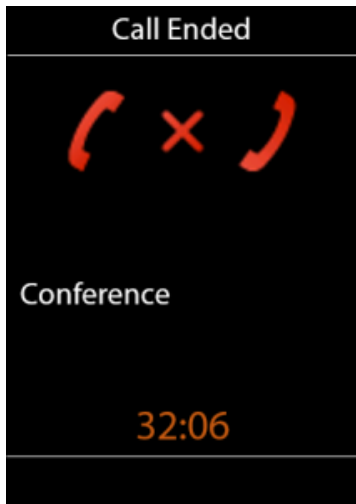 
1.	Local, Nx70 is conference host.	As this feature is available since the introduction, please refer to the manual for more details on usage. When using the local conference feature, N-way cannot be started. If you need to start a conference with more than 3 participants, please use option 2 or 3.
2.	Start a conference, Broadworks is the conference host.	Starting a N-Way conference from an idle handset. You can find the "how to use" instructions below.
3.	Initiate a conference while on call, Broadworks is the conference host.	Starting a N-way conference while there is an active call. You can find the "how to use" instructions below.

Enable N-way.
You can find the "how to enable" instructions below.

 




2. Start a conference, Broadworks is the conference host

Step 1	Step 2	Step 3	Step 4
Start - Idle screen	Go to XSI phonebook list and select "Conference" Press "OK"	A call is setup towards the N-way conference box	Connected to the N-way conference box. To add a participant press "Ext. Call" key
			

Step 5	Step 6	Step 7	Step 8
Enter the number of the participant or use the phone book to select a participant.	To add the participant to the conference, press the "N-Conf" key	When the participant is successfully added, this display is shown.	N-way conference started To add more participants repeat the procedure starting at Step 4
			

End Conference
When the initiator ends the call to the N-Way Conference box, the conference is ended. All participants will be disconnected. Press red disconnect key


3. Initiate a conference while on call, Broadworks is the conference host

Step 1	Step 2	Step 3	Step 4
Handset is on call and you want to start a conference using N-way Press the Ext. Call key	To start connecting to N-Way conference box Press the Phone book key	Select: Online Directory Press OK key	Select: Conference Press OK key
<div>Connection</div>  <p>2016 Seb</p> <p>01:58</p> <p>Ext. Call Options</p>	<div>Consultation</div> <p>Call to:</p> <p>On hold:</p> <p>2016 Seb</p> <p>End Options</p>	<div>Contacts</div> <p>Directory</p> <p>Online Directory</p> <p>Back OK</p>	<div>Online Direct</div> <p>Conference</p> <p>Enterprise</p> <p>Enterprise Comm</p> <p>Group</p> <p>Group Common</p> <p>Personal</p> <p>Back</p>
Step 5	Step 6	Step 7	Step 8
Dialling to N-Way Conference box	Connection to N-Way box success Press N-Conf key to start the conference	N-Way conference setup success	N-way conference started. To add more participants repeat the procedure starting at Step 4 of option 2.
<div>Consultation</div>  <p>Call to: Conference</p> <p>On hold:</p> <p>2016 Seb</p> <p><C</p>	<div>Call Swap</div>  <p>Conference</p> <p>2016 Seb</p> <p>02:28</p> <p>N-Conf Options</p>	<div>N-Conference</div>  <p>Back</p>	<div>Connectio</div>  <p>Conference</p> <p>02:38</p> <p>Ext. Call</p>

End Conference

When the initiator ends the call to the N-Way Conference box, the conference is ended. All participants will be disconnected.
Press red disconnect key

Call Ended



Conference

32:06

4. Auto-provisioning

The N-way function can only be enabled via auto provisioning.

These two parameters can be added to the provisioning template/file on Broadworks or can be uploaded as a file via the WebGui.

For more information about uploading a provisioning file via the WebGui, [click here](#).

Parameter	
SipProvider.0.ServerConferenceMode	<ul style="list-style-type: none">• 0: off (default)• 1: Broadsoft
SipProvider.0.ServerConferenceURI	conference@<yourDomain>
Example: <pre><?xml version="1.0" encoding="UTF-8"?> <provisioning version="1.1" productID="e2"> <nvm> <param name="SipProvider.0.ServerConferenceMode" value="1"/> <param name="SipProvider.0.ServerConferenceURI" value=" " /> </nvm> </provisioning></pre>	

Download the XML file via button below.

Note: you have to enter your Conference URI in the XML file before uploading it into the system.

Download