

FAQ Fusion - Doorstation

Introduction

The Fusion supports SIP doorstations with video-capability.

Support

Following figures are supported by the Fusion:

Resolution

- 640x480
- other resolutions will be re-sized to fit the screen of the Fusion

Stream-type and URL

- MJPG
- The URL to the stream must end on *.jpeg, *.jpg or *.png

Frames per second

- 2 - 15 fps

DTMF-type

- RFC4733

Web-interface

In the web-interface you have to add a SIP-device in order to enable the doorstation support:

SIP Device

Please enter your desired device name and select the internal number. The SIP username and password are required for the external SIP device for registration. If this SIP device is a door intercom, you can enable the support for such devices below.

DEVICE NAME: My Doorstation

INTERNAL PHONE NUMBER / USERNAME: 20

SIP AUTHENTICATION NAME: Doorstation20

AUTHENTICATION PASSWORD: *****

ENABLE DOORSTATION: ☒

Next

1. At the bottom of the settings, just enable the "Enable doorstation" option. On the next page the doorstation settings can be configured.

Doorstation

Please enter your desired device name and select the internal number. The SIP username and password are required for the external SIP device for registration. If this SIP device is a door intercom, you can enable the support for such devices below.

DTMF CODE (OPEN DOOR): 12#

USERNAME: stream-username

PASSWORD: *****

CAMERA (URL): http://my-URL-to-stream.jpg

PICTURE REFRESH TIME: 10fps

Back Next

2. Here the settings for the doorstation can be configured.
 - The DTMF is transmitted via RFC4733 protocol. This can't be changed.
 - If the access to the stream is protected with a username/password, these can be entered here
 - The URL to the stream needs to end currently on *.jpg
 - At the end the frames per seconds can be selected. The minimum is 2fps, the maximum is 15fps.