
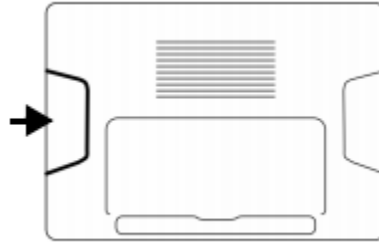


Maxwell 10 SD card

In order to extend the internal memory and store personal data, images, videos or music, you can insert a microSD card (not included) into your phone.

Open the left cover on the back side of the device **1**.

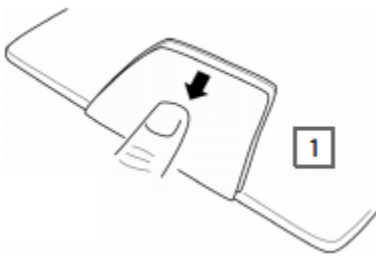




Insert fingernail into the slit on the card slot and pull card slot forwards **2**.

Flip card slot upwards **3**.

Insert card **4**.

Flip card slot downward **5**.

Push backwards until it clicks into place **6**.

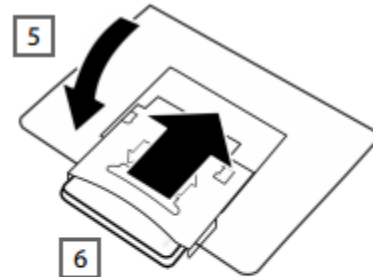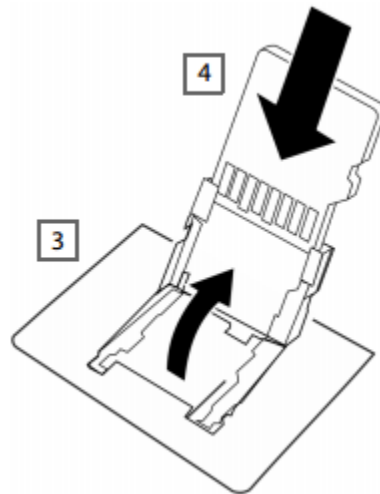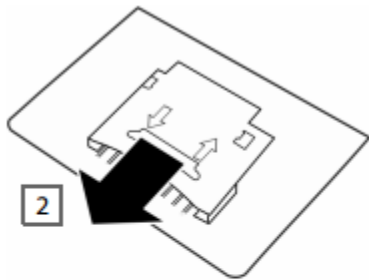

Close cover **7**.

