Maxwell 10 Syslogging

Introduction

In case of trouble shooting and bug hunting a Syslog server might be a very valuable tool

Install Syslog Server on a local Windows computer

If there is no syslog server available in your network, it is easy to setup a simple server on a Microsoft Windows computer in your network.

- Download Sylog Receiver from Secure.IP GmbH or use other syslog server.
- unzip MegaLogSyslogTestReceiverV2.zip into the desired directory
- execute "MegaLog Syslog Test Receiver V2.exe"

Syslog server setup:

• bind the public IP address of the windows machine to the server



• select the folder and enter the name of the logfile




start server



everything is already done! **

Maxwell syslog client setup

- login to the Maxwell web interface and navigate to the System / System-Log webpage
- enter the IP address of your syslog server
- activate syslog
- select the events you want to be syslogd (in case you don't know which one to select, select all)

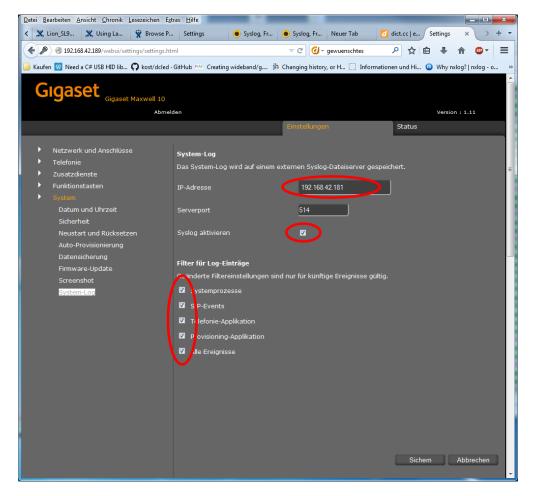

- press save button. Ready!
- Introduction
- Install Syslog Server on a local Windows computer
- Syslog server setup :
- Maxwell syslog client setup