

# Maxwell 10 DECT handset reset procedure

To reset the DECT handset to factory default you have to follow the following steps:

- press parallel (4sec) send key and both +/- volume buttons
- press parallel (4sec) "-" volume button and END key
- Handset is deregistered and automatically starts registration procedure.