

# FAQ T640 T440 IP address


## Introduction

Your device is factory configured as a DHCP server so that it can provide PCs on your LAN that have no IP configuration with all the information required for a connection.

## Default IP address

The system has from the factory the default IP address:

Description	Default value
IP address of your gateway	192.168.0.50
Netmask of your gateway	255.255.255.0

 **Info**

If you already run a DHCP server on your LAN, it is recommended that you configure the device on a separate PC that is not connected to your LAN. Connect this PC alone to your system so that you have your own network to do the configuration.

Once you have completed the configuration of your device, you can test the connection in your LAN.

Test the connection from any device in the local network to your device. In the Windows Start menu, click Run and enter ping followed by a space and then the IP address of your device (e.g. 192.168.0.50). A window appears with the response "Reply from ...".

## Default DHCP server

Description	Default value	
DHCP server	Enabled	web-interface: Administration - System - Network - DHCP server
DHCP address range	192.168.0.100 - 192.168.0.150	<div><div>IP configuration</div><div>DHCP server</div><div>Email delivery</div></div> <div>Changes can result in a reboot.</div> <div>DHCP Server</div> <div><div>Enable DHCP Server</div><div><input type="checkbox"/> OFF</div></div> <div><div>Address range start</div><div>192</div><div>.</div><div>168</div><div>.</div><div>0</div><div>.</div><div>100</div></div> <div><div>Address range end</div><div>192</div><div>.</div><div>168</div><div>.</div><div>0</div><div>.</div><div>150</div></div>

## Change IP address

Description	
-------------	--

You can change the IP address of the system.

Adjust your Gateway, DNS and NTP settings according your own network setup.

web-interface: Administration - System - Network - IP configuration

IP configuration

DHCP server

Email delivery

Changes can result in a reboot.

IP Configuration

IP address	192	.	168	.	178	.	164
Netmask	255	.	255	.	255	.	0
Default gateway	192	.	168	.	178	.	1
DNS Server	192	.	168	.	178	.	1
DNS Server (optional)		.		.		.	
NTP Server	192	.	168	.	178	.	120
NTP Server (optional)		.		.		.	

- [Introduction](#)
- [Default IP address](#)
- [Default DHCP server](#)
- [Change IP address](#)