Provisioning started manually

Introduction

Once a Gigaset device is auto provisioned, you can trigger the device to download the configuration file again without a restart / reset. For this you need to use the web-interface of the device.

N510 IP PRO	
In the web-interface go to: Setti	ngs - Telephony - Connections and press "Update profile"
Provider or PBX Profile	
	A profile contains all relevant settings for your provider or phone system (PBX).
Automatic check for profile updates:	O Yes 💿 No
	Update profile

N720 IP PRO

In the web-interface go to: Settings - Management - Miscellaneous and press "Start auto configuration" or "Update profile" this depends on the settings of the device.

Gigaset Gigaset N720 DM PR	RO		
			Log off
	Settings	Status	
 Network and Connections 	Change Password of DECT Man	ager	?
 VoIP Providers 	New password		
Mobile Devices			
► Telephony	LED Signalling on Base Station	5	
 Info Services 	Activate signalling of base		
 Online Directories 	station status		
Date and Time	Auto Configuration		
Local Settings	If your provider has issued you wil	th a configuration code, you can use	
	it to start the automatic connection	n configuration here.	
Save and Restore	Auto configuration code	444	
Reboot		Start auto configuration	
System Log			
Firmware Update	Provider or PBX Profile		
	A profile contains all relevant settin system (PBX).	ngs for your provider or phone	
	Automatic check and update of new profile data	● Yes ● No	
		Update profile	

Maxwell Basic, 2 and 3

In the web-interface go to: Settings - System - Provisioning and Configuration and press "Start Auto Configuration"

			Gigase
🔅 SETTINGS	STATUS		
Network	>	Auto Provisioning	
Telephony	>	Provisioning Server	http://profile.gigaset.net/devic
Online Directories	>		
Online Services	>	Auto Configuration	
Desk Phone	>		${oldsymbol {\cal C}}$ Start Auto Configuration
Web Configurator	>		
Phone Web Server			
Provisioning and Configura			

Maxwell 10

In the web-interface go to: Settings - System and press "Autoprovisioning"

The URL should point to your provisioning server.

Click on Start

Gigaset Maxwell 10						
	Logout					
			Settings	Status		
•	Network and Connections Telephony	Auto Provisioning	cally.			
•	Services Function Keys	Start auto provisioning	cuny.			
	System Date and Time Security		http://192.168.178.164/gigas set custom url here	Start		
	Reboot and Reset Auto Provisioning					