


# Provisioning started manually

## Introduction

Once a Gigaset device is auto provisioned, you can trigger the device to download the configuration file again without a restart / reset. For this you need to use the web-interface of the device.

## N510 IP PRO

In the web-interface go to: **Settings - Telephony - Connections** and press "Update profile"

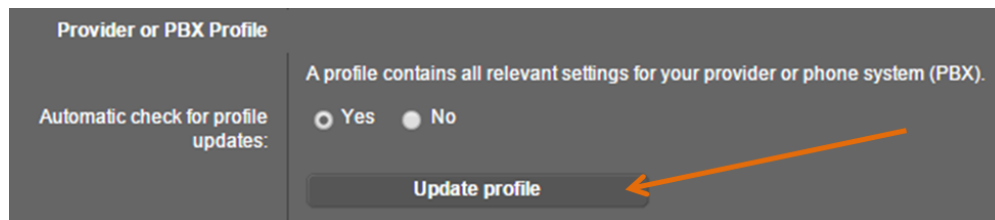

**Provider or PBX Profile**


A profile contains all relevant settings for your provider or phone system (PBX).

Automatic check for profile updates: ☒ Yes ☐ No

**Update profile**

## N720 IP PRO

In the web-interface go to: **Settings - Management - Miscellaneous** and press "Start auto configuration" or "Update profile" this depends on the settings of the device.

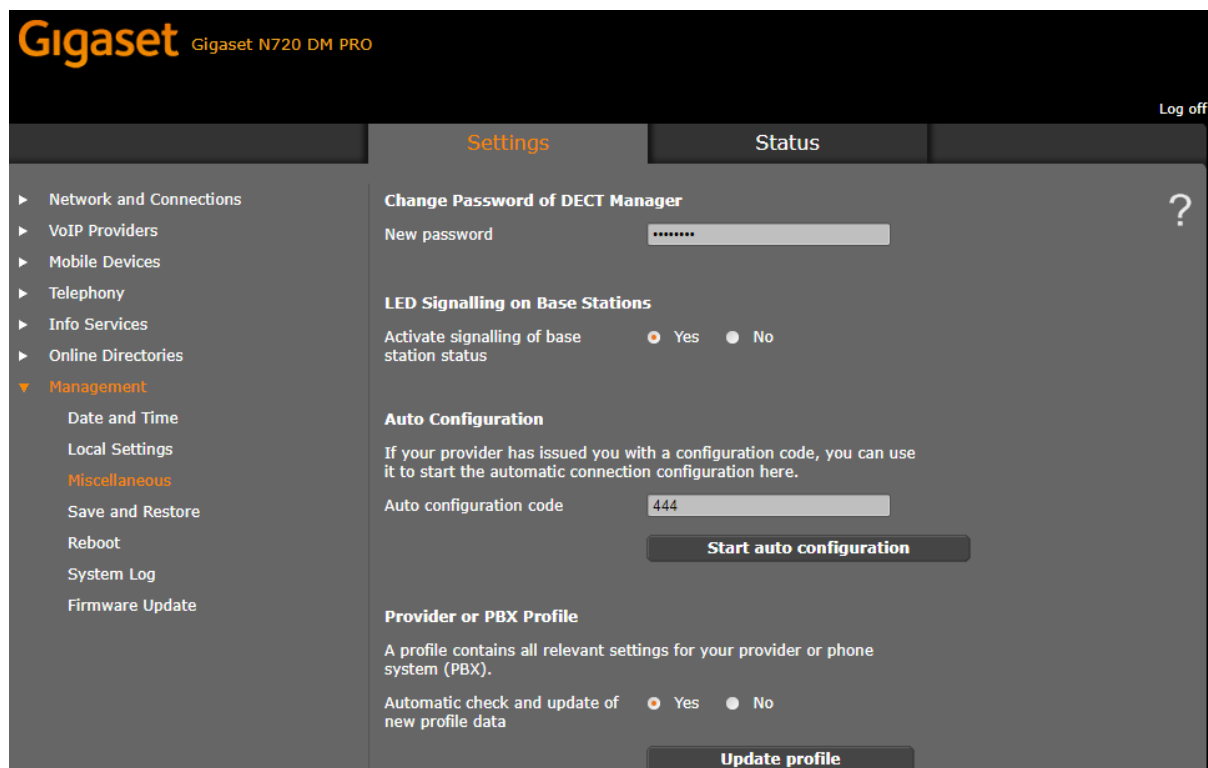

**Gigaset** Gigaset N720 DM PRO Log off

**Settings** Status

- ▶ Network and Connections
- ▶ VoIP Providers
- ▶ Mobile Devices
- ▶ Telephony
- ▶ Info Services
- ▶ Online Directories
- ▼ **Management**
  - Date and Time
  - Local Settings
  - Miscellaneous**
  - Save and Restore
  - Reboot
  - System Log
  - Firmware Update

**Change Password of DECT Manager**

New password

**LED Signalling on Base Stations**

Activate signalling of base station status ☒ Yes ☐ No

**Auto Configuration**

If your provider has issued you with a configuration code, you can use it to start the automatic connection configuration here.

Auto configuration code

**Start auto configuration**

**Provider or PBX Profile**


A profile contains all relevant settings for your provider or phone system (PBX).

Automatic check and update of new profile data ☒ Yes ☐ No

**Update profile**

### Maxwell Basic, 2 and 3

In the web-interface go to: **Settings - System - Provisioning and Configuration** and press **"Start Auto Configuration"**

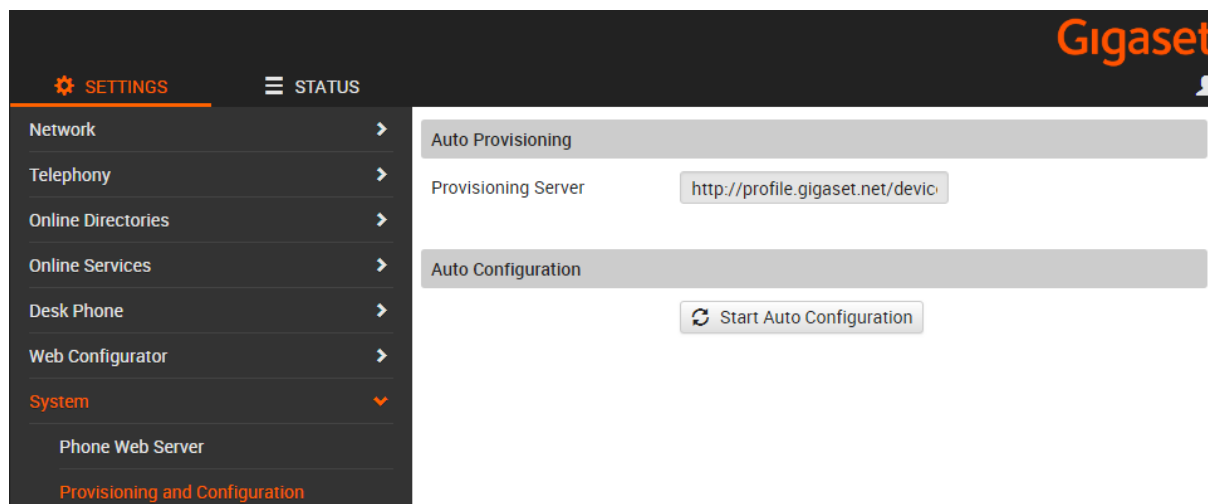

### Maxwell 10

In the web-interface go to: **Settings - System** and press **"Autoprovisioning"**

The URL should point to your provisioning server.

Click on **Start**

