
N720 - Syslog

Introduction

Via the syslog page, you can enable the device sending syslog messages towards your own syslog server.

How to do this

- 1. Open the web-interface of the N510: http:<IP address N720>
- 2. Login the N720, default Password = "admin"
- 3. Go to: Settings Management System log
- 4. Enter the IP address of your syslog server
- 5. Activate the syslog server
- 6. Select all syslog messages
- 7. Try to reproduce the error
- 8. Attach the syslog messages to the Ticket.

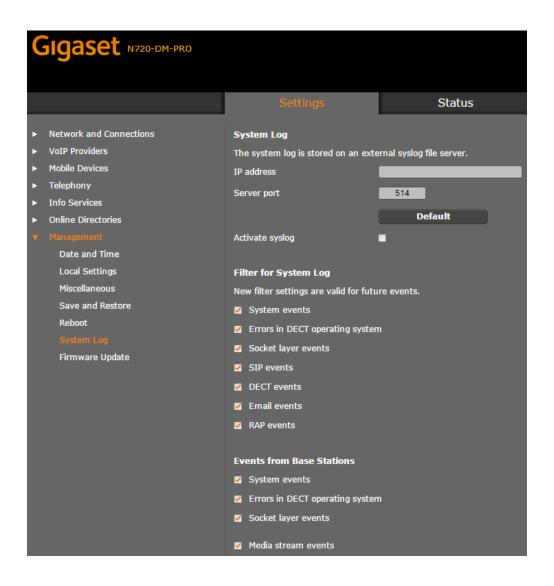

- Introduction
- How to do this