
Manually by the user via the device's Web UI

Introduction


Every device offers the possibility to enter the provisioning server URL manual via the web-interface of the device.

In the web-interface of the device go to: Settings - System - Firmware update - Data server


Open the web-interface and go to: SETTINGS - System - Provisioning and Configuration: Provisioning Server

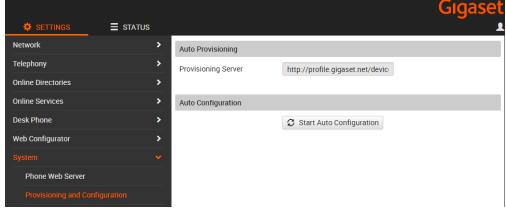


Open the web-interface and go to: SETTINGS - Management - Firmware Update: Data Server

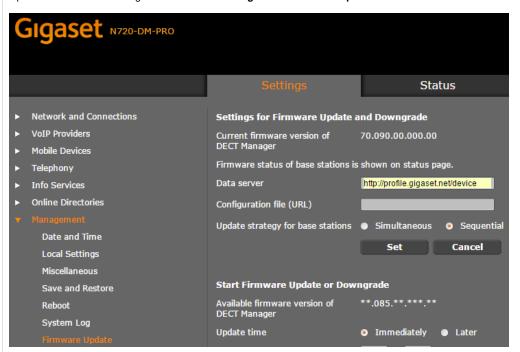

Open the web-interface and go to: SETTINGS - Management - Firmware Update: Data Server

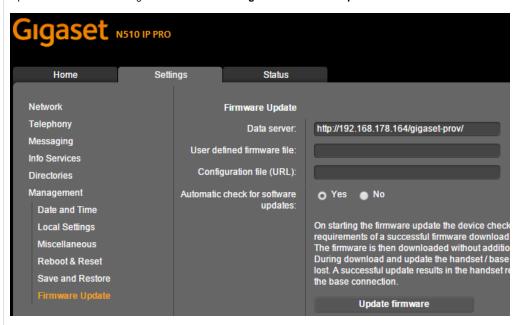

Open the web-interface and go to: SETTINGS - System- Firmware Update: Data Server

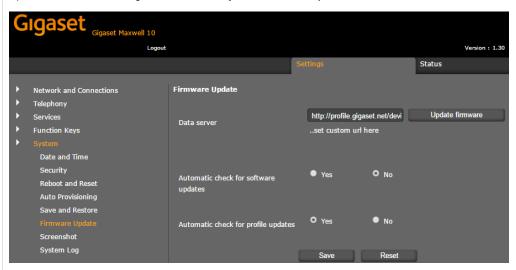

Open the web-interface and go to: SETTINGS - System - Firmware Update: Data Server

