


Maxwell 10 clear cache partition

Introduction

The system cache partition stores temporary system data. It allows the system to access apps more quickly and efficiently, but sometimes things get cluttered and outdated, so a cache clearing can help make the system run more smoothly. It's different from clearing individual app caches, and it won't lead to any loss of personal data or settings.

Wipe cache partition

During the Boot of the device hold the display key until a menu is displayed on the screen.

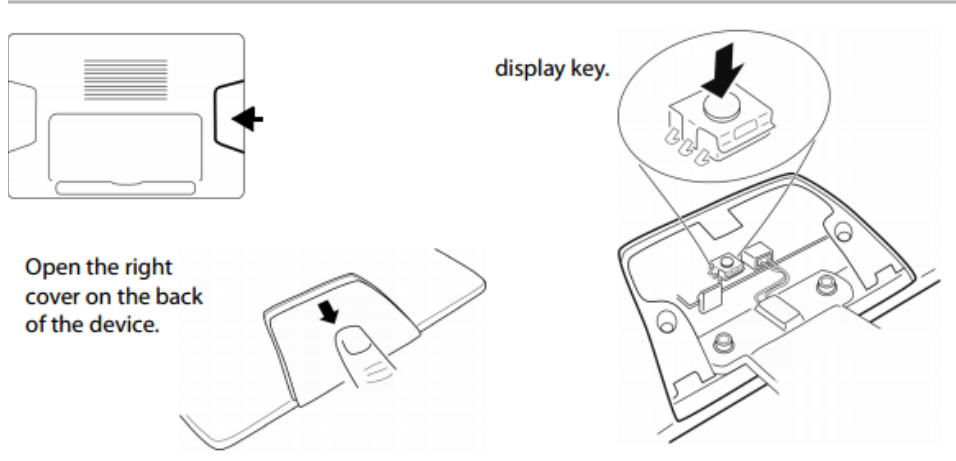

Press reset button until **Wipe cache partition** is highlighted.

Once **Wipe cache partition** is highlighted Press and hold reset button for 5 seconds to select.

The device will ask for confirmation, to proceed select **yes** by clocking on the reset button until **Yes** is highlighted and hold reset button for 5 seconds to select.

The cache partition will now be wiped and the system will reboot.

Bootng of the system will take a bit longer than usual when the wipe cache partition has been wiped.

- [Introduction](#)
- [Wipe cache partition](#)