FAQ Broadsoft XSI interface Maxwell 10

Introduction

The BroadWorks Xtended Service Platform (XSP) enables a variety of ancillary interfaces on BroadWorks. The primary interface exposed by the XSP is the Xtended Services Interface (Xsi) – which provides a rich set of Web 2.0 interfaces for integrating BroadWorks services with desktop clients as well as Internet based applications.

Feature is available for:

• Maxwell 10 software 1.2.0 or higher.

Supported features are:

- Call forward Always
- Call forward Busy
- Call forward No Answer
- Do Not Disturb (DND)



Important

If you change it on the platform via the web-interface then the platform will not inform the device changes are made, therefore the device will not show the actual setting on the display. If you always use the phone to change the settings then it will show the correct settings on the display of the phone.

Configuration

In the web-interface of the device go to: Settings - Network and Connections - Phone systems.

BLF list IP address (URI)

BLF list user

Select "Broadsoft" as Phone system



In the web-interface scroll down to Ext ended service platform PBX of service provider


Enter the information you have received from your provider.

- Server address
- Broadsoft Login-ID
- Broadsoft Password

Maxwell 10 auto provisioning parameters.

XML syntax:

URL>" class="string" /> <S UCI LOGIN ID value="<XSI username>" class="string" /> <S_UCI_PASSWORD value="<XSI Password>" class="string" />

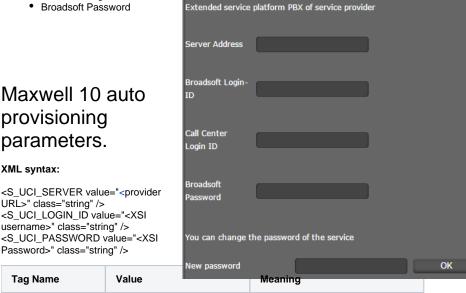

S_UCI_SERVER	URL must be a valid URL like:	The URL to the Broadsoft XSI server
	http:// <provider url=""></provider>	
S_UCI_LOGIN_ID	XSI username	Broadsoft web-interface username
S_UCI_PASSWORD	XSI Password	Broadsoft web-interface Password

- Introduction
 Configuration
 Maxwell 10 auto provisioning parameters.